REVISION HISTORY AG3E CHASSIS

MODEL

KV-DR34M69
KV-DR34M69
KV-DR34M89

PART NO.: 9-872-307-01

NO.	SUFFIX	DATE	SUPP / CORR	DESCRIPTION
1	-01	2002/5	--	1st. Issue

Self Diagnosis
Supported model

SERVICE MANUAL AG3E CHASSIS

MODEL	COMMANDER	DEST.	CHASSIS NO.	MODEL	COMMANDER	DEST.	CHASSIS NO.
KV-DR34M69	RM-991	GE	SCC-U84B-A				
KV-DR34M69	RM-991	Thailand	SCC-U82B-A				
KV-DR34M89	RM-991	ME	SCC-U43C-A				

TRINITRON ® COLOR TV

SONY ®

SPECIFICATIONS

				Note
Power requirements	110-240V AC, 50/60 Hz			KV-DR34M69(GE)/DR34M89
	220-240V AC, 50/60 Hz			KV-DR34M69(Thailand)
Power consumption (W)	Indicated on the rear of the TV			
Television system	B/G, I, D/K, M			
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43			
Stereo/Bilingual system	NICAM Stereo/Bilingual B/G, I; A2 Stereo/Bilingual B/G			KV-DR34M69(Thailand/GE)
Teletext language	English, Arabic, French			
Channel coverage				
B/G	VHF: E2 to E12 UHF: E21 to E69 CATV: S01 to S03, S1 to S41			
I	UHF: B21 to B68 CATV: S01 to S03, S1 to S41			
D/K	VHF: C1 to C12, R1 to R12 UHF: C13 to C57, R21 to R60 CATV: S01 to S03, S1 to S41, Z1 to Z39			
M	VHF: A2 to A13 UHF: A14 to A79 CATV: A-8 to A-2, A to W+4, W+6 to W+84			
(Antenna)	75-ohm external terminal			
Audio output (Speaker)	6W + 6W			
3D WOOFER	15W			
Number of terminal				
Video	Input: 4	Output: 1	Phone jacks; 1 Vp-p, 75 ohms	
Audio	Input: 4	Output: 1	Phone jacks; 500 mVrms	
(S Video)	Input : 2		Y: 1 Vp-p, 75 ohms unbalanced, sync negative C: 0.286 Vp-p, 75 ohms	
(Component Video)	Input : 1		Phono jacks: Y: 1 Vp-p, 75 ohms sync negative P_B/C_B: 0.7 Vp-p, 75 ohms P_R/C_R: 0.7 Vp-p, 75 ohms Audio: 500mVrms	
(Headphone)	Output: 1		Stereo minijack	
Picture tube	34 in			
Tube size (cm)	86			Measured diagonally
Screen size (cm)	80			Measured diagonally
Dimension (w/h/d,mm)	894 × 690 × 569			
Mass (kg)	85			

Design and specifications are subject to change without notice.

CAUTION

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAP TO THE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK ⚠ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

Section	Title	Page
SELF DIAGNOSTIC FUNCTION		4
1. DISASSEMBLY		
1-1.	Rear Cover Removal	7
1-2.	3D Speaker Box Removal	7
1-3.	Speaker Removal	7
1-4.	Chassis Assy Removal	7
1-5.	DH Board Removal	7
1-6.	Service Position	7
1-7	Service Position on TV Stand	8
1-8.	Terminal Bracket Removal	8
1-9.	B3 and D5 Boards Removal	8
1-10.	F1 Board Removal	8
1-11.	BC1 and P Boards Removal	8
1-12.	H1 and H2 Boards Removal	9
1-13.	A and D Boards Removal	9
1-14.	Picture Tube Removal	9
2. SERVICE JIG		11
3. CIRCUIT BOARDS LOCATION		11
4. ADVANCE OPERATION		
4-1.	"RESET" Function	12
5. SET-UP ADJUSTMENTS		
5-1.	Beam Landing	13
5-2.	Convergence Adjustment	14
5-3.	Focus Adjustment	16
5-4.	Neck Assy Twist Adjustment	16
5-5.	G2 (SCREEN) and White Balance Adjustment	16
6. CIRCUIT ADJUSTMENTS		
6-1.	Adjustment With Commander	17
6-2.	Adjustment Method	17
6-3.	Picture Quality Adjustments	36
6-4.	Sub Hue/Col Adjustments	36
6-5.	Deflection Adjustments	37
6-6.	A Board Adjustment After IC003 (MEMORY) Replacement	38
6-7.	Picture Distortion Adjustment	39
7. DIAGRAMS		
7-1.	Block Diagram	40
7-2.	Schematic Diagram	49
	(1) A Board Schematic Diagrams	50
	(2) B3 Board Schematic Diagram	54
	(3) D Board Schematic Diagram	56
	(4) D5 Board Schematic Diagram	58
	(5) C Board Schematic Diagram	60
	(6) P and F1 Boards Schematic Diagrams	62
	(7) BC1 Board Schematic Diagram	64
	(8) H1 Board Schematic Diagram	66
	(9) V2 Board Schematics Diagram	68
	(10) DH and VM Boards Schematics Diagrams	70
	(11) H2 and J Boards Schematic Diagrams	72
7-3.	Voltage Measurement and Waveforms	76
7-4.	Printed Wiring Boards and Parts Location	90
7-5.	Semiconductors	102
8. EXPLODED VIEWS		
8-1.	Speaker Bracket	105
8-2.	3D Speaker	105
8-3.	Chassis	106
8-4.	Picture Tube	108
9. ELECTRICAL PARTS LIST		109
OPERATING INSTRUCTIONS		

SELF DIAGNOSTIC FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the STANDBY/TIMER lamp will automatically begin to flash.
The number of times the lamp flashes translates to a probable source of the problem. A definition of the STANDBY/TIMER lamp flash indicators is listed in the instruction manual for the user's knowledge and reference. If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

1. DIAGNOSTIC TEST INDICATORS

When an error occurs, the STANDBY/TIMER lamp will flash a number of times to indicate the possible cause of the problem. If there is more than one error, the lamp will identify the first of the problem areas.

Result for all of the following diagnostic items are displayed on screen. No error has occured if the screen displays a "0".

Diagnostic Item Description	No. of times STANDBY/TIMER lamp flashes	Self-diagnostic display/Diagnostic result	Probable Cause Location	Detected Symptoms
• Power does not turn on	Does not light	—	• Power cord is not plugged in. • Fuse is burned out F1601 (F1 Board)	• Power does not come on. • No power is supplied to the TV. • AC power supply is faulty.
• +B overcurrent (OCP)	2 times	002:000 or 002:001~255	• H.OUT Q6807 is shorted. • H.IN Q6810 is shorted. Q6802 shorted.	• Power does not come on. • Load on power line is shorted.
• +B overvoltage (OVP)	3 times	003:000 or 003:001~255	• PH6602 faulty. D6644 faulty, R6651 open. • 10.5V is not supplied. (D board)	• Power does not come on.
• Vertical deflection failure	4 times	004:000 or 004:001~255	• V.OUT IC6800 faulty D6816 faulty D6817 faulty D6824 faulty R6852 open R6851 open (D board)	• Vertical deflection pulse is stopped. • Vertical size is too small. • Vertical deflection stopped.
• White balance failure (no PICTURE)	5 times	005:000 or 005:001~255	• G2 is improperly adjusted. (Note 2) • CRT problem. • Video OUT IC9001, 9002, 9003 are faulty. (C board) • IC8306 (A board) and IC4301 (A board) are faulty.	• No raster is generated. • CRT cathode current detection reference pulse output is small.
• Horizontal deflection failure	6 times	006:000 or 006:001~225	• C6831 is open circuit. PS6606 open, PS6605 open. (D board)	• H pulse output is too high.
• Micro reset	—	101:00 or 101:001~225	• CRT Discharge (C Board) • Static discharge • External noise	• Power is shut down shortly, after this return back to normal. • Detect Micro latch up.

Note 1: Refer to screen (G2) Adjustment in section 5-5 of this manual.

2. DISPLAY OF STANDBY/TIMER LIGHT FLASH COUNT

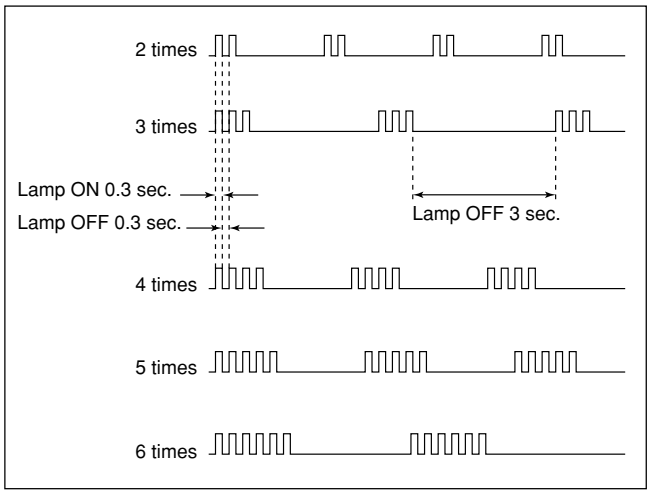

Diagnostic Item	Flash Count*
+B overcurrent	2 times
+B overvoltage	3 times
V deflection stop	4 times
White balance failure	5 times
Horizontal Deflection Failure	6 times

* One flash count is not used for self-diagnostic.

STANDBY/SLEEP lamp

3. STOPPING THE STANDBY/TIMER FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY/TIMER lamp from flashing.

4. SELF-DIAGNOSTIC SCREEN DISPLAY

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes off” that cannot be confirmed, it is possible to bring up past occurances of failure for confirmation on the screen:

[To Bring Up Screen Test]

In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

Screen display ➡ channel 5 ➡ Sound volume - ➡ Power ON

⇧

Note that this differs from entering the service mode (mode volume +).

Self-Diagnosis screen display

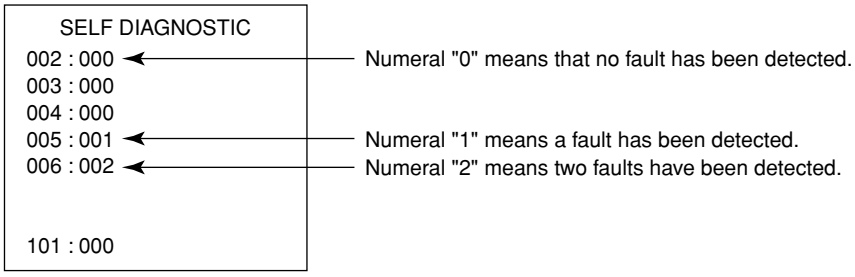
SELF DIAGNOSTIC
002 : 000
003 : 000
004 : 000
005 : 001
006 : 002
101 : 000
Numeral "0" means that no fault has been detected.
Numeral "1" means a fault has been detected.
Numeral "2" means two faults have been detected.

5. HANDLING OF SELF-DIAGNOSTIC SCREEN DISPLAY

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen during repairs. When you have completed the repairs, clear the result display to “0”.

Unless the result display is cleared to “0”, the self-diagnostic function will not be able to detect subsequent faults after completion of the repairs.

[Clearing the result display]
To clear the result display to “0”, press buttons on the remote commander sequentially as shown below when the diagnostic screen is being displayed.

Channel [8] ➡ 0

[Quitting Self-diagnostic screen]
To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

6. SELF-DIAGNOSTIC CIRCUIT

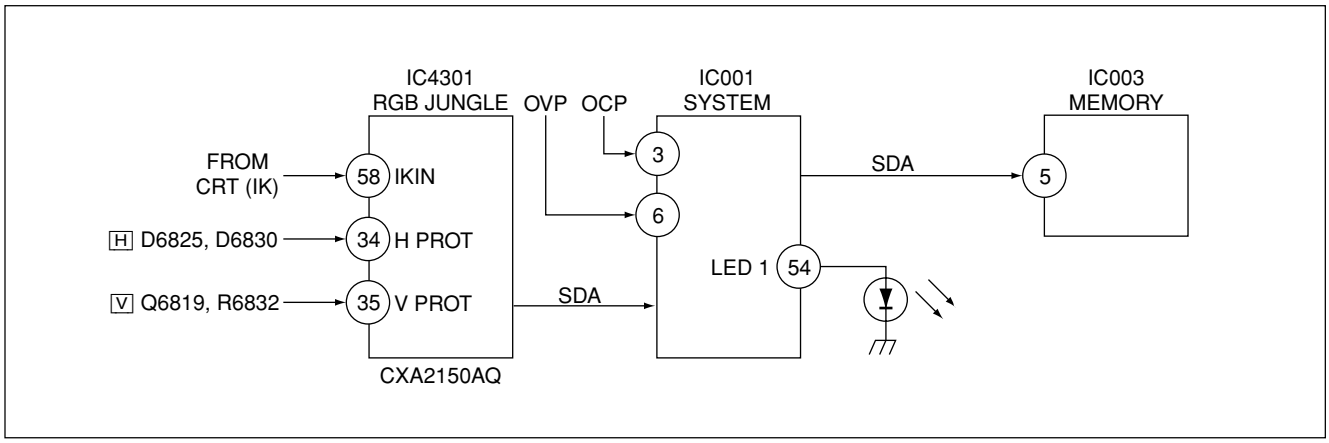

+B overcurrent (OCP)	Occurs when an overcurrent on the +B(135) line is detected by Q6610 and Q6609. If Q6610 and Q6609 go to ON, the voltage to the pin3 of IC001 go to UP. The unit will automatically turn off.
+B overvoltage (OVP)	Occurs when an overvoltage on the +B(135) line is detected by D6635 and Q6611. If Q6611 go to ON, the voltage to pin6 of IC001 go to UP. The unit will automatically turn off.
Vertical deflection failure	Occurs when an absence of the vertical deflection pulse is detected by Q6819 and R6832. Shut down the power supply.
White balance failure	If the RGB levels do not balance or become low level within 5 seconds. This error will be detected by IC4301. TV will stay on, but there will be no picture.
High voltage protector of Horizontal Deflection	Occurs when an overvoltage of horizontal pulse is detected by D6809 and IC6801. If the voltage of anode D6830, Q6800 and D6825 goes to High, the voltage to pin34 of IC4301 go to UP. The unit will automatically turn off.

SECTION 1
DISASSEMBLY

1-1. REAR COVER REMOVAL

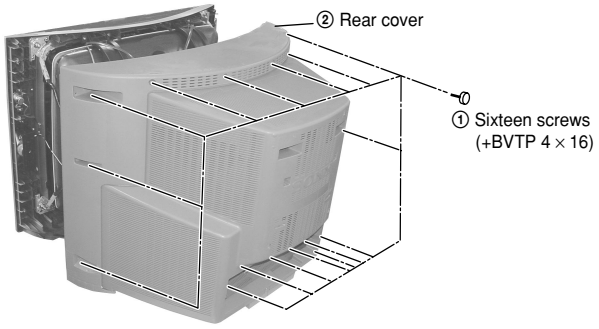

1-2. 3D SPEAKER BOX REMOVAL

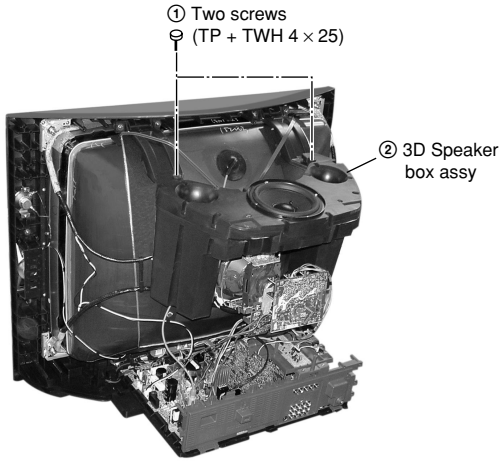

1-3. SPEAKER REMOVAL

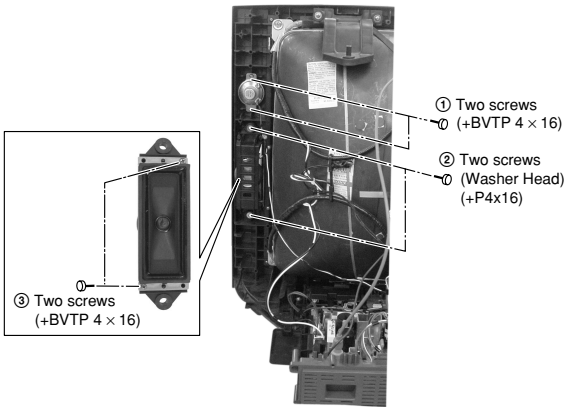

1-4. CHASSIS ASSY REMOVAL

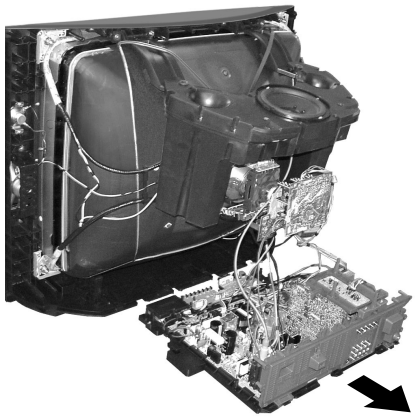

1-5. DH BOARD REMOVAL (KV-DR34M69 ONLY)

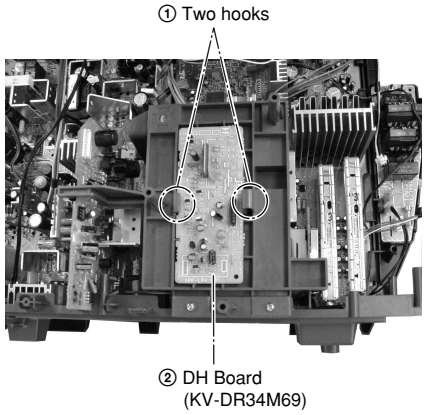

1-6. SERVICE POSITION

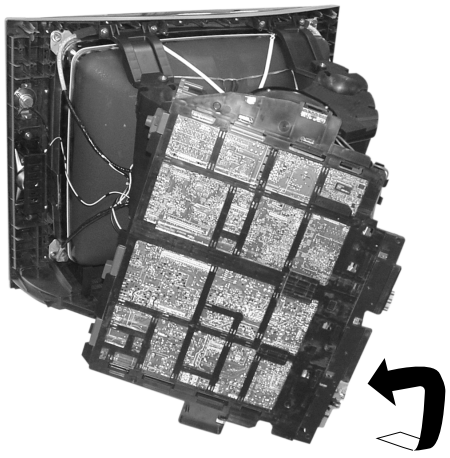

1-7. SERVICE POSITION ON TV STAND

Note: 1) Remove the Rear Cover (refer 1-1)
- unscrew all 16 screws fixed on the Rear Cover. Hold the top of the TV Cabinet; lift the Rear Cover slightly upwards to release the Rear Cover foot from the TV Stand and slide it backwards from the TV Cabinet.

2) Remove the 3D Speaker Box (refer 1-2)
3) Release the Lead Assy Speaker (left side)
4) Lift up the chassis and place it in the Service Position as shown:-

Caution: 1) In Service Position, make sure all the TV connections are connected correctly before turning on the TV set.
2) The TV on the TV Stand without Rear Cover is unstable. As such be careful not to push the TV foward or backward

Place the front of the main bracket on to the foot of the TV Cabinet

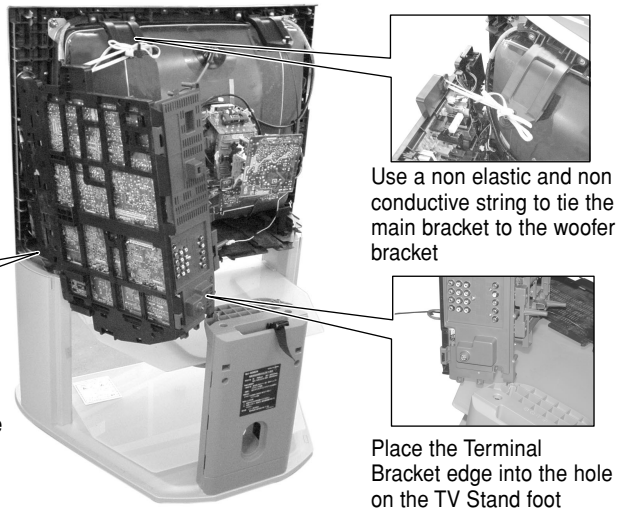

Use a non elastic and non conductive string to tie the main bracket to the woofer bracket

Place the Terminal Bracket edge into the hole on the TV Stand foot

1-8. TERMINAL BRACKET REMOVAL

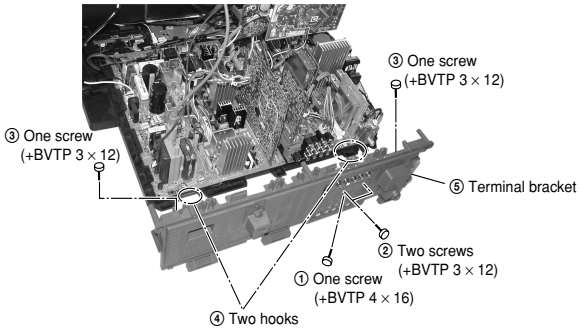

1-9. B3 AND D5 BOARDS REMOVAL

Note: Access to the B3 board is possible after removal of the shiledcase. Remove the shiledcase by removing 2 screws +BVTP 3x16

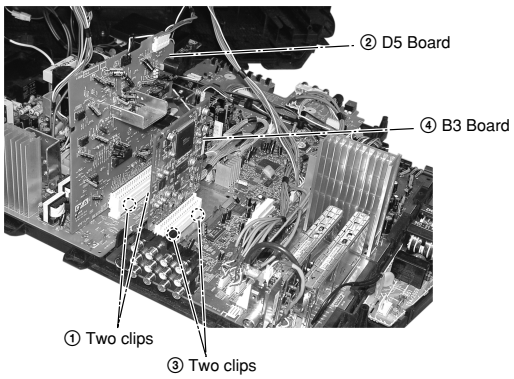

1-10. F1 BOARD REMOVAL

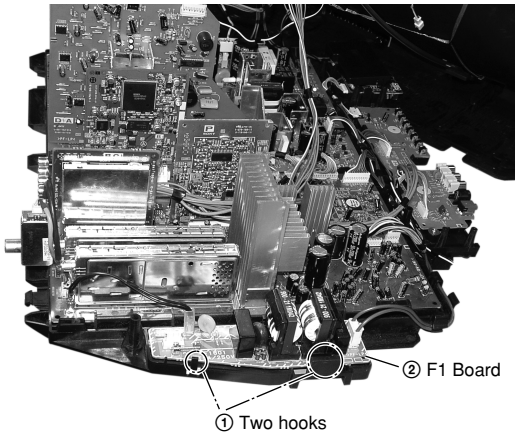

1-11 . BC1 AND P BOARDS REMOVAL

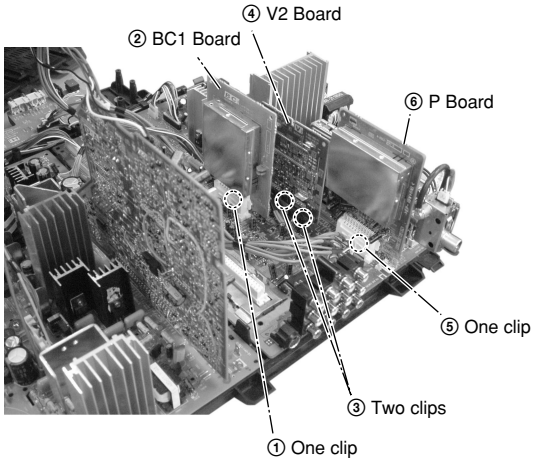

1-12. H1 AND H2 BOARDS REMOVAL

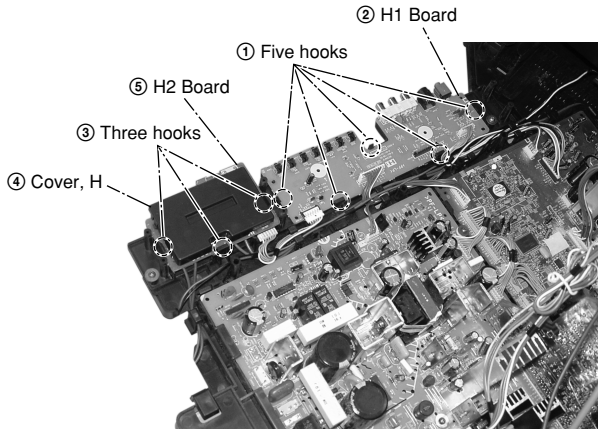

1-13. A AND D BOARDS REMOVAL

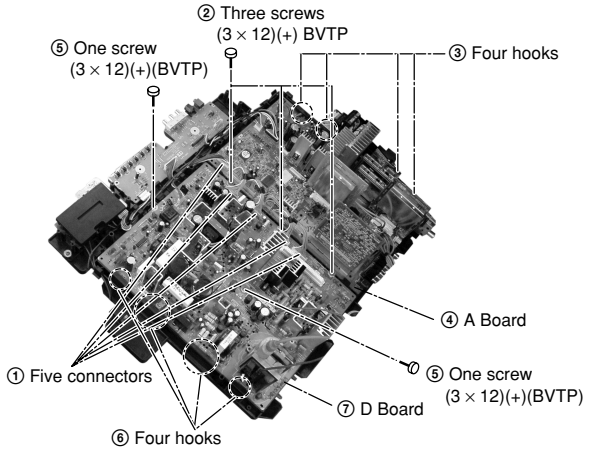

1-14. PICTURE TUBE REMOVAL

Note:

- Please make sure the TV set is not in standing position before removing necessary CRT support located on bottom right and left.
- When removing the Nut Locking: first make sure to hold the Nut special CRT with a spanner while opening the Nut Locking using a torque driver. Then proceed to remove the Nut special CRT using a torque driver.

1) Place the TV set with the CRT face down on a cushion (jig).
2) Removal the Rear Cover.
3) Removal the 3D Box.
4) Unplug all interconnecting leads from the Deflection Yoke, Neck Assy, Degaussing Coils and CRT grounding strap.

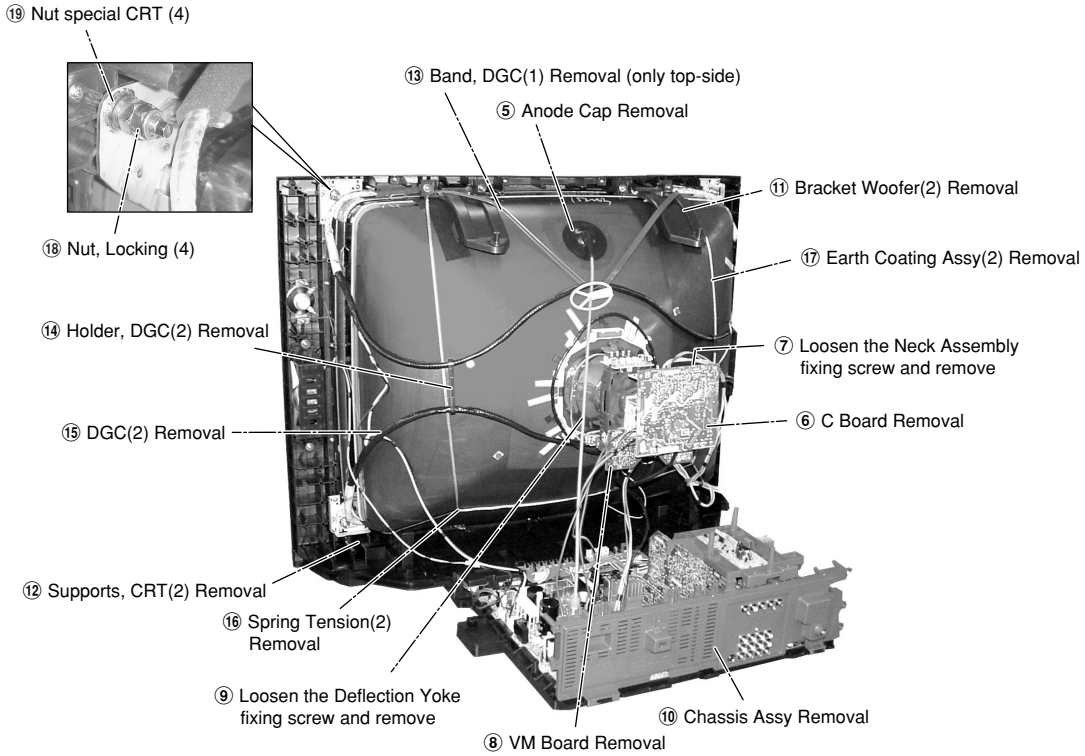
⑲ Nut special CRT (4)
⑱ Nut, Locking (4)
⑬ Band, DGC(1) Removal (only top-side)
⑤ Anode Cap Removal
⑪ Bracket Woofer(2) Removal
⑰ Earth Coating Assy(2) Removal
⑭ Holder, DGC(2) Removal
⑦ Loosen the Neck Assembly fixing screw and remove
⑮ DGC(2) Removal
⑥ C Board Removal
⑫ Supports, CRT(2) Removal
⑯ Spring Tension(2) Removal
⑨ Loosen the Deflection Yoke fixing screw and remove
⑩ Chassis Assy Removal
⑧ VM Board Removal

• REMOVAL OF ANODE-CAP

Note:

- After removing the anode, short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon paint on the CRT.

• REMOVING PROCEDURES

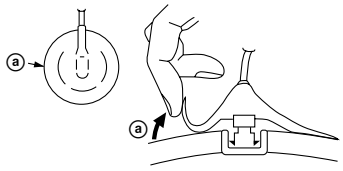

① **Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.**

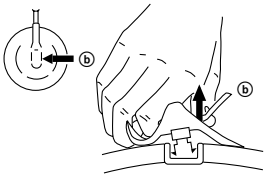

② **Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⓑ.**

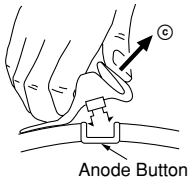

③ **When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling it up in the direction of the arrow ⓒ.**

• HOW TO HANDLE AN ANODE-CAP

① **Do not damage the surface of anode-caps with sharp shaped objects.**
② **Do not press the rubber too hard so as not to damage the inside of anode-cap.**
A metal fitting called the shatter-hook terminal is built into the rubber.
③ **Do not turn the foot of rubber over too hard.**
The shatter-hook terminal will stick out or damage the rubber.

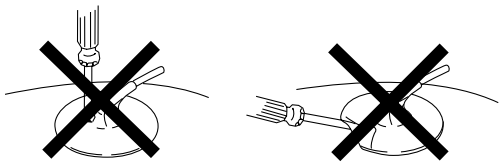

SECTION 2
SERVICE JIG

2-1. JIGS REQUIRED FOR SERVICING

REF NO.	DESCRIPTION	QUANTITY	PART NO.	REMARK
J-1	TOOL(20P),SERVICE	1 1	3-702-763-01	For A to BC1 board extension For A to P board extension
J-2	TOOL(40P),SERVICE	1	3-702-764-01	For A to B3 board extension
J-3	TOOL(50P-A),SERVICE	1	3-702-765-01	For D to D5 board extension
J-4	TOOL(7PX2),SERVICE	1	3-702-775-01	For A to V2 board extension

J-1

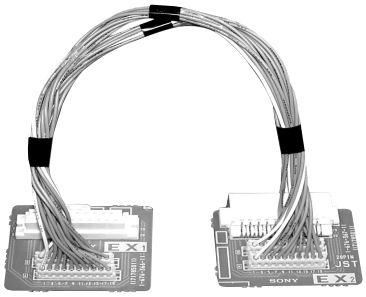

J-2

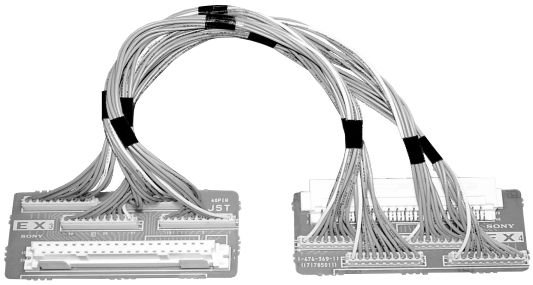

J-3

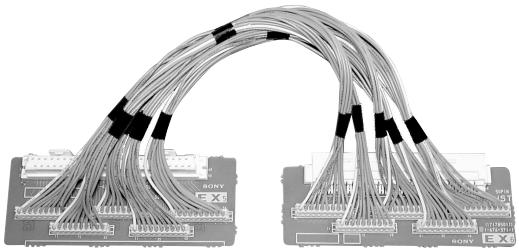

J-4

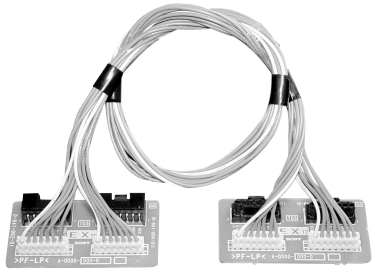

SECTION 3
CIRCUIT BOARDS LOCATION

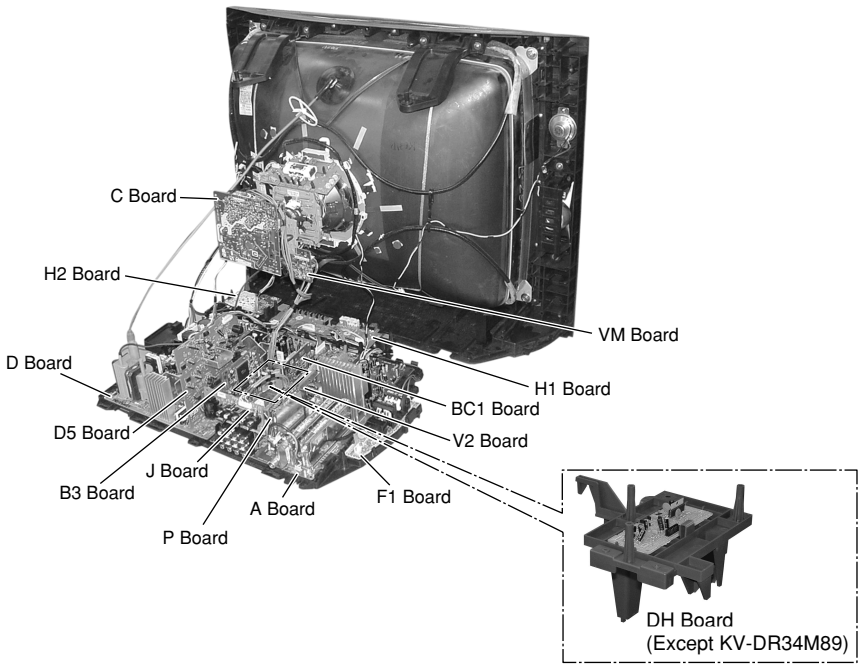

SECTION 4
ADVANCE OPERATION

4-1. "RESET" FUNCTION

1. Purpose

If a customer faces some setting problem that cannot be solved, using the "RESET" function some items will be reset to its original setting (shipping condition)

2. How to Operate

There are 2 ways to access to the "RESET" Function:-

a) By pressing "RESET" button on the Remote Commander.
b) By pressing "MENU" button on the Front Key Input and hold it down for 5 seconds.

3. Subsequent of Operation

Sequential to the resetting operation (either methods being used in No. 2), TV set would shut down once and automatically turn on again. The power-off duration is expected to be about 500msec. An OSD message, "RESET" tentatively will be displayed for 10 sec after IK status gets stable.
As a result, some items will be reset to an initial condition (shipment condition) wheareas some other remains at the last selection by user.

Items that remains at the last selection by user

Program No., PIC rotation, OSD Language, Fine tuning, TV System, Skip

Reset Items

Video input	RF	Antenna sensitivity	HIGH*
Volume	30	Stereo mode	STEREO/NICAM* } (Except KV-DR34M89)
DRC-MF	DRC1250	Bilingual mode	MAIN* } (Except KV-DR34M89)
Picture mode	DYNAMIC	High-deviation mode	AUTO* } (Except KV-DR34M89)
Sound mode	DYNAMIC	Child lock	OFF*
Surround mode	OFF	Wide mode	OFF
Color system(video)	AUTO	Game mode	OFF
Multi picture(PIP)	OFF	Teletext mode	OFF
PIP position	Bottom-right	Sleep timer	OFF
OSD recall	OFF	Wake-up timer	OFF
Intelligent volume	OFF	Sound muting	OFF
ECO mode	OFF	3DNR	ON
Color system(RF)	AUTO*		

*= only when in RF mode

SECTION 5
SET-UP ADJUSTMENTS

- The following adjustments should be made when a complete realignment is required or a new picture tube is installed.
- These adjustments should be performed with rated power supply voltage unless otherwise noted.

Controls and switches should be set as follows unless otherwise noted:

PICTURE control ..... normal
BRIGHTNESS control ..... normal

Perform the adjustments in the following order :

1. Beam Landing
2. Convergence
3. Focus
4. White Balance

Note : Test Equipment Required.

1. Color-bar/Pattern Generator
2. Degausser
3. Oscilloscope

Preparation :

- In order to reduce the influence of geomagnetism on the set's picture tube, face it east or west.
- Switch on the set's power and degauss with the degausser.

5-1. BEAM LANDING

1. Input a white signal with the pattern generator.
   Contrast, Brightness } normal
2. Position neck assy as shown in Fig 5-1.
3. Set the pattern generator raster signal to a green raster.
4. Move the deflection yoke to the rear and adjust with the purity control so that the green is at the center and the blue and the red take up equally sized areas on each side. (See Figures 5-1 through 5-3.)
5. Move the deflection yoke forward and adjust so that the entire screen is green. (See Figure 5-2.)
6. Switch the raster signal to blue, then to red and verify the condition.
7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws and DY spacers.
8. If the beam does not land correctly in all the corners, use a magnet to adjust it. (See Figure 5-4.)

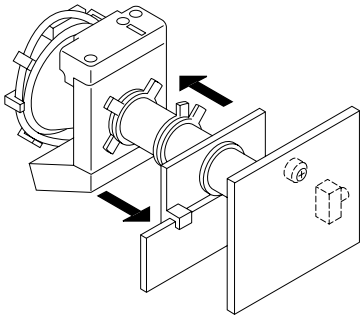

Fig. 5-2

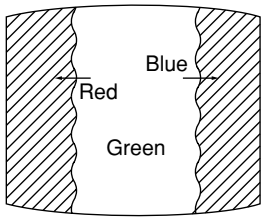

Fig. 5-3

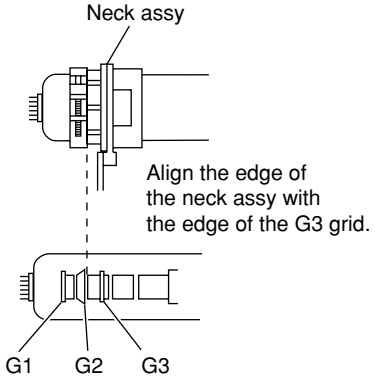

Fig. 5-1

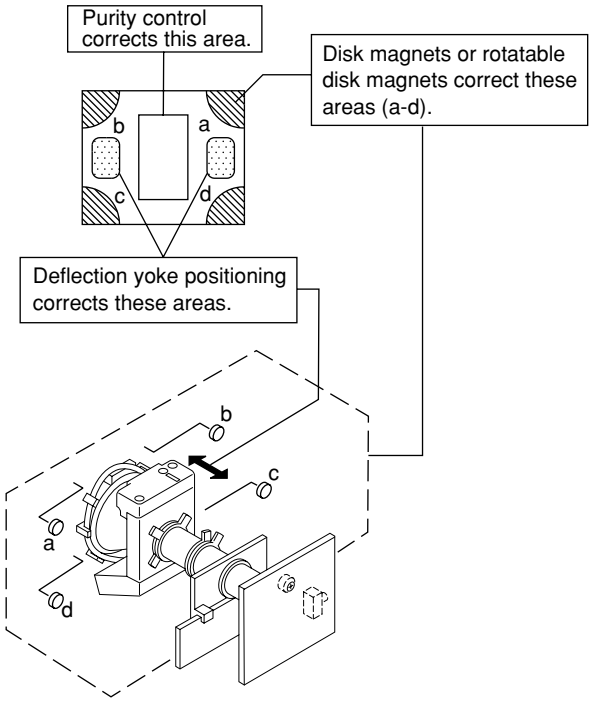

Fig. 5-4

5-2. CONVERGENCE ADJUSTMENT

Preparation :

- Before starting this adjustment, adjust the focus, horizontal size and vertical size.
- Receive cross hatch/dot pattern and set picture mode to "STANDARD".

(1) Horizontal and Vertical Static Convergence

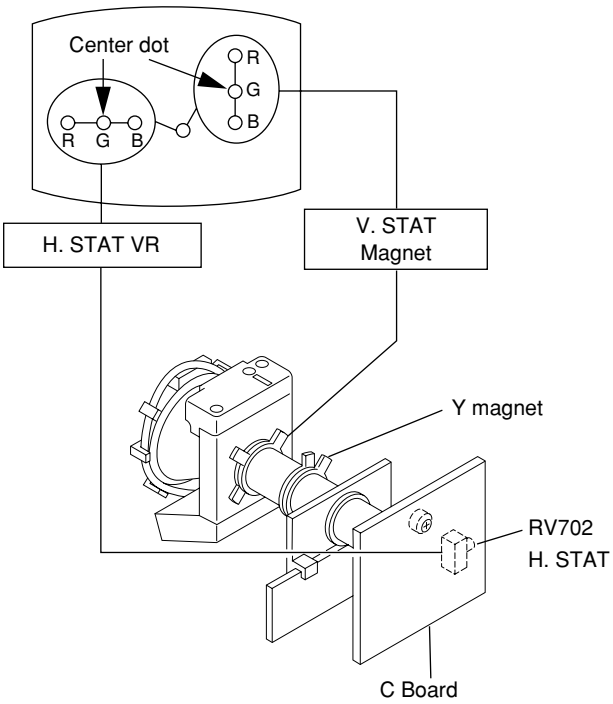

1. (Moving horizontally), adjust the H.STAT control so that the red, green and blue dots are on top of each other at the center of the screen.
2. (Moving vertically), adjust the V.STAT magnet so that the red, green and blue dots are on top of each other at the center of the screen.
3. Adjust Horizontal Trapezoid with “GEO 11 HTR” in Service Mode to make H-Trapezoid distortion best.
4. If the H.STAT variable resistor cannot bring the red, green and blue dots together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V.STAT magnet in the manner given below.
   (In this case, the H.STAT variable resistor and the V.STAT magnet influence each other, so be sure to perform adjustments while tracking.)

① V. STAT

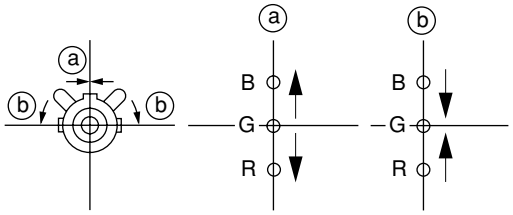

② H. STAT VR

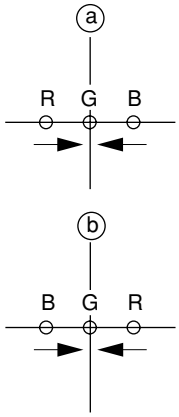

③

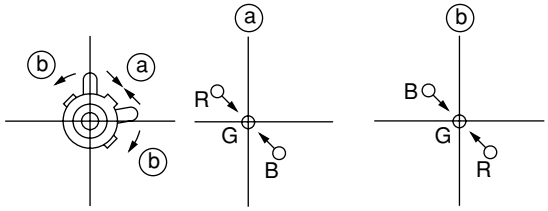

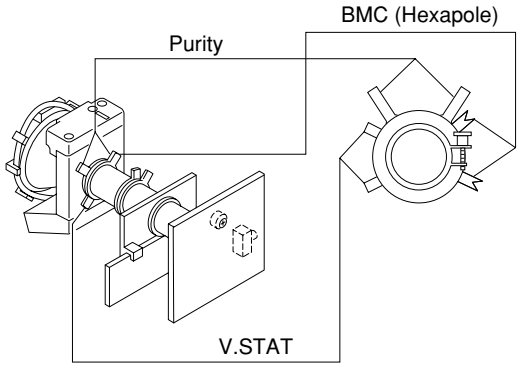

④ BMC (Hexapole) Magnet.
If the red, green and blue dots are not balanced or aligned, then use the BMC magnet to adjust in the manner described below.

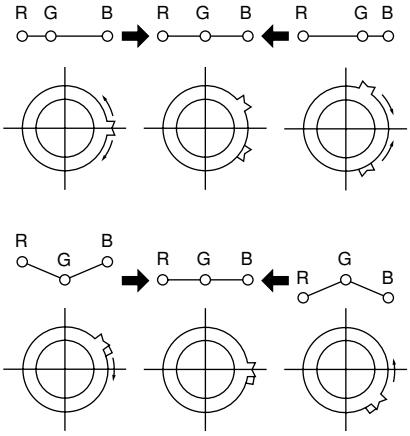

⑤ Y separation axis correction magnet adjustment.

1. Receive the cross-hatch signal and adjust [PICTURE] to [MIN] and [BRIGHTNESS] to [STANDARD] .

2. Adjust the Y separation axis correction magnet on the neck assembly so that the horizontal lines at the top and bottom of the screen are straight.

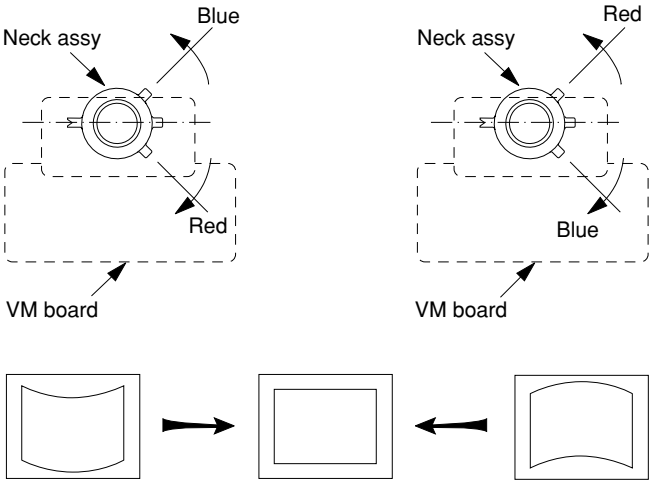

Note

1. The Red and Blue magnets should be equally far from the horizontal center line.
2. Do not separate the Red and Blue magnets too far. (Less than 8 mm)

(2) Dynamic Convergence Adjustment

Preparation:

- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence
- Set the PICTURE and BRIGHTNESS to normal.

1. Adjust TLH. (TLH convergence piece)

① Receive the dot/hatch pattern signal and adjust picture quality by the menu.

② Correct horizontal mis-convergence of red and blue of both sides on the X axis.
When red is outside insert TLH convergence piece to right side (TLH +) views from DY neck. And when blue is outside, insert it to left side (TLH –) and take both sides.

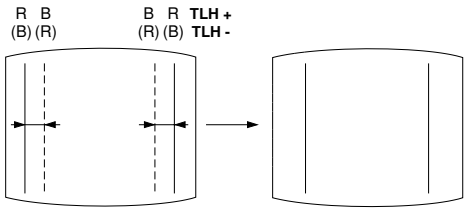

2. Adjust XCV core.
To able to become balance of XCV on the X axis well.

3. Adjust V-TILT.
Correct the vertical mis-convergence of red and blue of vertically sides on the Y axis.

4. Adjust YCH.
Adjust horizontal mis-convergence of red and blue of vertically sides on the Y axis. Mentioned above steps 2 to 4 are adjusting respectively perform minuteness tracking.

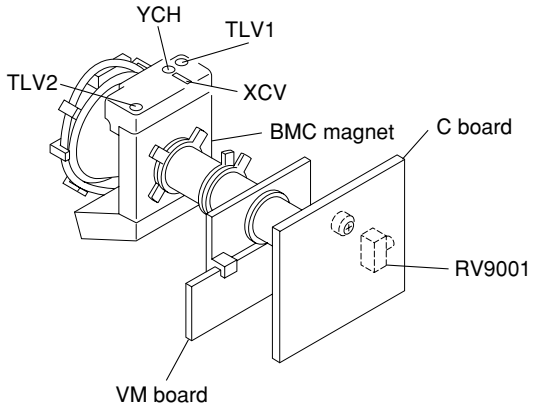

(3) Screen-corner Convergence

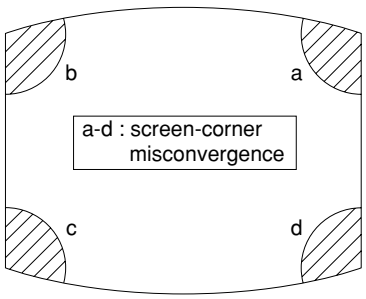

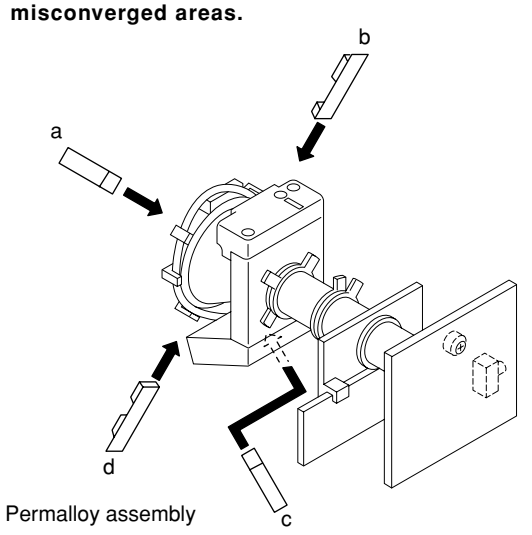

5-3. FOCUS ADJUSTMENT

Note

Focus adjustment should be completed before W/B adjustment.

(1) Receive digital monoscope pattern.
(2) Set "A/V CONTROL" to "STANDARD".
(3) Adjust FOCUS VR so that the center of the screen becomes just focus.
(4) Change the receiving signal to white pattern and blue back.
(5) Confirm MAGENTA RING is not noticeable. In case MAGENTA RING is obvious, adjust FOCUS VR to balance between MAGENTA RING and FOCUS adjustment.

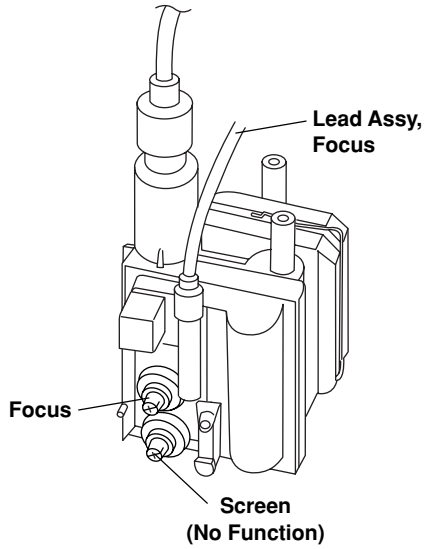

FLYBACK TRANSFORMER (T6803)

5-4. NECK ASSY TWIST ADJUSTMENT

(1) Receive dot/hatch pattern DRC-MF, DRC1250, DYNAMIC.
(2) Turn FOCUS VR fully counter-clockwise.
(3) Confirm the dot shape at the screen center. (Fig. 5-4)
(4) Resume FOCUS VR.

Note

In case of turning NECK ASSY, loosen the screw 3 turns. Do not move the position.

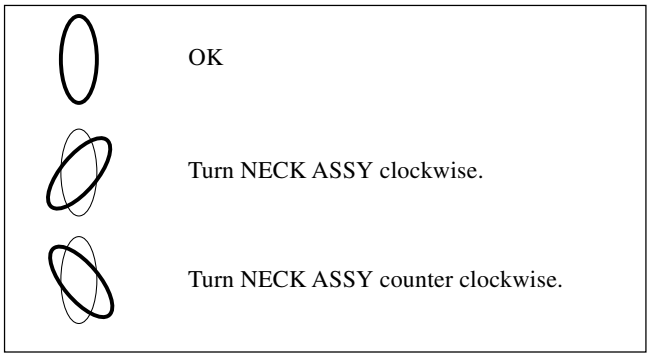

Fig. 5-4

5-5. G2 (SCREEN) AND WHITE BALANCE ADJUSTMENT

1. G2 (SCREEN) ADJUSTMENT

1) Set the PICTURE and BRIGHTNESS to normal.
2) Put to VIDEO input mode without signals.
3) Connect R, G and B of the C board cathode to the oscilloscope.
4) Adjust BRIGHTNESS to obtain the cathode voltage to the value below.
5) Whilst watching the picture, adjust the screen VR [RV9002] located on the C board to the point just before the retrace lines disappear (to the point before cut-off)

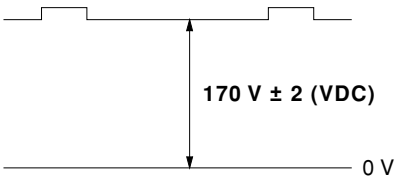

2. WHITE BALANCE ADJUSTMENT

1) Set to Service Mode (Refer Section 6-1: ADJUSTMENTS WITH COMMANDER).
2) Input white raster signal.
3) Set the following condition.
   PICTURE minimum, BRIGHTNESS 50%
4) Select GCT (WHB 08) and BCT (WHB 09) with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
5) Set the PICTURE to maximum.
6) Select GDR (WHB 05) and BDR (WHB 06) with [1] and [4], and adjust the level with [3] and [6] for the best white balance.
7) Write into the memory by pressing [MUTING] then [0].

SECTION 6
CIRCUIT ADJUSTMENTS

6-1. ADJUSTMENTS WITH COMMANDER

Service adjustments to this model can be performed using the supplied Remote Commander RM-991.

a. ENTERING SERVICE MODE

With the unit on standby

→ [DISPLAY] → [5] → [VOL (+)] → [POWER]

The screen display is :

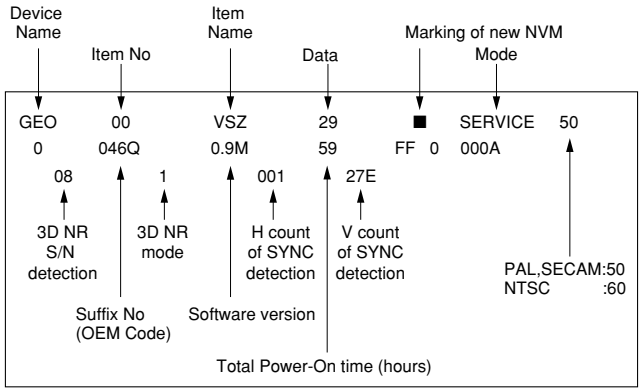

b. CANCELLATION OF SERVICE MODE

Set the standby condition (Press [POWER] button on the commander), then press [POWER] button again, hereupon it becomes TV mode.

c. METHOD OF WRITE INTO MEMORY

1) Set to Service Mode.
2) Press [1] (UP) and [4] (DOWN), to select the adjustment item Name.
3) Press [3] or [6] to raise/lower the data value.
4) Press [MUTING] button to indicate WRITE on the screen.
5) Press [0] button to write into memory.

d. OTHER FUNCTION VIA REMOTE COMMANDER

[7], [0]	All the data becomes the values in memory.
[8], [0]	All goes to the standard state.
[5], [0]	Service data initialization (Be sure not to use usually.)
[DISPLAY], [0]	Write 50Hz adjustment data to 60Hz, or vice versa.
[2], [0]	Copy and write all data.
[Cursor +/–]	Skip category (device) to category (device)

example : GEO 00 VSZ
↕
DAC 00 HCT

e. MEMORY WRITE CONFIRMATION METHOD

1) After adjustment, pull out the plug from AC outlet, and then plug into AC outlet again.
2) Turn the power switch ON and set to Service Mode.
3) Call the adjusted items again to confirm adjustments were made.

6-2. ADJUSTMENT METHOD

Item Number 00 of device GEO
This explanation uses V-size as an example.

1. Select "GEO 00 VSZ" with the [1] and [4] buttons.
2. Raise/lower the data with the [3] and [6] buttons.
3. Select the optimum state. (The standard is 1F for PAL reception.)
4. Press [MUTING] button to indicateWRITE on screen. (The display from SERVICE (green display) to WRITE (green display).
5. Execute the writing with the [0] button. (The WRITE display changes to red color while executing and then back to SERVICE (green display).
6. The WRITE execution is completed.

Example on screen display :-

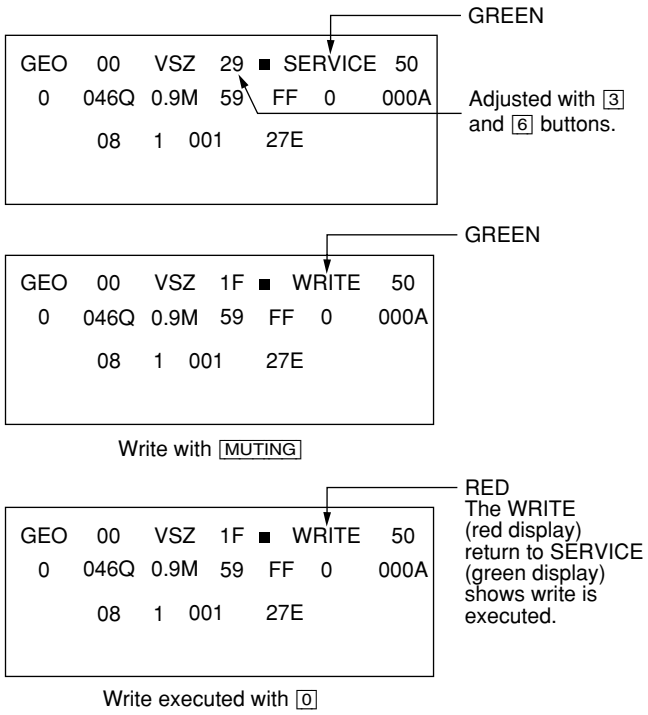
GREEN
GEO 00 VSZ 29 ■ SERVICE 50
0 046Q 0.9M 59 FF 0 000A
08 1 001 27E
Adjusted with [3] and [6] buttons.
GREEN
GEO 00 VSZ 1F ■ WRITE 50
0 046Q 0.9M 59 FF 0 000A
08 1 001 27E
Write with [MUTING]
RED
The WRITE (red display) return to SERVICE (green display) shows write is executed.
GEO 00 VSZ 1F ■ WRITE 50
0 046Q 0.9M 59 FF 0 000A
08 1 001 27E
Write executed with [0]

Use the same method for all Items.

Note : 1. In [WRITE], the data for all items are written into memory together.
2. For adjustment items that have different standard data between 50Hz or 60Hz, be sure to use the respective input signal after adjustment.

Adjustment Item Table

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)							
Category	No	Name						50NC	60NC	50VC	60VC	PROG50 NC	PROG60 NC	PROG50 VC	PROG60 VC
GEO	00	VSZ	21	3F	V Size	50/60*VC/NC	CXA2150AQ	23	26	24	26				
	01	VPS	27	3F	V position	50/60*VC/NC		25	22	27	24				
	02	VLN	5	0F	V Linearity	50/60*VC/NC		07	08	07	08				
	03	SCO	0A	0F	S Correction	50/60*VC/NC		09	0A	09	0A				
	04	HSZ	1E	3F	H Size	50/60*VC/NC		21	1B	21	1C				
	05	HPS	2F	3F	H Position	50/60/DVDProg 50/DVDProg 60*VC/NC		1A	11	19	10	1A	1A	09	09
	06	PAP	28	3F	Pin Amp	50/60*VC/NC		15	19	18	1B				
	07	UPN	25	3F	Upper Corner Pin	50/60*VC/NC		25	26	27	28				
	08	LPN	23	3F	Lower Corner Pin	50/60*VC/NC		22	27	22	28				
	09	UCG	0	3	Most Upper Corner Pin Adjustment	50/60*VC/NC		01	01	03	01				
	0A	LCG	1	3	Most Lower Corner Pin Adjustment	50/60*VC/NC		01	02	00	02				
	0B	UCP	2	3	Most Upper Corner Pin Correction Position Setting	50/60*VC/NC		02	02	02	02				
	0C	LCP	2	3	Most Lower Corner Pin Correction Position Setting	50/60*VC/NC		03	02	02	02				
	0D	POL	0	1	Most Upper/Lower Pin Polarity	50/60*VC/NC		00	00	00	00				
	0E	PPH	24	3F	V Trapezoid Adjustment	FF/R4/PR*50/60*VC/NC		20	19	21	1B				
	0F	AGL	0A	0F	AFC Angle	50/60*VC/NC		1D	1D	21	22				
	10	BOW	6	0F	AFC Bow	50/60*VC/NC		18	18	19	18				
	11	HTR	0F	1F	V SawO Wave Saw Level Gain Control	FF/R4/PR*50/60*VC/NC		00	00	00	00				
	12	MPD	4	0F	MP Para Wave DC Bias Control	FF/R4/PR*50/60*VC/NC		07	07	07	07				
	13	MPA	0E	0F	MP Para Wave Gain Control	FF/R4/PR*50/60*VC/NC		05	05	05	05				
	14	PBP	1F	3F	H Cent Para Wave Saw Level Gain Control	FF/R4/PR*50/60*VC/NC		27	27	23	25				
	15	PBA	0F	1F	H Cent Para Wave Gain Control	FF/R4/PR*50/60*VC/NC		0A	0B	0B	0C				
	16	HBS	1	1	H Blk ON/OFF SW	FF/R4/PR*50/60*VC/NC		01	01	01	01				
	17	HBL	37	3F	Left H Blk Position Control	50/60/DVDProg 50/DVDProg 60*VC/NC		19	24	19	24	1E	29	1E	29
	18	HBR	2C	3F	Right H Blk Position Control	50/60/DVDProg 50/DVDProg 60*VC/NC		26	28	26	28	2B	2D	2B	2D
	19	PCP	0	7	Pin Amp HV Distortion Correction Setting	FF/R4/PR*50/60*VC/NC		00	00	00	00				
	1A	ACP	1	7	H Position HV Distortion Correction Setting	FF/R4/PR*50/60*VC/NC		00	00	00	00				
	1B	VCP	8	3	Vertical HV Distortion Correction Setting	50/60*VC/NC		0C	0C	0C	0C				
	1C	HCP	2	3	H Size HV Distortion Correction Setting	50/60*VC/NC		07	07	07	07				
	1D	USC	0	1	Ref Pulse Jump Mode ON/OFF	FF/R4/PR*50/60*VC/NC		00	00	01	01				
	1E	VAS	2F	3F	V Aspect Control	50/60*VC/NC		2F	2F	30	30				
	1F	VSC	1F	3F	V Scroll Control	50/60*VC/NC		1F	1F	1E	1F				
	20	VBU	7	1	V Blk Top Position Control	FF/R4/PR*50/60*VC/NC		04	09	0E	0C				
	21	VBL	7	1	V Blk Bottom Position Control	FF/R4/PR*50/60*VC/NC		00	09	0C	0F				
	22	AKB	0F	1F	AKB Bch Ref Pulse Timing Setting	50/60*VC/NC		1C	0F	1C	17				
	23	VDS	1	1	Bch REF Pulse Jump ON/OFF Sw	FF/R4/PR*50/60*VC/NC		00	00	00	00				
	24	RST	0	1	Retrace Of V Drive Start Position Setting	FF/R4/PR*50/60*VC/NC		00	00	00	00				
	25	CPY	0	1	Copy the GEO data to all 50/60Hz NVM area										

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)						
Category	No	Name						Common	50	60	EcoOnNC	EcoOffNC	EcoOnVC	EcoOffVC
DAC	00	HCT	33	7F	H Center	50/60Hz	CXA1875		4A	4A				
	01	HLN	27	3F	H Linearity	50/60Hz			39	39				
	02	QDH	1F	3F	DF Phase	50/60Hz			83	83				
	03	HTS	BB	FF	H Trapezoid Start Data Setting	no table		C9						
	04	HTO	0E	FF	H Trapezoid Offset Data Setting	no table		0E						
	05	NSS	7F	FF	NS Start Data	no table		7E						
	06	NSO	09	FF	NS Offset Data	no table		09						
	07	ABC	0	FF	ABL D/A Control	ECO on/off*VC/NC					00	00	00	00
	08	CPY	0	1	Copy the DAC data to all 50/60Hz NVM area									

0TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Common
Common	No	Name						
WHB	00	YOS	7	0F	DC Offset Canceller for Y signal		CXA2150AQ	07
	01	UOS	1F	3F	DC Offset Canceller for Cb1			1F
	02	VOS	1F	3F	DC Offset Canceller for Cr1			1F
	03	SBR	1F	3F	Sub Brightness Control			19
	04	RDR	29	3F	R Drive			29
	05	GDR	24	3F	G Drive			24
	06	BDR	25	3F	B Drive			25
	07	RCT	29	3F	R Cutoff			29
	08	GCT	10	3F	G Cutoff			10
	09	BCT	25	3F	B Cutoff			10
	0A	SBO	20	3F	Sub Brightess Offset	Picture Mode except Dynamic		1C
	0B	RDO	1F	3F	R Drive Offset	Picture Mode except Dynamic		1F
	0C	GDO	19	3F	G Drive Offset	Picture Mode except Dynamic		19
	0D	BDO	1B	3F	B Drive Offset	Picture Mode except Dynamic		1A
	0E	RCO	1F	3F	R Cutoff Offset	Picture Mode except Dynamic		1F
	0F	GCO	29	3F	G Cutoff Offset	Picture Mode except Dynamic		2A
	10	BCO	1A	3F	B Cutoff Offset	Picture Mode except Dynamic		1D

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)									
Category	No	Name						EcoOnNC	EcoOffNC	EcoOnVC	EcoOffVC	50	60	Dynamic	Standard-/Drama	Hi-Fine/-Soft	Personal
SAJ	00	PIC	3F	3F	Picture Control	Picture Mode except Personal	CXA2150AQ							3B	33	28	
	01	BRT	1F	3F	Brightness Control	Picture Mode except Personal								23	1F	1B	
	02	COL	27	3F	Color Control	Picture Mode except Personal								2C	1F	1F	
	03	HUE	1F	3F	Hue Control	Picture Mode except Personal								1F	1F	1F	
	04	SHP	24	3F	Sharpness Control	Picture Mode except Personal								22	1F	1D	
	05	VML	3	3	VM Level	Picture Mode								03	03	01	03
	06	DYC	1	1	Dynamic Color on/off	Picture Mode								01	01	00	01
	07	WBS	0	0	WB Switch	Picture Mode								00	00	00	00
	08	CAX	2	3	Color Matrix Specification	50/60Hz						01	03				
	09	GMA	3	3	Gamma Correction	Picture Mode								02	01	00	01
	0A	DCT	1	3	DC Transmission Control	Picture Mode								02	02	01	02
	0B	DPL	1	3	Auto Pedestal Level Control	Picture Mode								02	02	00	02
	0C	ABM	0	3	ABL Mode Control	Picture Mode								01	00	00	00
	0D	ABT	0	3	ABL Current detection Vth Control	ECO on/off*VC/NC		05	00	0C	07						

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)												
Category	No	Name						Common	EcoOnNC	EcoOffNC	EcoOnVC	EcoOffVC	50TV	50Video	50DVD	60TV	60Video	60DVD	DVDPR-OG50	DVDPR-OG60
SAJ	OE	CLO	9	0F	Color Offset	50/60*TV/Video/DVDProg50/60	CXA2150AQ						06	08		09	09		04	04
	OF	CLW	3	7	Color Step Width to the Change of S/N			03												
	10	HUO	9	0F	Hue Offset	50/60*TV/Video/DVDProg50/60							05	03		07	06		04	05
	11	SHO	7	1F	Sharpness Offset	50/60*TV/Video/DVDProg50/60							10	12	09	0C	0F	09	1A	1A
	12	SHW	1	7	Sharpness Step Width to the Change of S/N			01												
	13	BRO	7	0F	Brightness Offset	ECO on/off*VC/NC			07	07	07	07								

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)								
Category	No	Name						Common	DVD PROG	50NC	60NC	50VC	60VC	DRC 100 NC	DRC 100 VC	DRC 120 NC	DRC 120 VC
JGL	00	PON	1	1	RGB and AKB Reference Pulse Output On/Off		CXA2150AQ	01									
	01	RGB	7	7	RGB Output Selection			07									
	02	AGG	0	3	Aging Mode Selection			00									
	03	BBT	3	3	RGB Bottom Limitter Control			03									
	04	LML	0	3	RGB Amplitude Limitter Control			00									
	05	PAB	0F	0F	DC Level for Peak ABL			0F									
	06	SAB	0	3	S ABL gain Setting	50/60/DVDProg50/DVDProg60*VC/NC				00	00	00	00	00	00	00	00
	07	SCO	7	0F	Sub Picture Control			07									
	08	LV2	5	0F	RGB Level for RGB2			05									
	09	GML	0	1	Gamma Differential Correction ON/OFF			00	00								

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)										
Category	No	Name						Common	50TV	50Video	50DVD	60TV	60Video	60DVD	Dynamic	Standard-/Drama	Hi-Fine/-Soft	Personal
JGL	OA	SYS	2	3	Signal Band Selection	50/60*TV/Video/DVD	CXA2150AQ		01	02	02	02	02	02				
	OB	SF0	1	1	Sharpness f0 Setting	50/60*TV/Video/DVD			01	01	01	01	01	01				
	OC	SF1	3	3	High f0 Sharpness Gain Control	50/60*TV/Video/DVD			03	03	03	03	03	03				
	OD	CDS	0	3	Sharpness Gain Control in High Color Saturation			00										
	OE	CDF	0	1	SHP CD ON/OFF			00										
	OF	PRO	3	3	Pre/Over-Shoot Ratio Control	50/60*TV/Video/DVD			03	03	03	03	03	03				
	10	LTI	3	3	Luminance Transient Improvement	Picture Mode									03	02	00	00

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)						
Category	No	Name						Common	DVD PROG	Dynamic	Standard-/Drama	Hi-Fine/-Soft	Personal	Dyna bsw
JGL	11	LTM	0	3	LTI Mode Setting		CXA2150AQ	00						
	12	CTI	0	3	Chrominance Transient Improvement	Picture Mode				00	00	00	00	
	13	CTM	0	3	CTI Mode Setting			00						
	14	VDL	3	3	VM OUT Phase Control			03						
	15	VCR	0	3	VM OUT Coring Level Setting			00						
	16	VFO	0	3	VM OUT F0 Setting			00						
	17	VLM	0	3	VM OUT Limiter Level Setting			00						
	18	AFC	1	3	AFC Loop Gain Control	Common/DVD Progressive		02	01					

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)		
Category	No	Name						Common	TV	Video
DRC	00	MOD	0	3	DRC Mode (For Evaluation Only) 00 - Normal, 01 - Forced 1250i, 02 - Forced Progressive, 03 - Forced Simple Progressive					

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)		
Category	No	Name						Common	TV	Video
PIP	00	PRO	0	1	Progressive Scan Mode Enable		SDA9489X	00		
	01	RED	0	1	Read Double Mode			00		
	02	FEI	0	3	Field Select			00		
	03	HPS	33	FF	Horizontal Picture Position			33		
	04	VPS	1B	FF	Vertical Picture Position			1B		
	05	HFP	8	0F	Horizontal Fine Positioning			08		
	06	VFP	0	0F	Vertical Fine Positioning			00		
	07	DIS	0	3	Display Standard			00		
	08	HOS	0	3	Horizontal Size			00		
	09	VES	0	3	Vertical Size			00		
	0A	FPS	0	3	Force Parent Standard			00		
	0B	HZM	0	7	Horizontal Zoom			00		
	0C	VSP	1	1	Vertical Sync Pulse Noise Reduction			01		
	0D	VDL	0	1F	Vertical Sync Pulse Delay			00		
	0E	FRH	5	7	Frame Width Horizontal			05		
	0F	FWV	2	3	Frame Width Vertical			02		
	10	VRD	0	1	Reduction			00		
	11	VBK	0	1	Vertical Blanking			00		
	12	DLY	1	F	Select Delay			01		
	13	PCR	0	1	Position Correction			00		
	14	AGM	3	3	AGC Mode			03		
	15	AGC	9	F	Automatic Gain Control Value			09		
	16	CVB	0	3	CVBS Select			00		
	17	CPD	1	3	CLAMPING Duration			01		
	18	CPT	1	3	CLAMPING Pulse Start			01		
	19	LUM	0	3	Luminance Offset			00		
	1A	PLL	0	3	Insert PLL Time constant	TV/Video			00	00
	1B	YCD	8	F	Y/C Delay			08		
	1C	NSR	0	3	Nosie Reduction for inset Pll	TV/Video			02	00
	1D	LSP	0	1	Standard Identification Speed			00		
	1E	KIL	2	3	Color Killer Treshold			02		
	1F	BGP	1	1	Burst Gate Position			01		

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)		
Category	No	Name						Common	TV	Video
PIP	20	SEC	1	1	SECAM Identification level			01		
	21	DEM	1	3	Deemphase Selection			01		
	22	CMA	0	3	Chroma Bandwith			00		
	23	IFC	2	3	IF Compensation Filter			02		
	24	HUE	0	1F	Hue			02		
	25	SCA	6	1F	Color Subcarrier Adjustment			06		
	26	CON	0	F	Contrast Adjustment			00		
	27	BLR	0	F	Blanking Level Red Channel			00		
	28	BRT	0	F	Brightness Adjustment			03		
	29	BLG	0	F	Blanking Level Green Channel			00		
	2A	BIR	0	1	Blanking Inversion Red Channel			00		
	2B	BIB	0	1	Blanking Inversion Blue Channel			00		
	2C	BLB	0	F	Blanking Level Blue Channel			00		
	2D	INT	0	1	Refresh Intervall			00		
	2E	PKR	85	FF	Peak Level Red Channel			85		
	2F	PKG	85	FF	Peak Level Green Channel			85		
	30	PKB	85	FF	Peak Level Blue Channel			85		
	31	FRY	9	F	Frame Color Y			09		
	32	OUT	1	1	Output Format			01		
	33	FRU	0	F	Frame Color U			00		
	34	FRV	0	F	Frame Color V			00		
	35	SAT	7	F	Color Saturation Adjustment			07		
	36	YPK	3	7	Y Peak Adjustment			03		
	37	YCO	0	F	Y Coring Enable			00		
	38	PAL	3	3	PAL ID Level			03		
	39	POV	0	7	Position Offset Vertical			00		
	3A	POH	0	1F	Position Offset Horizontal			00		
	3B	VSH	0	1F	Vertical Shrink			00		
	3C	HSH	0	1F	H Shrink			00		
	3D	CPL	1	3	CLAMPING Pulse Length			01		

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)								
Category	No	Name						Common	TV	Video	50TV	50Video	50DVD	60TV	60Video	60DVD
YCT	00	TNT	20	3F	Tint Adjustment for NTSC	TV/Video	CXA2163AQ		20	1F						
	01	PNG	1	1	PAL/NTSC Gate Width			01								
	02	PNI	0	1	PAL/NTSC Sensitivity SW			00								
	03	SCL	5	0F	Sub Color Control	50/60*TV/Video					05	05		05	06	
	04	SCT	7	0F	Sub Contrast Control	50/60*TV/Video					07	07		07	07	
	05	SF0	2	3	Sharpness Center Ferquency Changing			02								
	06	SEQ	3	3	Sharpness Equalizer Characteristic			03								
	07	SHG	7	0F	Sharpness Gain Control	50/60*TV/Video/DVD					04	06	06	05	08	05
	08	YOL	1F	3F	Y-Output Level Control			1E								
	09	BSP	0	3	Black Stretch Start Point Changing			00								
	0A	COL	10	3F	Cb/Cr Output Level Control			13								
	0B	DCR	0	3	DC Restoration Ratio Adjustment			00								
	0C	BF0	1	3	BPF/TQF F0 Adjustment			01								
	0D	BFQ	2	3	BPF/TQF Q Adjustment			02								
	0E	FSW	1	1	BPF/TQF Switch			01								
	0F	SDT	1	1	SECAM Double Trap Switch			01								
	10	LPF	1	1	Y/Cb/Cr LPF Switch			01								

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)						
Category	No	Name						Common	Multi Comb	3DComb	S-Input	Others	Video	DVD
YCT	11	YDL	6	0F	Y-DL Time Adjustment	2Dcomb/3Dcomb/S-input/others			06	06	06	06		
	12	BO1	7	0F	Cb Offset1 Adjustment (main route)			07						
	13	RO1	7	0F	Cr Offset1 Adjustment			07						
	14	CDF	0	7	V Count Down Frequency Switch	forced 50Hz for no signal		00						
	15	CDM	0	3	V Count Down Judge Switch			00						
	16	AFC	0	3	AFC Sensitivity Switch	(TV/)Video/DVD							00	00
	17	MVM	1	1	Macrovision Mask + AFC Mask			01						
	18	SRY	7	0F	SECAM R-Y Black Adjustment			07						
	19	SBY	1	0F	SECAM B-Y Black Adjustment			01						
	1A	BEL	2	3	SECAM BELL/HPF Switching			02						
	1B	BLF	0	1	BELL f0 Adjustment			00						
	1C	SVI	0	1	SECAM V-ID Switch			00						
	1D	SGP	0	3	SECAM Gate Position Adjustment			00						
	1E	SID	1	1	SECAM Sensitivity Switch	except SECAM		01						
	1F	SIH	0	1	SECAM Inhibition Switch			00						
	20	STP	0	1	Y Black Level Setup for PAL Plus			00						
	21	3NR	1	1	3D NR Operation On/Off			01						
	22	BW6	1	1	3D NR for 60Hz Non-Bust Signal On/Off			01						
	23	WSH	0	3	Sharpness Gain Step for Noise Reduction			00						
	24	WCO	0	3	Cb/Cr Output Level Step for Noise Reduction			00						

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Common
Category	No	Name						
SYN	00	MAT	1	3	Select Type of Matrix Conversion		CXA2151	00
	01	VFR	1	1	Select Frequency of Dummy Sync Output			01
	02	VTC	3	3	Sets the V Sync Separation Time Constant			03
	03	HWD	0	3	Sets the SELH_OUT Output Pulse Width			00
	04	HSL	0	1	Sets the Sync Separation Method			00
	05	HTC	0	1	Sets the H Sync Separation Time Constant of YG IN input			00
	06	HMA	1	1	Sets Whether or not to add Hsync Within Vsync at SELH OUT			01
	07	MAC	1	1	Switch for Eliminating the Macrovision signal of the 525P Signal			01
	08	GSL	1	3	Selects the Gain or Mute of the Signal Output to SELCR OUT			01
	09	CBG	7	0F	SELCB OUT Gain Control			07
	0A	CRG	7	0F	SELCR OUT Gain Control			07
	0B	YG	7	0F	SELY OUT Gain Control			07
	0C	HFR	1	3	Select the Frequency of the Dummy Sync Output to SELH OUT			01

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)						
Category	No	Name						Common	Dynamic	Standard/-Drama	Hi-Fine/-Soft	Dyna bsw	Drama bsw	Soft bsw
AP2	00	BBS	3	0F	Bass Boost Setting		NJW1139	03						
	01	BCB	0	1	Boost/Cut Sub-Bass			00						
	02	SBS	0	3	Sub-Bass Setting			00						
	03	BCT	0	1	Boost/Cut Sub-Treble			00						
	04	STS	0	3	Sub-Treble Setting			00						
	05	AGL	0	3	AGC Level Setting			00						
	06	BSW	0	1	Bass Boost Switch			00						
	07	BAS	14	1F	Bass Sound mode Control	S. Mode but personal with BBS ON/OFF			14	10	10	12	01	01
	08	TRE	16	1F	Treble Sound mode Control	S. Mode but personal with BBS ON/OFF			16	16	10	16	16	10
	09	BBE	48	FF	BBE Sound mode Control	S. Mode but personal with BBS ON/OFF			48	3A	00	48	3A	00

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Common
Category	No	Name						
MSP	00	WST	15	FF	W/G Stereo Threshold		MSP3415D	15
	01	WBT	EC	FF	W/G Bilingual Threshold			EC
	02	WLL	5	FF	W/G Monaural Threshold			05
	03	WAC	1	0F	W/G Agreement Count			01
	04	WDL	30	FF	W/G Search Delay			30
	05	NDL	20	FF	NICAM Search Delay			20
	06	SDL	10	FF	Stereo Status Read Delay			10
	07	AGC	1	1	AGC Switch Auto/Constant			01
	08	REL	28	3F	AGC Gain at Constant Mode			28
	09	CRM	0	1	Carrier Muting On/Off			00
	0A	ACO	1	1	Audio Clock Out On/Off			01
	0B	FP	1B	7F	FM Prescale for Non-M System			1B
	0C	FPM	32	7F	FM Prescale for M system			32
	0D	FH	36	7F	FM prescale for HDEV			36
	0E	FHM	65	7F	FM prescale for HDEV and M			65
	0F	WGP	1C	7F	W/G Prescale			1C
	10	NIP	7F	7F	NICAM Prescale			7F
	11	ERR	50	FF	Auto FM Switch Threshold			50

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)				
Category	No	Name						Common	Dynamic	Standard-/Drama	Hi-Fine/-Soft	Personal
LTI	00	LDH	1	1	Histogram segment Selection		TDA9178	01				
	01	CFS	1	1	Contour Filter Selection			01				
	02	WLB	0	1	Letterbox Window Switch			00				
	03	VDC	1	1	Video Dependent Coring	Picture Mode			01	01	01	01
	04	DEM	0	1	Demonstration Mode			00				
	05	CDP	4	07	Luminance Delay			04				
	06	OSP	0	1	Overrule Smart Peaking			00				
	07	WPO	0	1	White Point Stretch Off			00				
	08	DSK	0	1	Skin Tone Switch	Picture Mode			00	00	00	00
	09	ASK	0	1	Skin Tone Angle Selection			00				
	0A	WSK	0	1	Skin Tone Width Selection			00				
	0B	SSK	0	1	Skin Tone Size Selection			00				
	0C	DGR	1	1	Green Enhancement Switch	Picture Mode			01	01	00	01
	0D	DGT	7	7	Threshold of Green Enhancement Switch			07				
	0E	GGR	0	1	Green Enhancement Gain			00				
	0F	WGR	0	1	Green Enhancement Width			00				
	10	SGR	0	1	Green Enhancement Size			00				
	11	DBL	0	1	Blue Stretch Switch			00				
	12	GBL	0	1	Blue Stretch Gain Selection			00				
	13	SBL	0	1	Blue Stretch Size Selection			00				
	14	CDS	1	1	Color Dependent Sharpness	Picture Mode			01	01	00	01
	15	CST	7	7	Threshold of Color Dependent Sharpness			07				
	16	CTI	1	1	Color Transient Improvement	Picture Mode			01	01	00	00
	17	BON	0	1	Black Offset Compensation	Picture Mode			00	00	00	00
	18	BTD	0	3F	Adaptive Black Streeth	Picture Mode			00	00	00	00
	19	NLD	15	3F	Non-Linearity Amplifier	Picture Mode			15	15	00	15

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)						
Category	No	Name						Common	TV	Video	Dynamic	Standard-/Drama	Hi-Fine/-Soft	Personal
LTI	1A	NLW	7	7	Step Width of Non-Linearity Amplifier			07						
	1B	VGD	1F	3F	Variable Gamma	Picture Mode					22	1F	1F	1F
	1C	VGW	0	7	Step Width of Variable Gamma			00						
	1D	PKD	3F	3F	Peaking Amplitude	Picture Mode					3F	30	0E	30
	1E	PKW	8	0F	Step Width of Peaking Amplitude			08						
	1F	SPD	0	3F	Steepness Correction	Picture Mode					00	00	00	00
	20	CRD	1B	3F	Coring Level	Picture Mode					16	16	00	16
	21	CRW	9	0F	Step Width of Coring Level			06						
	22	CRO	6	0F	Coring Level Offset for Video Mode			01						
	23	LWD	1F	3F	Line Width Correction			1F						
	24	SNM	0	7	S/N Mode Under Unreliable S/N Condition			00						
	25	SNC	3	0F	S/N Ratio Average Counter	TV/Video			03	03				
	26	FMC	2	0F	Feature Mode Matching Counter			02						

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)										
Category	No	Name						Common	TV	Video	NRmode0	NRmode1	NRmode2	NRmode3	Dynamic	Standard-/Drama	Hi-Fine/-Soft	Personal
3CM	00	NRM	0	3	Noise Reduction Operation Mode		UPD64083	00										
	01	YCO	0E	0F	Y/C Signal Output Selection			0D										
	02	SYC	1	3	System Clock Selection			01										
	03	STD	0	3	Standard/Non-Standard Operation Selection			00										
	04	MSS	0	3	Inter-Frame/Inter-Line Operation Selection			00										
	05	KIL	3	3	Killer/Non-Killer Operation Selection			03										
	06	ECS	1	3	External C-Sync Input Selection			01										
	07	CPP	2	3	ADC Input Level & Clump Pulse Width Selection			00										
	08	HDP	5	7	Horizontal Phase Adjustment			05										
	09	CDL	4	7	C-Signal Delay Adjustment			04										
	0A	DYC	2	0F	DY Delection Coring Level Adjustment	NR Mode (0-3)					02	02	02	04				
	0B	DYG	0A	0F	DY Delection Gain Ajustment	NR Mode (0-3)					0A	0A	0A	0A				
	0C	DCC	5	0F	DC Detection Coring Level Adjustment	NR Mode (0-3)					05	03	03	05				
	0D	DCG	5	0F	DC Detection Gain Adjustment	NR Mode (0-3)					05	0A	0A	05				
	0E	YNR	1	0F	YNR Non-Linear Filter Setup			01										
	0F	CNR	1	0F	CNR Non-Linear Filter Setup			01										
	10	WSC	1	3	Noise Detectin Coring Adjustment			01										
	11	VTH	1	3	Hysteresis Selection for H-Sync Non-Standard	TV/Video			01	01								
	12	VTR	1	3	Sensitivity Selection for H-Sync Non-Standard	TV/Video			01	01								
	13	LDR	2	3	Sensitivity Selection for Frame-Sync Non-Standard	TV/Video			02	01								
	14	VAP	3	7	Gain Adjustment for Vertical Shape Correction	Picture Mode									03	00	00	00
	15	VAI	0C	1F	Vanishing Adjustment for Vertical Shape Correction	Picture Mode									0C	00	00	00
	16	YPF	3	3	Center Frequency Selection for Y-Peaking BPF	Picture Mode									03	03	03	03
	17	YPG	8	0F	Gain Adjustment for Y-Peaking BPF	Picture Mode									08	08	08	08
	18	VSE	0A	0F	Line Comb Filter Setup			0A										
	19	CCN	0	1	C-Signal Split Filter Switch			00										
	1A	COS	0	1	C-Signal Dealy Switch at Nosie Reduction			00										
	1B	SDC	0	1	DC Detection Sensitivity Switch			00										
	1C	SDY	1	1	DY Detection Lower-Level Sensitivity Switch			01										
	1D	YHC	0	3	Y-Signal Higher-Level Coring Selection	Picture Mode									00	00	00	00
	1E	YHG	0	1	Y-Signal Higher-Lever Gain Switch	Picture Mode									00	00	00	00
	1F	SHT	0	0F	Non-Standard Detection & H/V Counter Test Bits			00										
	20	CLK	8	0F	Clock Test Bits			08										
	21	PLL	0D	0F	PLL Filter Setup			0D										
	22	KRF	3	0F	Killer Detection Reference Adjustment			03										
	23	HSL	0C	0F	H-Sync Slice Level Adjustment			0C										
	24	VSL	8	0F	V-Sync Slice Level Adjustment			08										
	25	BPS	4	0F	Internal Burst Gate Start Position Adjustment			04										
	26	BPW	0A	0F	Internal Burst Gate Width Adjustment			0A										
	27	ADC	3	3	ADC Clock Delay Selection			03										
	28	APD	1	1	ADC Power-Down Switch			01										
	29	SPD	2	3	Memory Power-Down Switch			00										

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)					
Category	No	Name						Common	DVD PROG	50	60	TV	Video
2CM	00	FUN	3	3	Function		TC90A69N	03					
	01	YCM	0	3	Y/C Separator			00					
	02	CNR	0	3	CNR K			00					
	03	LIM	0	3	CNR Limit			00					
	04	CPF	0	1	C-LPF			00					
	05	SLP	0	1	SelC-LPF			00					
	06	YFO	0	1	Y-P fo	TV/Video						00	00
	07	YPG	1	3	Y-EQ Gain	TV/Video						00	02
	08	YPL	1	3	Y-EQ/N.C Limit	TV/Video						00	00
	09	CLP	0	1	Pds.Clip			00					
	0A	YPF	1	1	Y-LPF	TV/Video						00	00
	0B	VEG	3	7	V-Emph Gain			03					
	0C	VEN	3	7	V-Emph N.L			03					
	0D	VEC	2	3	V-Emph Core			02					

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)													
Category	No	Name						Common	DVD PROG	50	60	TV	Video	NR0, NTSC	NR0, others	NR1, NTSC	NR1, others	NR2, NTSC	NR2, others	NR3, NTSC	NR3, others
3NR	00	WHC	2F	3F	PLL Divider Setting (PAL=47, NTSC=44)	50/60	TC9OA90F			2F	2C										
	01	NIQ	00	01	U/V Input Polarity			01													
	02	CLW	1E	3F	A/D Clamp Pulse Width	50/60				0D	0D										
	03	CLP	50	FF	A/D Clamp Pulse Phase	50/60				50	50										
	04	YBW	8A	FF	Y H Blanking Width	50/60				8A	8A										
	05	YBL	00	0F	Y Blanking Level Adjustment			00													
	06	YBO	00	01	Internal Y H Blanking On/Off			00													
	07	MUT	00	01	Signal Output Muting			00													
	08	YBS	28	7F	Y H Blanking Start Point	50/60				28	28										
	09	CBW	8A	FF	U/V H Blanking Width	50/60				8A	8A										
	0A	CBS	28	7F	U/V H Blanking Start Point	50/60				28	28										
	0B	CBO	00	01	Internal U/V H Blanking On/Off			00													
	0C	VBL	00	0F	V H Blanking Level Adjustment			00													
	0D	UBL	00	0F	U H Blanking Level Adjustment			00													
	0E	CDL	00	07	U/V Output Delay	50/60				00	00										
	0F	YDL	00	07	Y Output Delay	50/60				00	00										
	10	PVI	00	01	VD Input Polarity			00													
	11	PHI	00	01	HD Input Polarity			00													
	12	HDW	10	3F	HD Pulse Width			10													
	13	PVO	01	01	VD Output Polarity			00													
	14	PHO	01	01	HD Output Polarity			00													
	15	HST	1B	FF	HD Out Pulse Start Position			30													
	16	VDL	00	0F	VD Out Pulse Start Position			00													
	17	VDW	03	0F	VD Out Pulse Width			03													
	18	NDE	00	0F	Noise Detection Point			00													
	19	NVP	02	0F	Noise Detect Line			02													
	1A	NDS	02	03	Noise Detection Sensitivity			03													
	1B	HOF	00	01	H Reference Pulse On/Off (ON=0)			00													
	1C	NDW	09	0F	Noise Detect Gate Width			09													
	1D	UOS	00	07	U Offset Level			04													
	1E	POT	00	03	Output Port 0/1 Control	50/60				00	00										
	1F	UVF	00	01	UV Frag Polarity			00													
	20	APC	00	01	AP Check polarity			00													
	21	DAP	00	01	DAC Power Save (ON=1)			00													
	22	YLV	08	0F	Y NR Level	NR0/1/2/3*NTSC/others								00	00	0D	0D	0E	0E	08	08
	23	YST	00	01	Y Standard Detection Off/On			00													
	24	YNT	01	01	Y NTSC Standard Detection			01													
	25	YPL	01	01	Y PAL Standard Detection			01													
	26	YMV	00	01	Y Moving Detection Filter (ON=0)			00													

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)									
Category	No	Name						Common	50	60	NR0, NTSC	NR0, others	NR1, NTSC	NR1, others	NR2, NTSC	NR2, others	NR3, NTSC	NR3, others
3NR	27	YCR	08	1F	Y Moving Detection Coring Level	NR0/1/2/3*NTSC/others					00	00	07	07	0A	0A	00	00
	28	VOS	00	07	V Offset Level			04										
	29	YMG	01	03	Y Moving Detection Gain	NR0/1/2/3*NTSC/others					00	00	00	00	00	00	00	00
	2A	YEG	01	01	Y Moving Detection On (ON=1)			01										
	2B	YEL	06	0F	Y Edge Moving Detection Sensitivity	NR0/1/2/3*NTSC/others					03	03	03	03	03	03	04	04
	2C	YLM	06	7F	Y NR Feed Back Limit Level	NR0/1/2/3*NTSC/others					00	00	04	04	08	08	03	03
	2D	CLV	0A	0F	C NR Level	NR0/1/2/3*NTSC/others					00	00	09	09	0B	0B	08	08
	2E	CNT	01	01	Relate C NR to YSTDN			01										
	2F	CPL	01	01	Relate C NR to YSTDP			01										
	30	CMG	01	03	C Moving Detection Gain	NR0/1/2/3*NTSC/others					00	00	00	00	00	00	00	00
	31	CCR	03	1F	C Moving Detection Level	NR0/1/2/3*NTSC/others					00	00	06	06	0C	0C	00	00
	32	CLM	06	7F	C NR Feed Back Limit Level	NR0/1/2/3*NTSC/others					00	00	05	05	05	05	04	04
	33	NVS	14	FF	NR Vertical Start Line	50/60			14	14								
	34	NHS	10	7F	NR Horizontal Start Position	50/60			10	10								
	35	NVE	90	FF	NR Vertical end Line (offset:+100d)	50/60			F4	F4								
	36	NHE	4E	7F	NR Horizontal end Position	50/60			78	78								
	37	YNG	01	03	Y Coring Gain	50/60			01	01								
	38	COR	00	01	Coring/Through (Coring=0)	50/60			00	00								
	39	LPF	00	01	LPF On/Off (On=0)			01										
	3A	YLT	06	0F	Y Coring Limit Level	50/60			06	06								
	3B	YNC	08	0F	Y Coring Offset Level	NR0/1/2/3*NTSC/others					08	08	0C	0C	0E	0E	08	08
	3C	YCO	01	01	Y Coring Off (On=1)	50/60			00	00								

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)	
Category	No	Name						Common	DVD PROG
TXT	00	TXH	2A	FF	Teletext Horizontal Position for Phiilips		SAA5264	2A	
	01	TXV	27	3F	Teletext Vertical Position for Philips			27	
	02	THD	00	7F	Teletext H-Sync Active Edge Shift			00	
	03	TVD	00	7F	Teletext V-Sync Active Edge Shift			00	
	04	HPL	01	01	Teletext H-Sync Polarity Configuration			01	
	05	VPL	00	01	Teletext V-Sync Polarity Configuration			00	
	06	FPL	01	01	Teletext Field Polarity Configuration			01	
	07	FMD	00	03	Teletext Fastext/TOP Force Mode			00	
	08	TBR	08	0F	Teletext RGB Brightness			08	
	09	NOP	01	0F	Teletext National Option Table Configuration			01	
	0A	TCH	01	03	Teletext Twisted Character Set Configuration			01	

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)	
Category	No	Name						Common	DVD PROG
OPM	00	OSH	12	3F	OSD H Position	TV/Video	CXP750096	12	0E
	01	FW1	0	3F	OSD ODD/EVEN Field Window Setup#1			00	
	02	FW2	3	3F	OSD ODD/EVEN Field Window Setup#2			03	
	03	COM	0	03	Comb Operation Selection			00	
	04	APC	1	1	APC Switch			01	
	05	TSY	0	03	TV System Selection Under Searching With Auto TV System			00	
	06	MUT	0	1	No Signal Mute			00	
	07	AFM	1	1	Auto FM Switch			01	
	08	TVO	3	7	V-Angle Correction to Picture Rotation			03	
	09	DBL	0	1	Disable Blueback Function			00	
	0A	SSO	1	3	Speed CH Search Selection			01	
	0B	TRP	0	3F	MPEG/JPEG Noise Reduction for each input			00	
	0C	SCH	7F	7F	CH Selection for Shipping Condition	NTSC Only		7F	
	0D	SCA	1	1	Cable/Air Selection for Shipping Condition	NTSC Only		01	
	0E	VSN	1	1	Enable Noise Reduction in Video Mode			01	
	0F	PSQ	0	1	Power Seq for Continuos Sircs Detection Spec			00	
	10	POR	0	1	Power On Reset Detection From YCT			00	
	11	RUC	0F	0F	RF Signal Change Counter after Unlocked	disable if set to 0Fh		0F	
	12	RLC	0F	0F	RF Signal Change Counter after locked	disable if set to 0Fh		0F	
	13	LBB	0	1	Lower Blue Back Intensity			00	

TVG	Functionality		Initial	Range	Function	Table & Note	Device Name	Initial Value (detailed)	
Category	No	Name						Common	DVD PROG
OPB	00	OP1	E7	FF	Optional Bits 1 (refer page 34)		Option-Bits	FF	
	01	OP2	17	FF	Optional Bits 2 (refer page 34)			94	
	02	OP3	00	FF	Optional Bits 3 (refer page 34)			00	

Abbreviation

VC	=	V-Compressed Mode	NC	=	Non-compressed Mode	ECO	=	Eco Mode
Sur	=	Surround	NR	=	Noise Reduction	FF	=	Flicker Free
R4	=	Real 4	PR	=	Progressive			

NOTE

- shaded items are fixed data.
- no data.
- Standard data listed on the Adjustment Item Table are reference values, therefore it may be different for each model and for each mode.
- Note for Different Data: The data indicated in the initial colomn are the standard data values written on the microprocessor. Therefore, the data values of the modes are stored respectively in the memory. In case of a device replacement, adjustment by rewriting the data value is necessary for some items.

OPTION NOTE

COM Comb Operation Selection
00 = Auto
01 = No comb,
02 = Forced 2D comb,
03 = Forced 3D comb,

TSY TV System Selection for Auto TV System — 00 = B/G, 01 = I, 10 = D/K, 11 = M

SSO Speed CH Search Selection — 00 = normal, 01 = 4 times, 10 = 6 times, 11 = 8 times

TRP MPEG/JPEG Noise Reduction

Input	–	–	TV	Video 1	Video 2	Video 3	Video 4	DVD

OP1 Items

Item	TOP	NICAM	HDEV	Thai Bil.	Sleep Mode	DVD Input	AV Input		HEX
KV-DR34M69 (GE)	0	1	1	0	1	1	1	1	6F
KV-DR34M69 (THAILAND)	0	1	1	0	1	1	1	1	6F
KV-DR34M89	0	0	0	0	1	1	1	1	0F

AV Input 00 = no AV Input, 01 = 1 AV Input, 10 = 3 AV Input, 11 = 4 AV Input

OP2 Items

Item	PiP Models	Korean Stereo	Vid NTSC3.58	A-TV sys	US ST	Chinese	Arabic	Thai	HEX
KV-DR34M69 (GE)	1	0	0	1	0	1	1	1	97
KV-DR34M69 (THAILAND)	1	0	0	1	0	1	1	1	97
KV-DR34M89	1	0	0	0	0	1	1	1	87

PiP Models — PiP models — 0 = No PiP, 1 = PiP

Korean Stereo* — Korean Stereo — 0 = disabled, 1 = enabled

Video NTSC3.58* — Video Color System — 0 = Multi System, 1 = Single System (NTSC3.58)

A-TVsys — Auto TV System in Auto Program — 0 = Disabled, 1 = enabled

US ST* — USA Stereo — 0 = disabled, 1 = enabled

OSD Language (Multi)
000 = English only
010 = English & Arabic
001 = English & Thai
011 = English, Arabic & Thai
100 = English & Chinese
110 = English, Chinese & Arabic
101 = English, Chinese & Thai
111 = English, Chinese, Arabic & Thai

OSD Language (NTSC)
000 = English only
001 = English & Korean
010 = English & Taiwanese
011 = English, Taiwanese & Korean

OP3 Items

Item	N/A	N/A	N/A	N/A	N/A	N/A	Initial menu	Forced 50/60	HEX
KV-DR34M69 (GE)	0	0	0	0	0	0	1	0	02
KV-DR34M69 (THAILAND)	0	0	0	0	0	0	1	0	02
KV-DR34M89	0	0	0	0	0	0	1	0	02

Forced 50/60* Forced to 50/60Hz during no signal condition 0 = 60Hz, 1 = 50Hz

Initial Menu Activate initial setup or not 0 = Not active 1 = Active

*APPLICABLE FOR NTSC MODELS ONLY

NOTE

No.	Modes	Details	Entry Conditions
1.	50NC/60NC	Signal 50/60Hz Non-Compressed mode.	Input 50Hz(PAL)/60Hz(NTSC), wide mode OFF (TV/ video mode)
2.	50VC/60VC	Signal 50/60Hz V-Compressed mode.	Input 50Hz(PAL)/60Hz(NTSC), wide mode ON (TV/ Video mode)
3.	ECO ON/OFF NC	Eco modeON/OFF Non-Compressed mode.	ECO mode ON/OFF, wide mode OFF
4.	ECO ON/OFF VC	ECO mode ON/OFF V-Compressed mode.	ECO mode ON/OFF, wide mode ON
5.	50/60 DVD	Signal 50/60Hz Digital Video Disk	Input 50Hz(PAL)/60Hz(NTSC), DVD
6.	Multi Comb	Multi Comb Filter	Input PAL, NTSC 3.58, Service mode category OPM 03 COM 01 (Multi Model only)
7.	3D Comb	3 Dimensional Comb Filter	Input NTSC 3.58 only, Service mode category OPM 03 COM 02 (NTSC model only)
8.	S-Input	S-Video Input	Connect S-Video Cable, video mode
9.	NR0		3D NR mode OFF
10.	NR3		3D NR mode ON and signal level is poor.
11.	NR1		3D NR mode ON and signal level is bad.
12.	NR2		3D NR mode ON and signal level is worst.

6-3. PICTURE QUALITY ADJUSTMENTS

Adjustment condition

1. Set to service mode.
2. Set picture mode to HI-FINE.
3. Set the following condition.

ECO MODE	:	OFF
WIDE MODE	:	OFF
DRC-MF	:	DRC1250
3D-NR	:	ON

Input signal : Video Color Bar
RF Color Bar

MEASUREMENT POINT

A board CN4301
① R-OUT
⑤ B-OUT

CAUTION
After Adjustment, these adjustment parameters must be recovered to the original condition.

Original Condition
SAJ 00 PIC 28 HI-FINE

	50 TV	50 VIDEO	60 TV	60 VIDEO
0E CLO	06	08	09	09
1O HUO	05	03	07	06

6-3(1). DRIVE ADJUSTMENT (VIDEO MODE)

(i) SUB CONTRAST (PAL)
Input signal : PAL Color bar (100%) to Video
Picture : HI-FINE mode
Condition : SAJ 00 PIC 3F
SAJ 02 COL 00
JGL 01 RGB 04
Adjusting parameter:
YCT 04 SCT

(ii) SUB CONTRAST (NTSC)
Input signal : NTSC Color Bar (75%) to Video
Picture : HI-FINE mode
Condition: SAJ 00 PIC 3F
02 COL 00
JGL 01 RGB 04
Adjusting parameter :
YCT 04 SCT

6-3(2). DRIVE ADJUSTMENT (RF MODE)

(i) SUB CONTRAST (PAL)
Input signal : PAL Color bar (100%) to Video
Condition : SAJ 00 PIC 3F
SAJ 02 COL 00
JGL 01 RGB 04
Adjusting parameter:
YCT 04 SCT

(ii) NTSC (RF MODE)
Input signal : NTSC Color Bar (75%) to Video
Condition: SAJ 00 PIC 3F
SAJ 02 COL 00
JGL 01 RGB 04
Adjusting parameter :
YCT 04 SCT

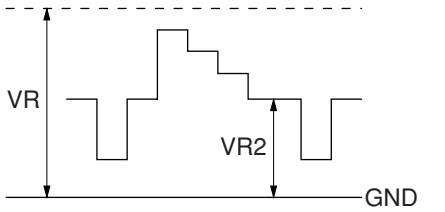

VR1 - VR2 = ΔVR = 2.35 ± 0.07 (Vp-p) (PAL)
(ΔVR = 1.85 ± 0.07 (Vp-p)-For NTSC)

6-4. SUB HUE/COL ADJUSTMENT

6-4(1). SUB HUE/SUB COL (VIDEO MODE)

Input signal : NTSC Color bar (75%)
Picture : HI-FINE mode
Condition : SAJ 00 PIC 3F
SAJ 02 COL 1F
SAJ 10 HUO 05
SAJ 0E CLO 04
Adjusting parameter:
YCT 03 SCL
YCT 00 TNT

6-4(2). SUB HUE/SUB COL (NTSC RF MODE)

Input signal : NTSC Color bar (75%)
Condition : SAJ 00 PIC 3F
SAJ 02 COL 1F
SAJ 10 HUO 05
SAJ 0E CLO 04
Adjusting parameter:
YCT 03 SCL
YCT 00 TNT

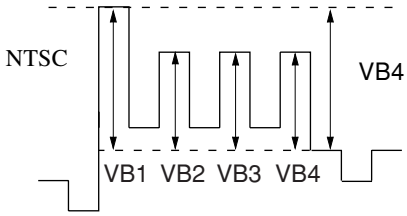

VB1 = VB4 ± 70 mV
VB2 = VB3 ± 70 mV

6-4(3). SUB COLOR ADJUSTMENT (PAL RF MODE) (Except NTSC models)

Input signal : RF PAL Color bar (100%)
Picture : HI-FINE mode
Condition : SAJ 00 PIC 3F
SAJ 02 COL 1F
SAJ 0E CLO 04
SAJ 10 HUO 05
JGL 01 RGB 07
Adjusting parameter:
YCT 03 SCL

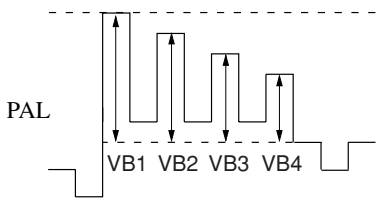

VB2 = VB3 = VB4

6-4(4). SUB COLOR ADJUSTMENT (PAL VIDEO MODE)

Input signal : PAL Color bar (100%)
Picture : HI-FINE mode

Condition :	SAJ	00	PIC	3F
	SAJ	02	COL	1F
	SAJ	0E	CLO	04
	SAJ	10	HUO	05
	JGL	01	RGB	07

Adjustment parameter:

	YCT	03	SCL

6-5. DEFLECTION ADJUSTMENTS

FOR DRC 1250 (50Hz) MODE

1. Set to Service Mode.
2. Input a PAL cross hatch/dot signal.
3. Set the following condition.
   Picture Mode to [DYNAMIC], Picture Rotation to [+/−0] and Eco Mode to OFF.
4. Set to DRC-MF1250 mode.
5. Using the [1] and [4] button, select category GEO (Service Mode).
6. Select and adjust the following items to obtain optimum image. Raise/lower the data using the [3] and [6] buttons.

Service Item

GEO :	00	VSZ	V SIZE
	01	VPS	V POSITION
	02	VLN	V LINEARITY
	03	SCO	S CORRECTION
	04	HSZ	H SIZE
	06	PAP	PIN AMP
	07	UPN	UPPER CORNER PIN
	08	LPN	LOWER CORNER PIN CORRECTION POSITION SETTING
	09	UCG	MOST UPPER CORNER PIN ADJUSTMENT
	0A	LCG	MOST LOWER CORNER PIN ADJUSTMENT
	0E	PPH	V TRAPEZOID ADJUSTMENT
	0F	AGL	AFC ANGLE
	10	BOW	AFC BOW
	11	HTR	V SAW0 WAVE SAW LEVEL GAIN CONTROL
	12	MPD	MP PARA WAVE DC BIAS CONTROL
	14	PBP	H CENT PARA WAVE SAW LEVEL GAIN CONTROL
	15	PBA	H CENT PARA WAVE GAIN CONTROL
DAC :	00	HCT	H CENTER
	01	HLN	H LINEARITY

7. Write into the memory by pressing [MUTING] then [0] on the remote commander.

FOR WIDE MODE, DRC1250 (50Hz)

8. Adjust condition change to WIDE MODE : ON.
9. COPY (item FOR DRC 1250 (50Hz) MODE and adjust data for the following items.

Service Item

GEO :	00	VSZ	V SIZE
	01	VPS	V POSITION
	04	HSZ	H SIZE
	12	MPD	MP PARA WAVE DC BIAS CONTROL
	14	PBP	H CENT PARA WAVE SAW LEVEL GAIN CONTROL

10. Adjust V Blanking the following items.

Service Item

GEO :	1E	VAS	V ASPECT
	1F	VSC	V SCROLL

FOR DRC 1250 (60Hz) MODE

11. Input 525/60Hz signal.
12. Set to DRC-MF : 1250
13. COPY (item for DRC 1250 (50Hz) mode and adjust data for the following items.

Service Item

GEO :	12	MDP	MP PARA WAVE DC BIAS CONTROL
	14	PBP	H CENT PARA WAVE SAW LEVEL GAIN CONTROL

14. Adjust the following items.

Service Item

GEO :	00	VSZ	V SIZE
	01	VPS	V POSITION
	02	VLN	V LINEARITY
	03	SCO	S CORRECTION
	04	HSZ	H SIZE
	05	HPS	H POSITION
	06	PAP	PIN AMP
	07	UPN	UPPER CORNER PIN
	08	LPN	LOWER CORNER PIN
	09	UCG	MOST UPPER CORNER PIN ADJUSTMENT
	0A	LCG	MOST LOWER CORNER PIN ADJUSTMENT
	0E	PPH	V TRAPEZOID ADJUSTMENT
	0F	AGL	AFC ANGLE
	10	BOW	AFC BOW
	11	HTR	V SAWO WAVE SAW LEVEL GAIN CONTROL
	15	PBA	H CENT PARA WAVE GAIN CONTROL
DAC :	01	HLN	H LINEARITY

FOR WIDE MODE, DRC 1250 (60Hz)

15. Set to WIDE MODE : ON
16. Copy the DRC 1250 (60Hz) MODE and adjust the following items to obtain optimum image.
    Raise/lower the data with the [3] and [6] buttons.

GEO	00	VSZ	V SIZE
	01	VPS	V POSITION
	04	HSZ	H SIZE
	12	MPD	MP PARA WAVE DC BIAS CONTROL
	14	PBP	H CENT PARA WAVE SAW LEVEL GAIN CONTROL

17. Adjust V Blanking for the following items.

	GEO	1E	VAS V ASPECT
		1F	VSC V SCROLL

18. Adjust the following items.

    Service Item

GEO :	02	VLN	V LINEARITY
	03	SCO	S CORRECTION
	04	HSZ	H SIZE
	05	HPS	H POSITION
	06	PAP	PIN AMP
	07	UPN	UPPER CORNER PIN
	08	LPN	LOWER CORNER PIN
	09	UCG	MOST UPPER CORNER PIN ADJUSTMENT
	0E	PPH	V TRAPEZOID ADJUSTMENT
	0F	AGL	AFC ANGLE
	10	BOW	AFC BOW
	11	HTR	V SAWO WAVE SAW LEVEL GAIN CONTROL
	15	PBA	H CENT PARA WAVE GAIN CONTROL

19. Input a NTSC cross hatch/dot signal and repeat all above steps.

6-6. A BOARD ADJUSTMENT AFTER IC003 (MEMORY) REPLACEMENT

1. Enter to Service Mode.
2. Press commander buttons [5] and [0] (Data Initialize), and [2] and [0] (Data Copy) to initialize the data.
3. Call each item number and check if the respective screen shows the normal picture.
   In cases where items are not well adjusted, rectify the items with fine adjustment.
   Write the data per each item number ([MUTING] +[0]).
4. Select item numbers “OPB00” (OP1), “OPB01” (OP2) and respectively set the bit per model with command buttons [3] and [6].
5. Press commander buttons [8] and [0] (Test Normal) to return to the data that was set on the shipment from the factory. (This will also cancel Service Mode.)

6-7. PICTURE DISTORTION ADJUSTMENT (1)

Item Number 00 – 0B

GEO 0 VSZ (V SIZE)



GEO 1 VPS (V POSITION)



GEO 2 VLN (V LINEARITY)

GEO 3 SCO (VERTICAL S-Correction)



GEO 4 HSZ (H SIZE)



GEO 5 HPS (H POSITION)



GEO 6 PAP (PIN AMP)



GEO 07 UPN (UPPER CORNER PIN)

GEO 08 LPN (LOWER CORNER PIN)



GEO 9 TRZ (TRAPEZIUM)



GEO 0A AGL (AFC.ANGLE)



GEO 0B BOW (AFC.BOW)



PICTURE DISTORTION ADJUSTMENT (2)

V SAWO WAVE SAW LEVEL GAIN CONTROL (GEO 11 HTR)



KV-DR34M69/DR34M89
RM-991

SECTION 7
DIAGRAMS

7-1. BLOCK DIAGRAM

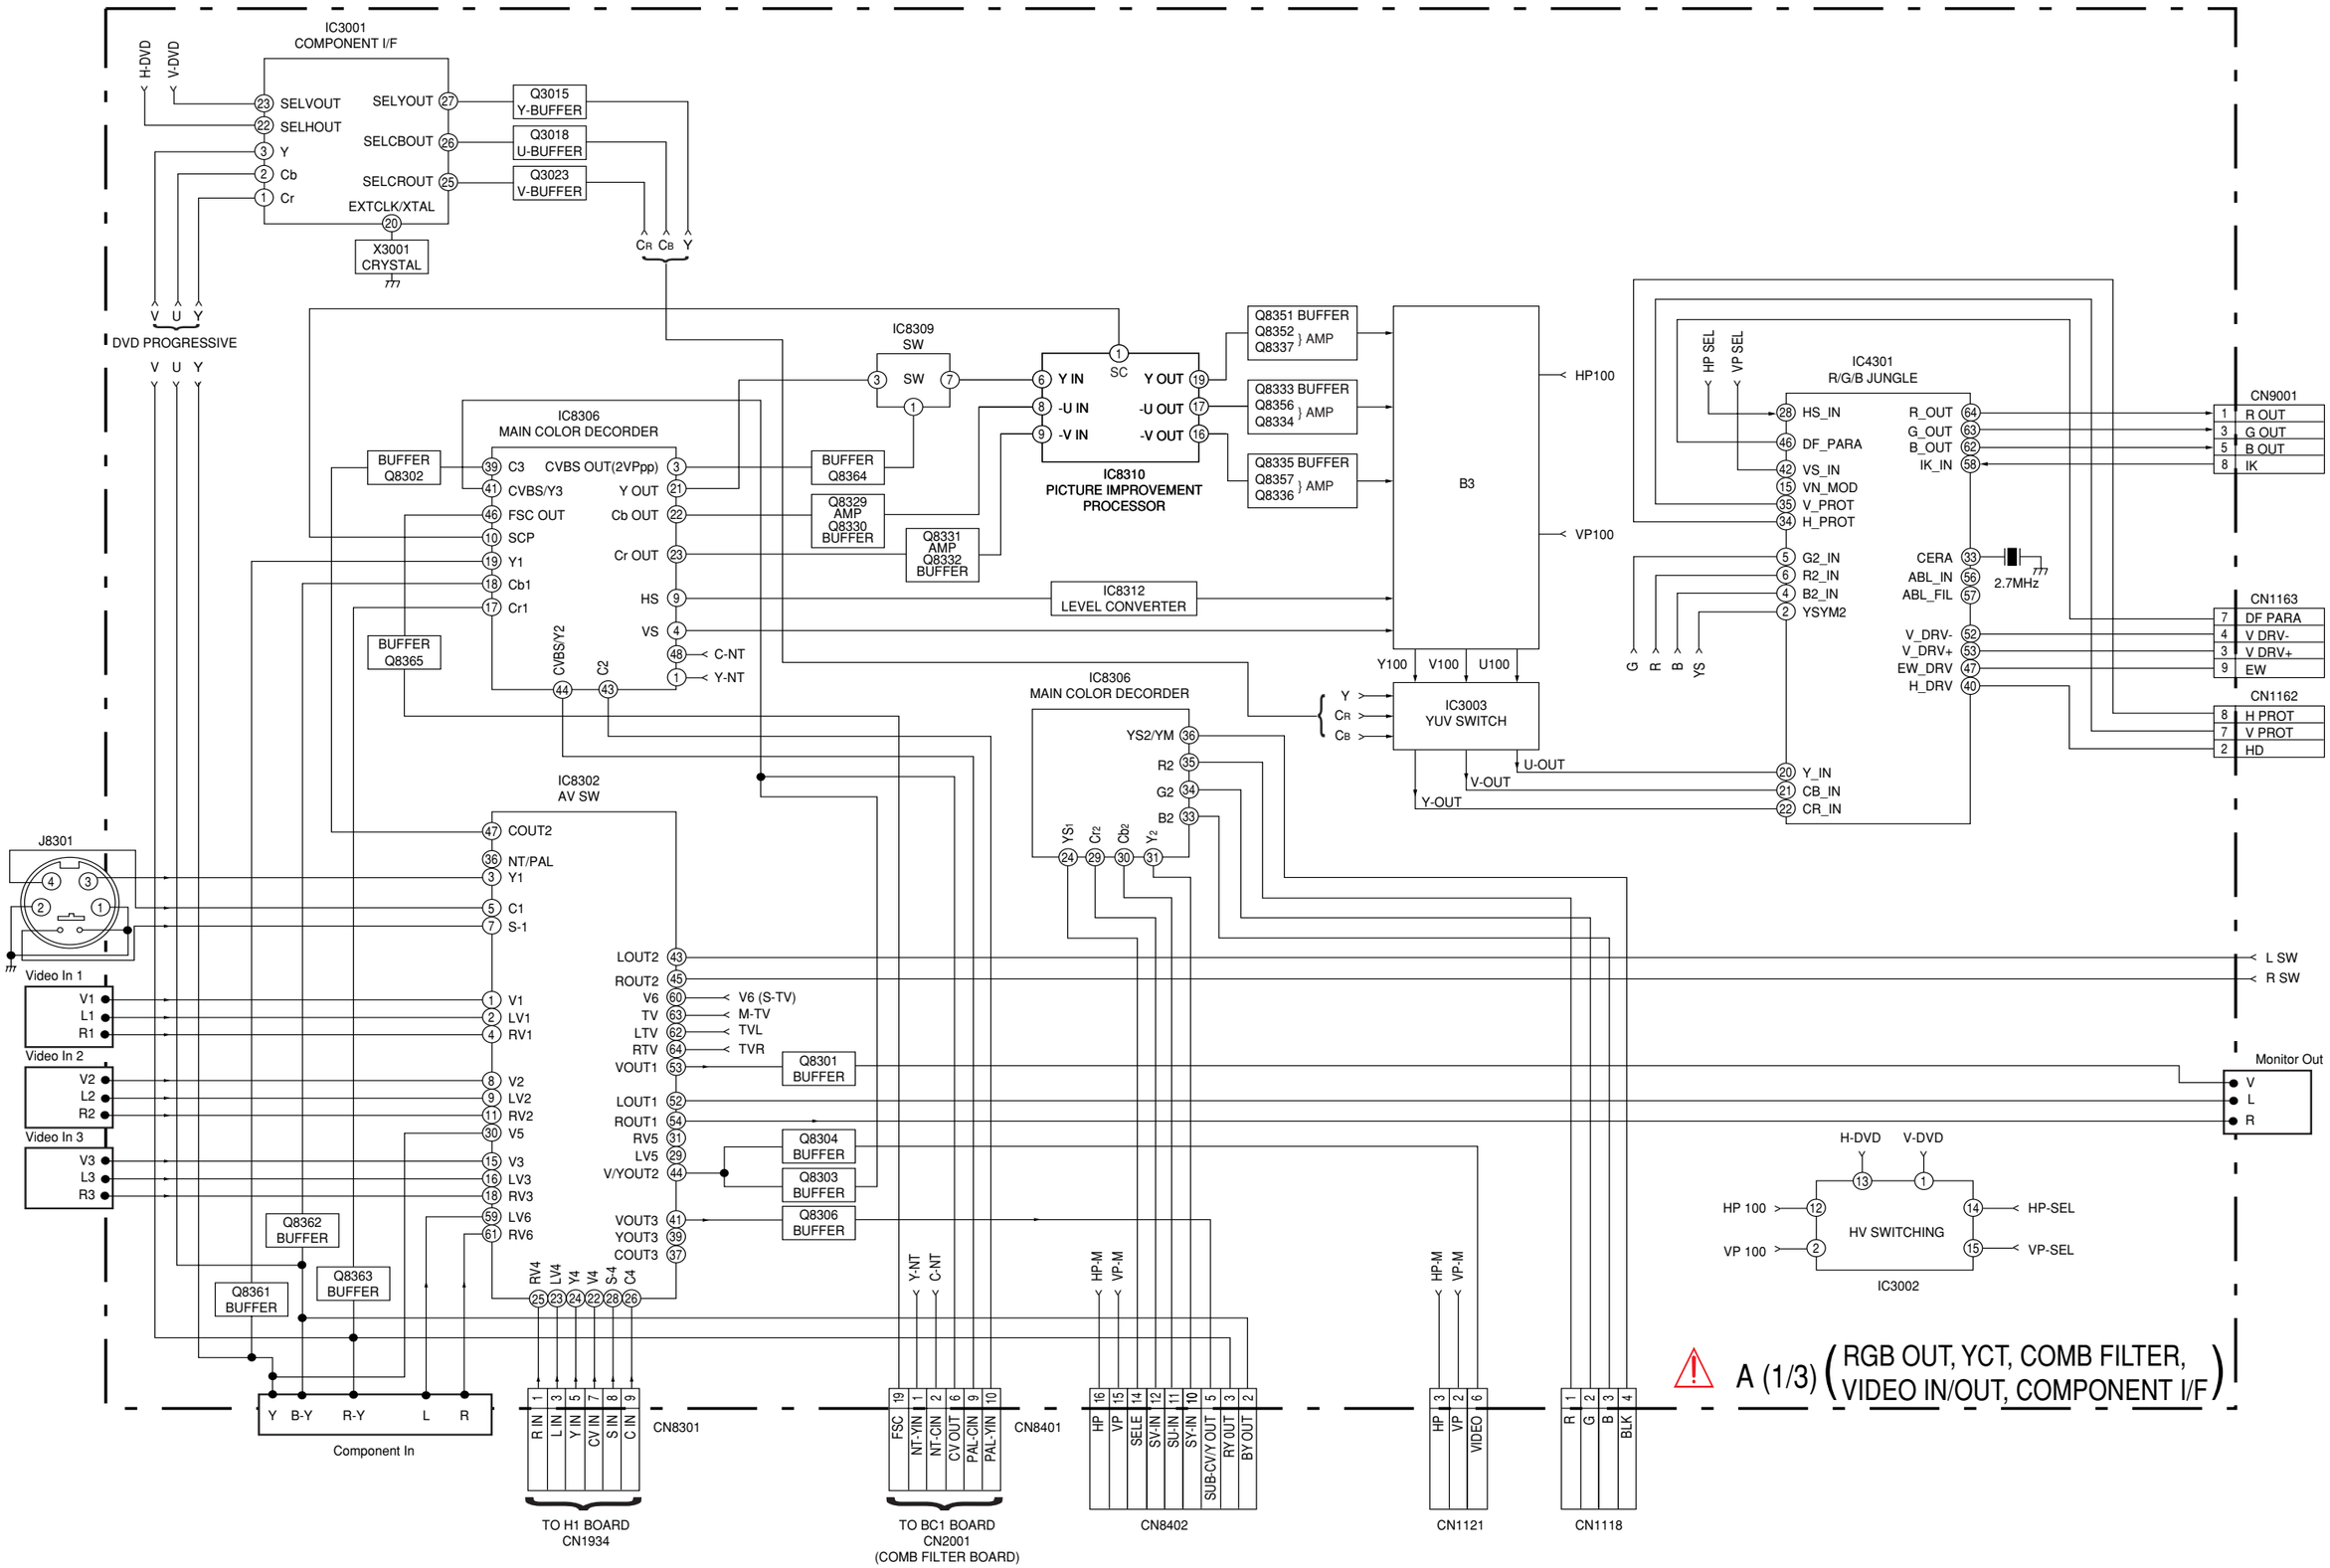

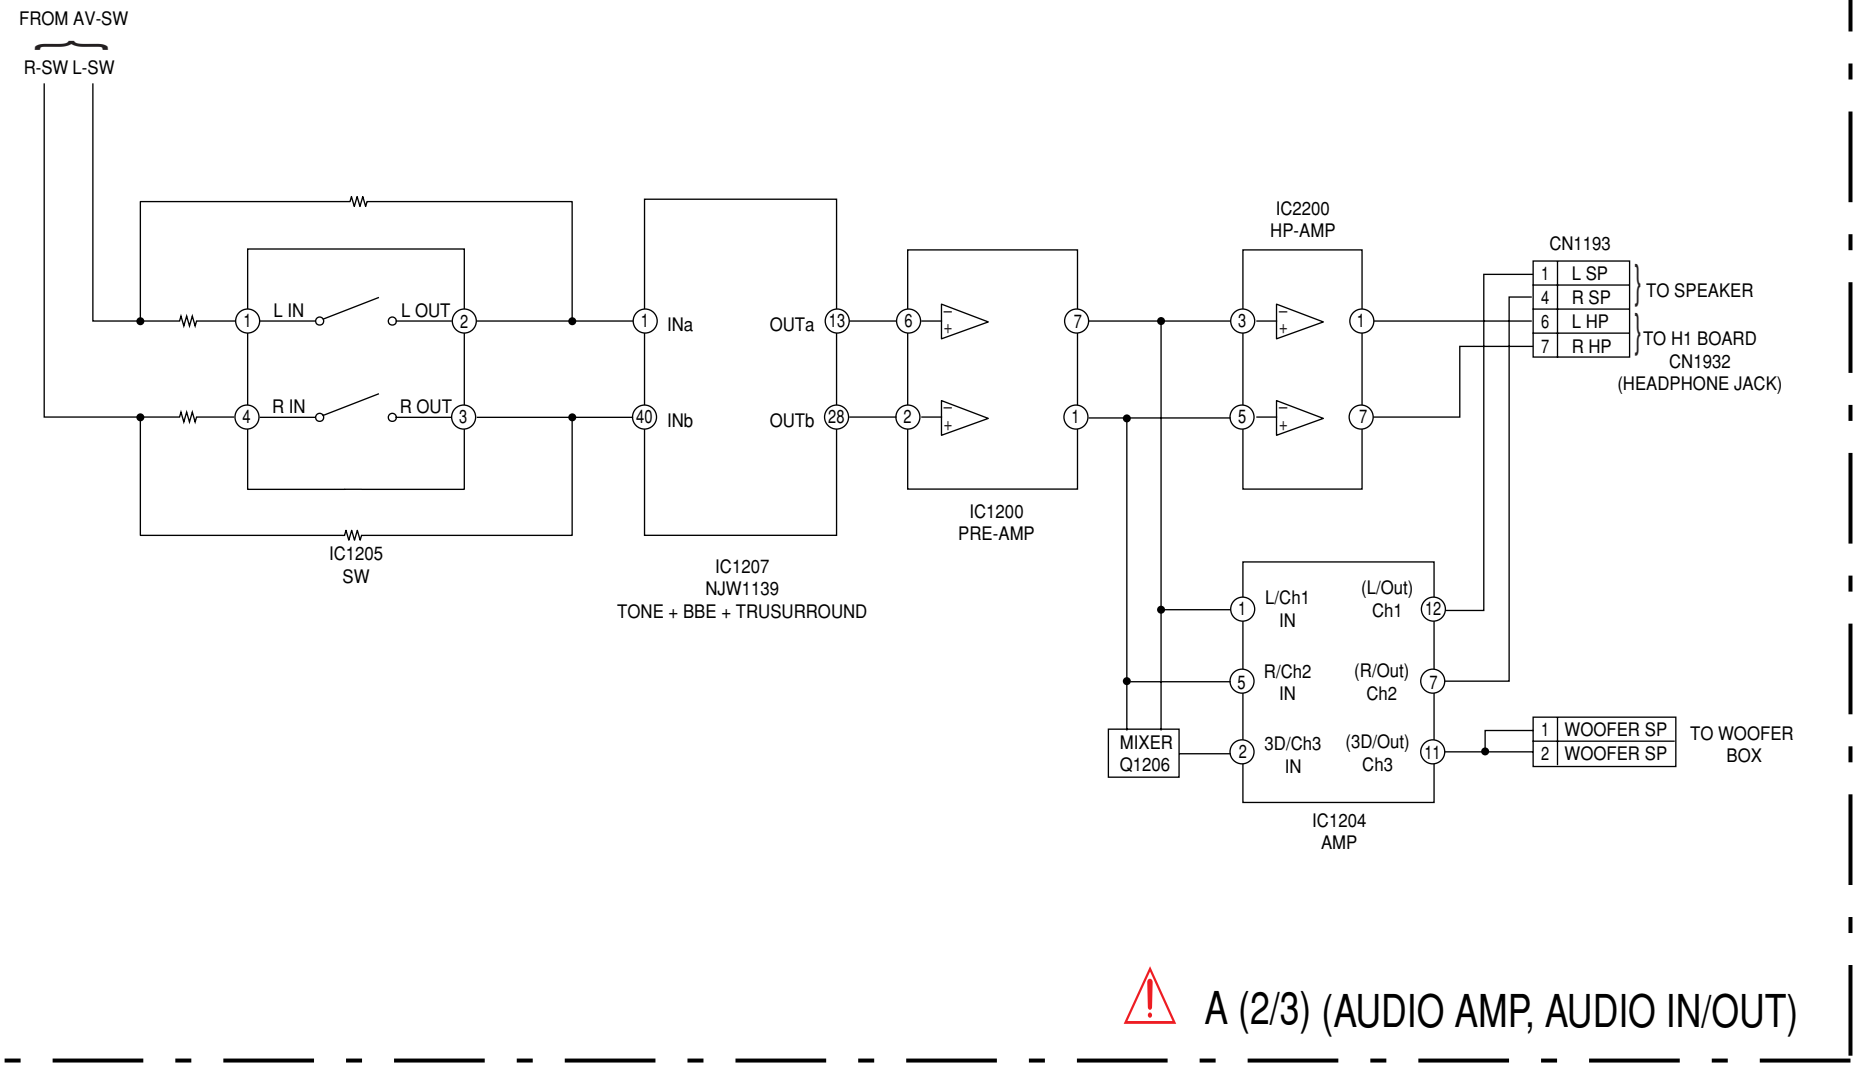
FROM AV-SW
R-SW L-SW
L IN
L OUT
R IN
R OUT
IC1205
SW
INa
INb
OUTa
OUTb
IC1207
NJW1139
TONE + BBE + TRUSURROUND
IC1200
PRE-AMP
IC2200
HP-AMP
CN1193
L SP
R SP
L HP
R HP
TO SPEAKER
TO H1 BOARD
CN1932
(HEADPHONE JACK)
L/Ch1
IN
(L/Out)
Ch1
R/Ch2
IN
(R/Out)
Ch2
MIXER
Q1206
3D/Ch3
IN
(3D/Out)
Ch3
IC1204
AMP
WOOFER SP
WOOFER SP
TO WOOFER
BOX
A (2/3) (AUDIO AMP, AUDIO IN/OUT)

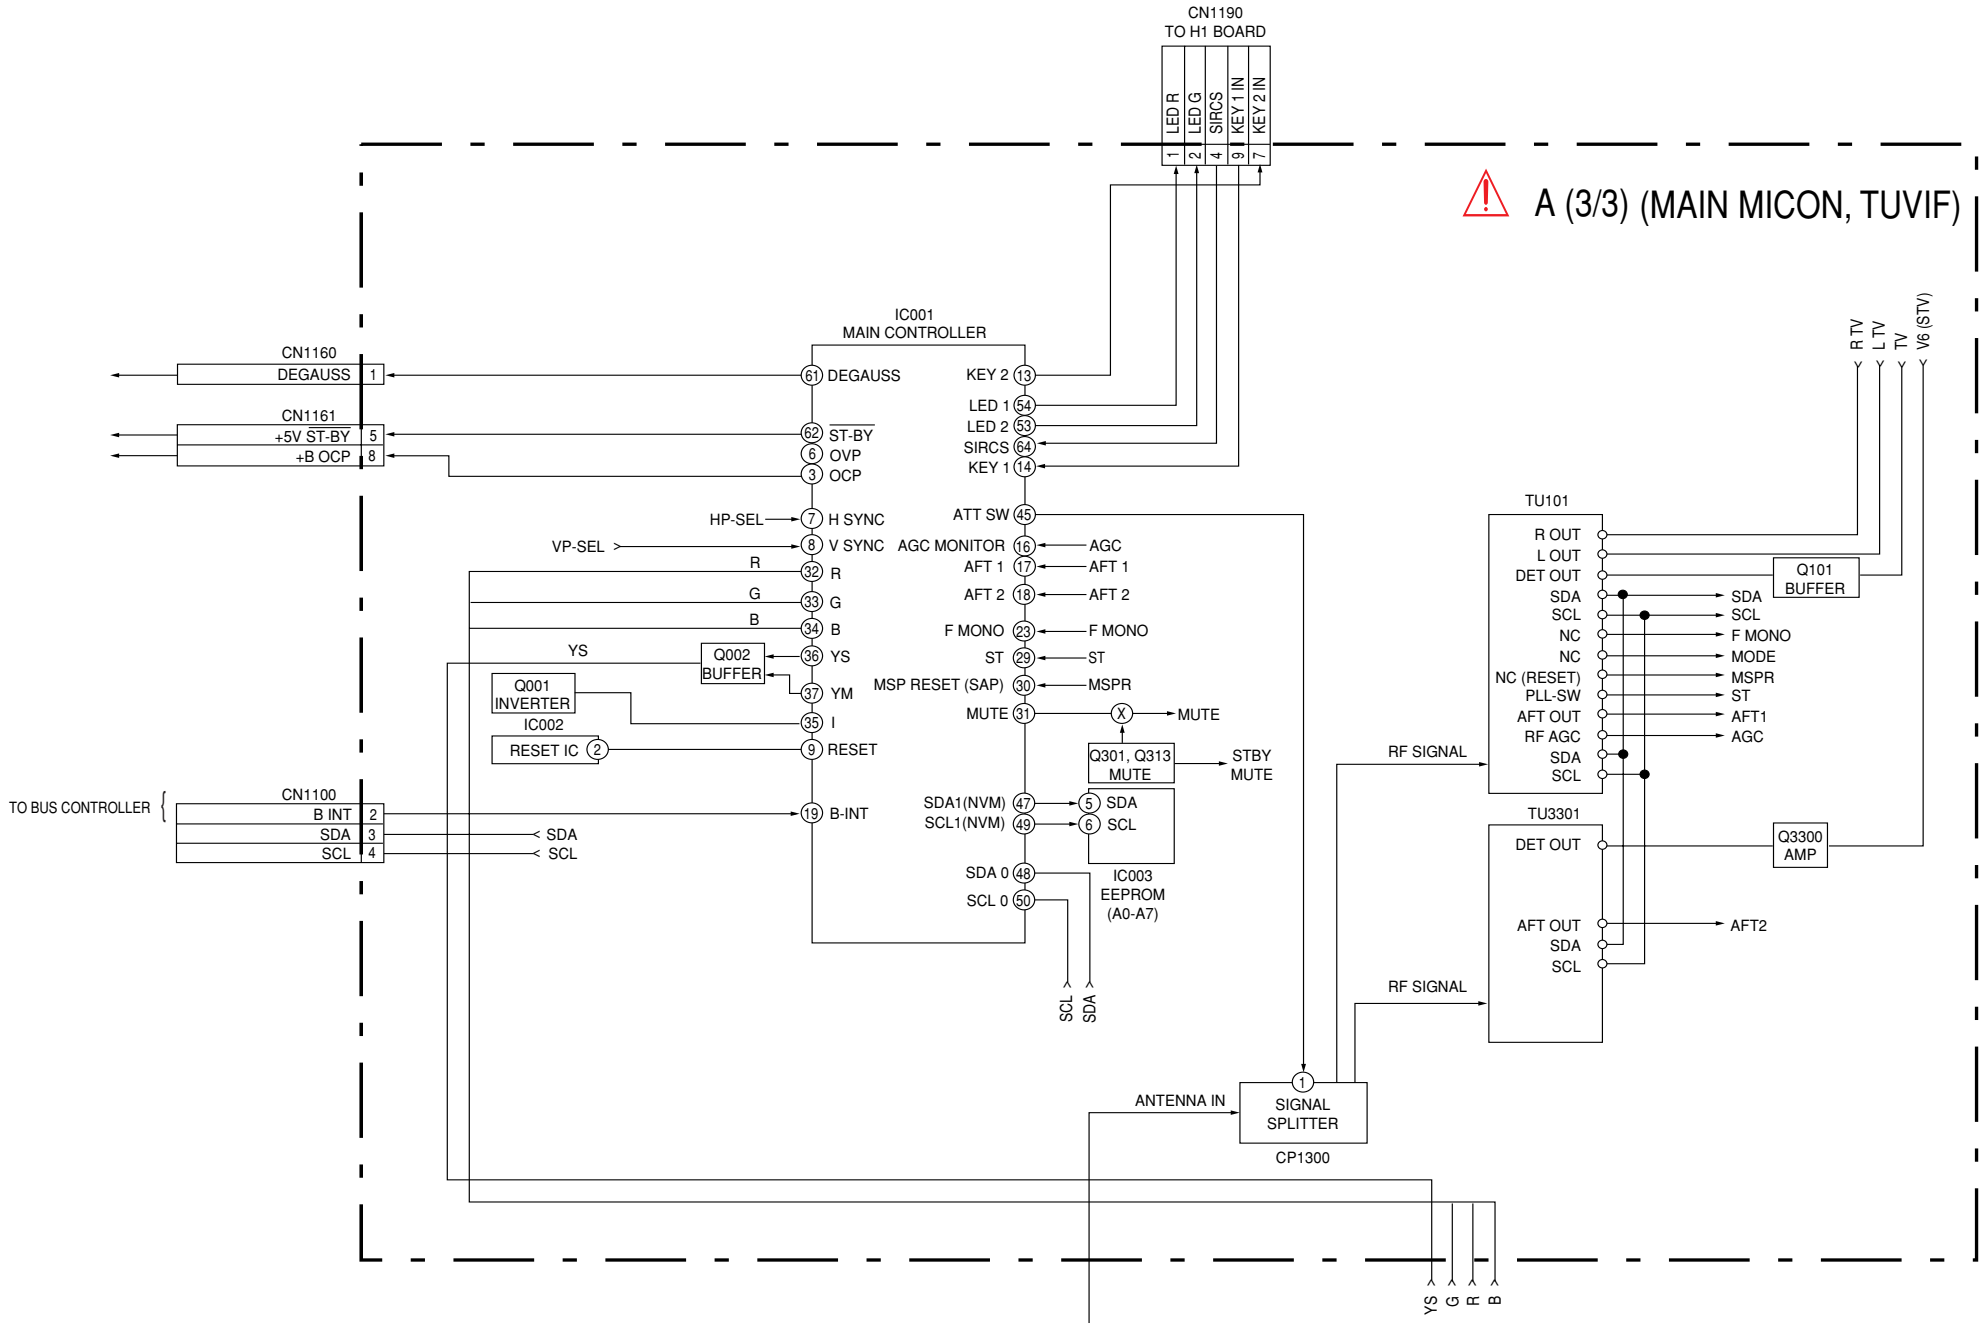
A (3/3) (MAIN MICON, TUVIF)
CN1190
TO H1 BOARD
LED R
LED G
SIRCS
KEY 1 IN
KEY 2 IN
IC001
MAIN CONTROLLER
CN1160
DEGAUSS
CN1161
+5V ST-BY
+B OCP
HP-SEL
VP-SEL
YS
Q002
BUFFER
Q001
INVERTER
IC002
RESET IC
CN1100
TO BUS CONTROLLER
B INT
SDA
SCL
ST-BY
OVP
OCP
H SYNC
V SYNC
R
G
B
YM
I
RESET
B-INT
KEY 2
LED 1
LED 2
SIRCS
KEY 1
ATT SW
AGC MONITOR
AFT 1
AFT 2
F MONO
ST
MSP RESET (SAP)
MUTE
Q301, Q313
MUTE
STBY
MUTE
SDA1(NVM)
SCL1(NVM)
SDA 0
SCL 0
IC003
EEPROM
(A0-A7)
AGC
MSPR
TU101
R OUT
L OUT
DET OUT
NC
NC (RESET)
PLL-SW
AFT OUT
RF AGC
Q101
BUFFER
F MONO
MODE
MSPR
ST
AFT1
AGC
RF SIGNAL
TU3301
DET OUT
AFT OUT
AFT2
Q3300
AMP
ANTENNA IN
SIGNAL
SPLITTER
CP1300
R TV
L TV
TV
V6 (STV)

B3 (DIGITAL REALITY CREATION-MF, 3D NOISE REDUCTION)

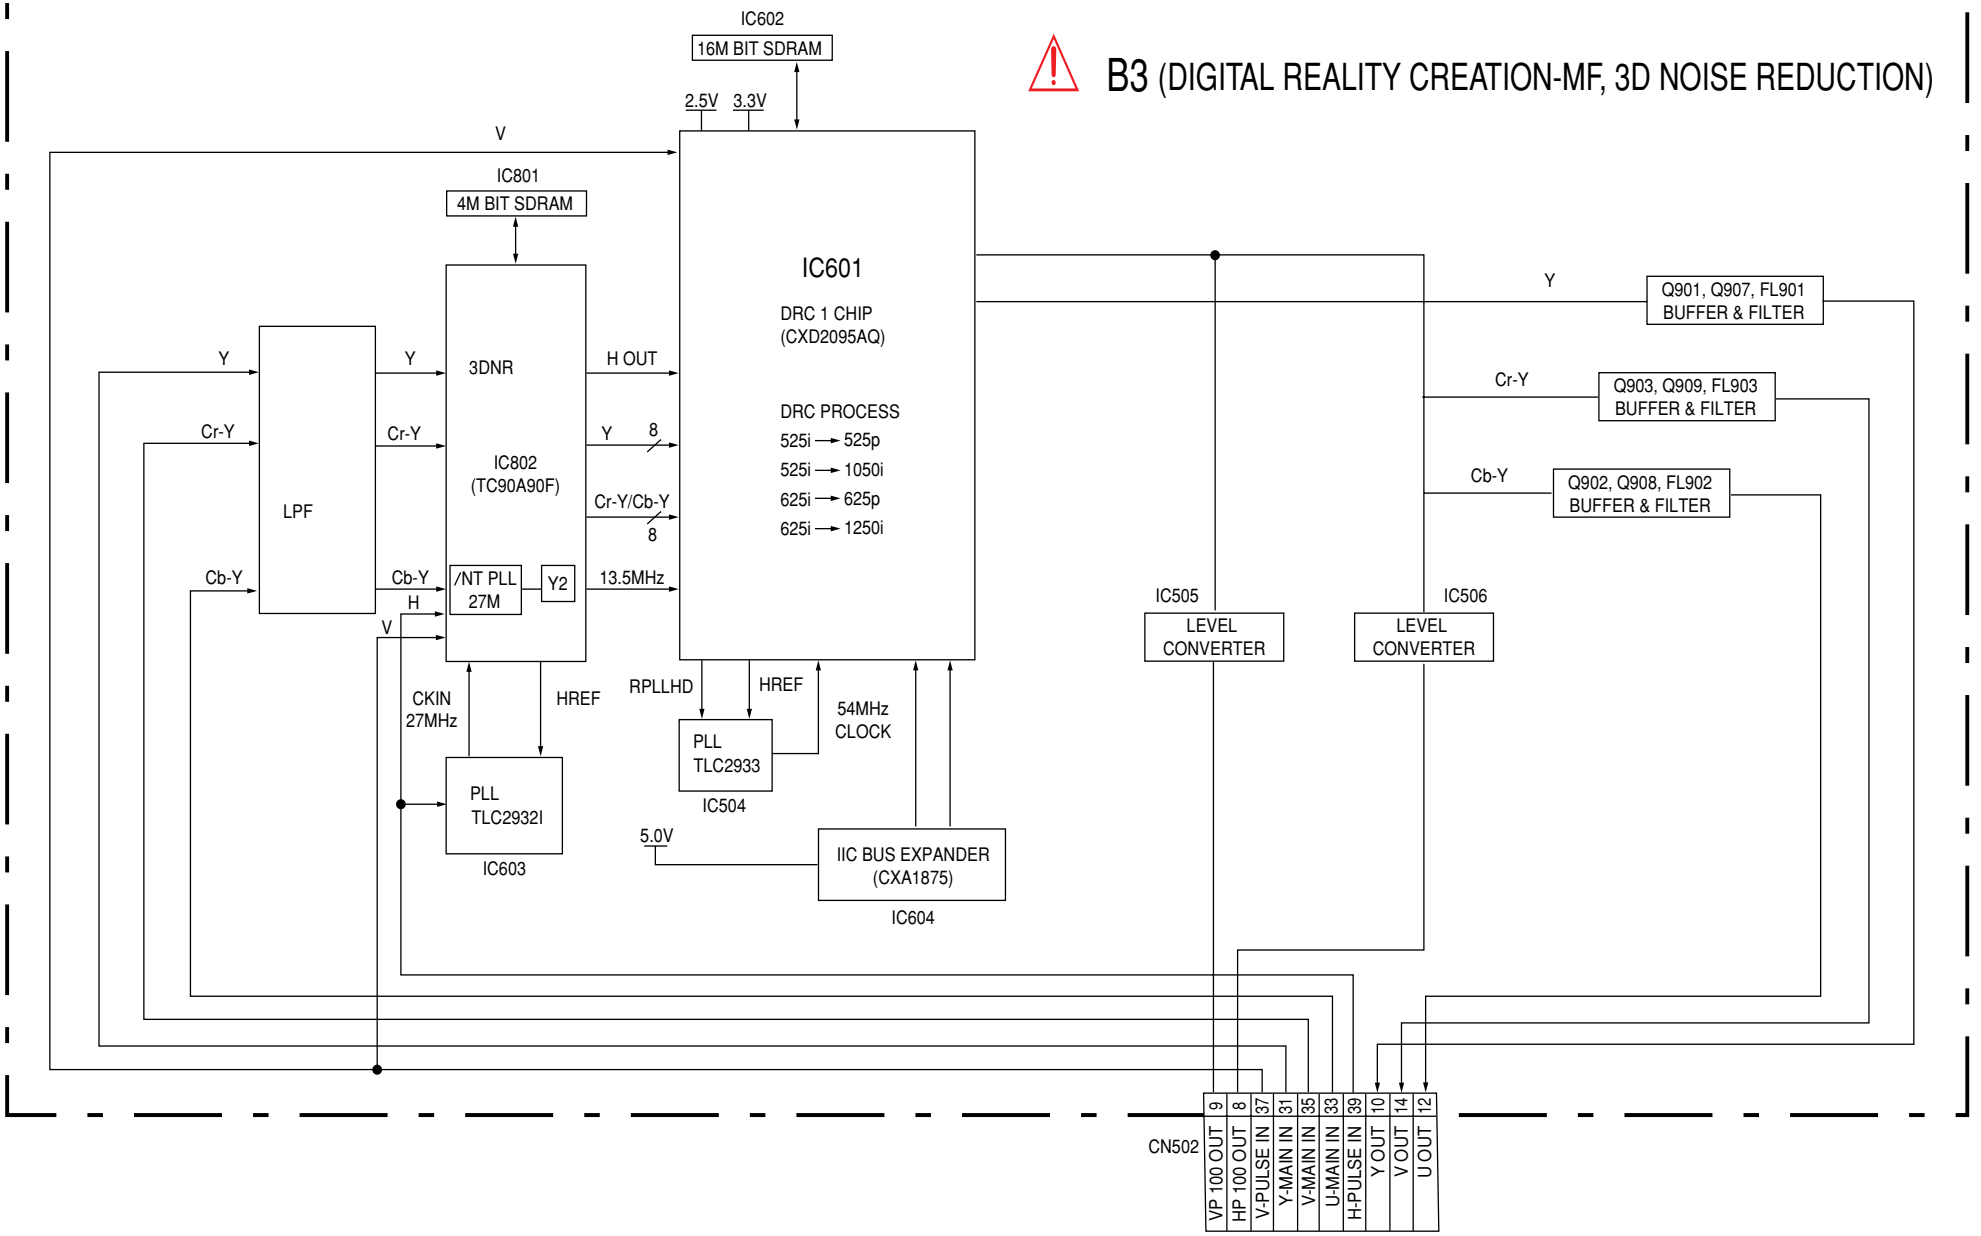

KV-DR34M69/DR34M89
RM-991

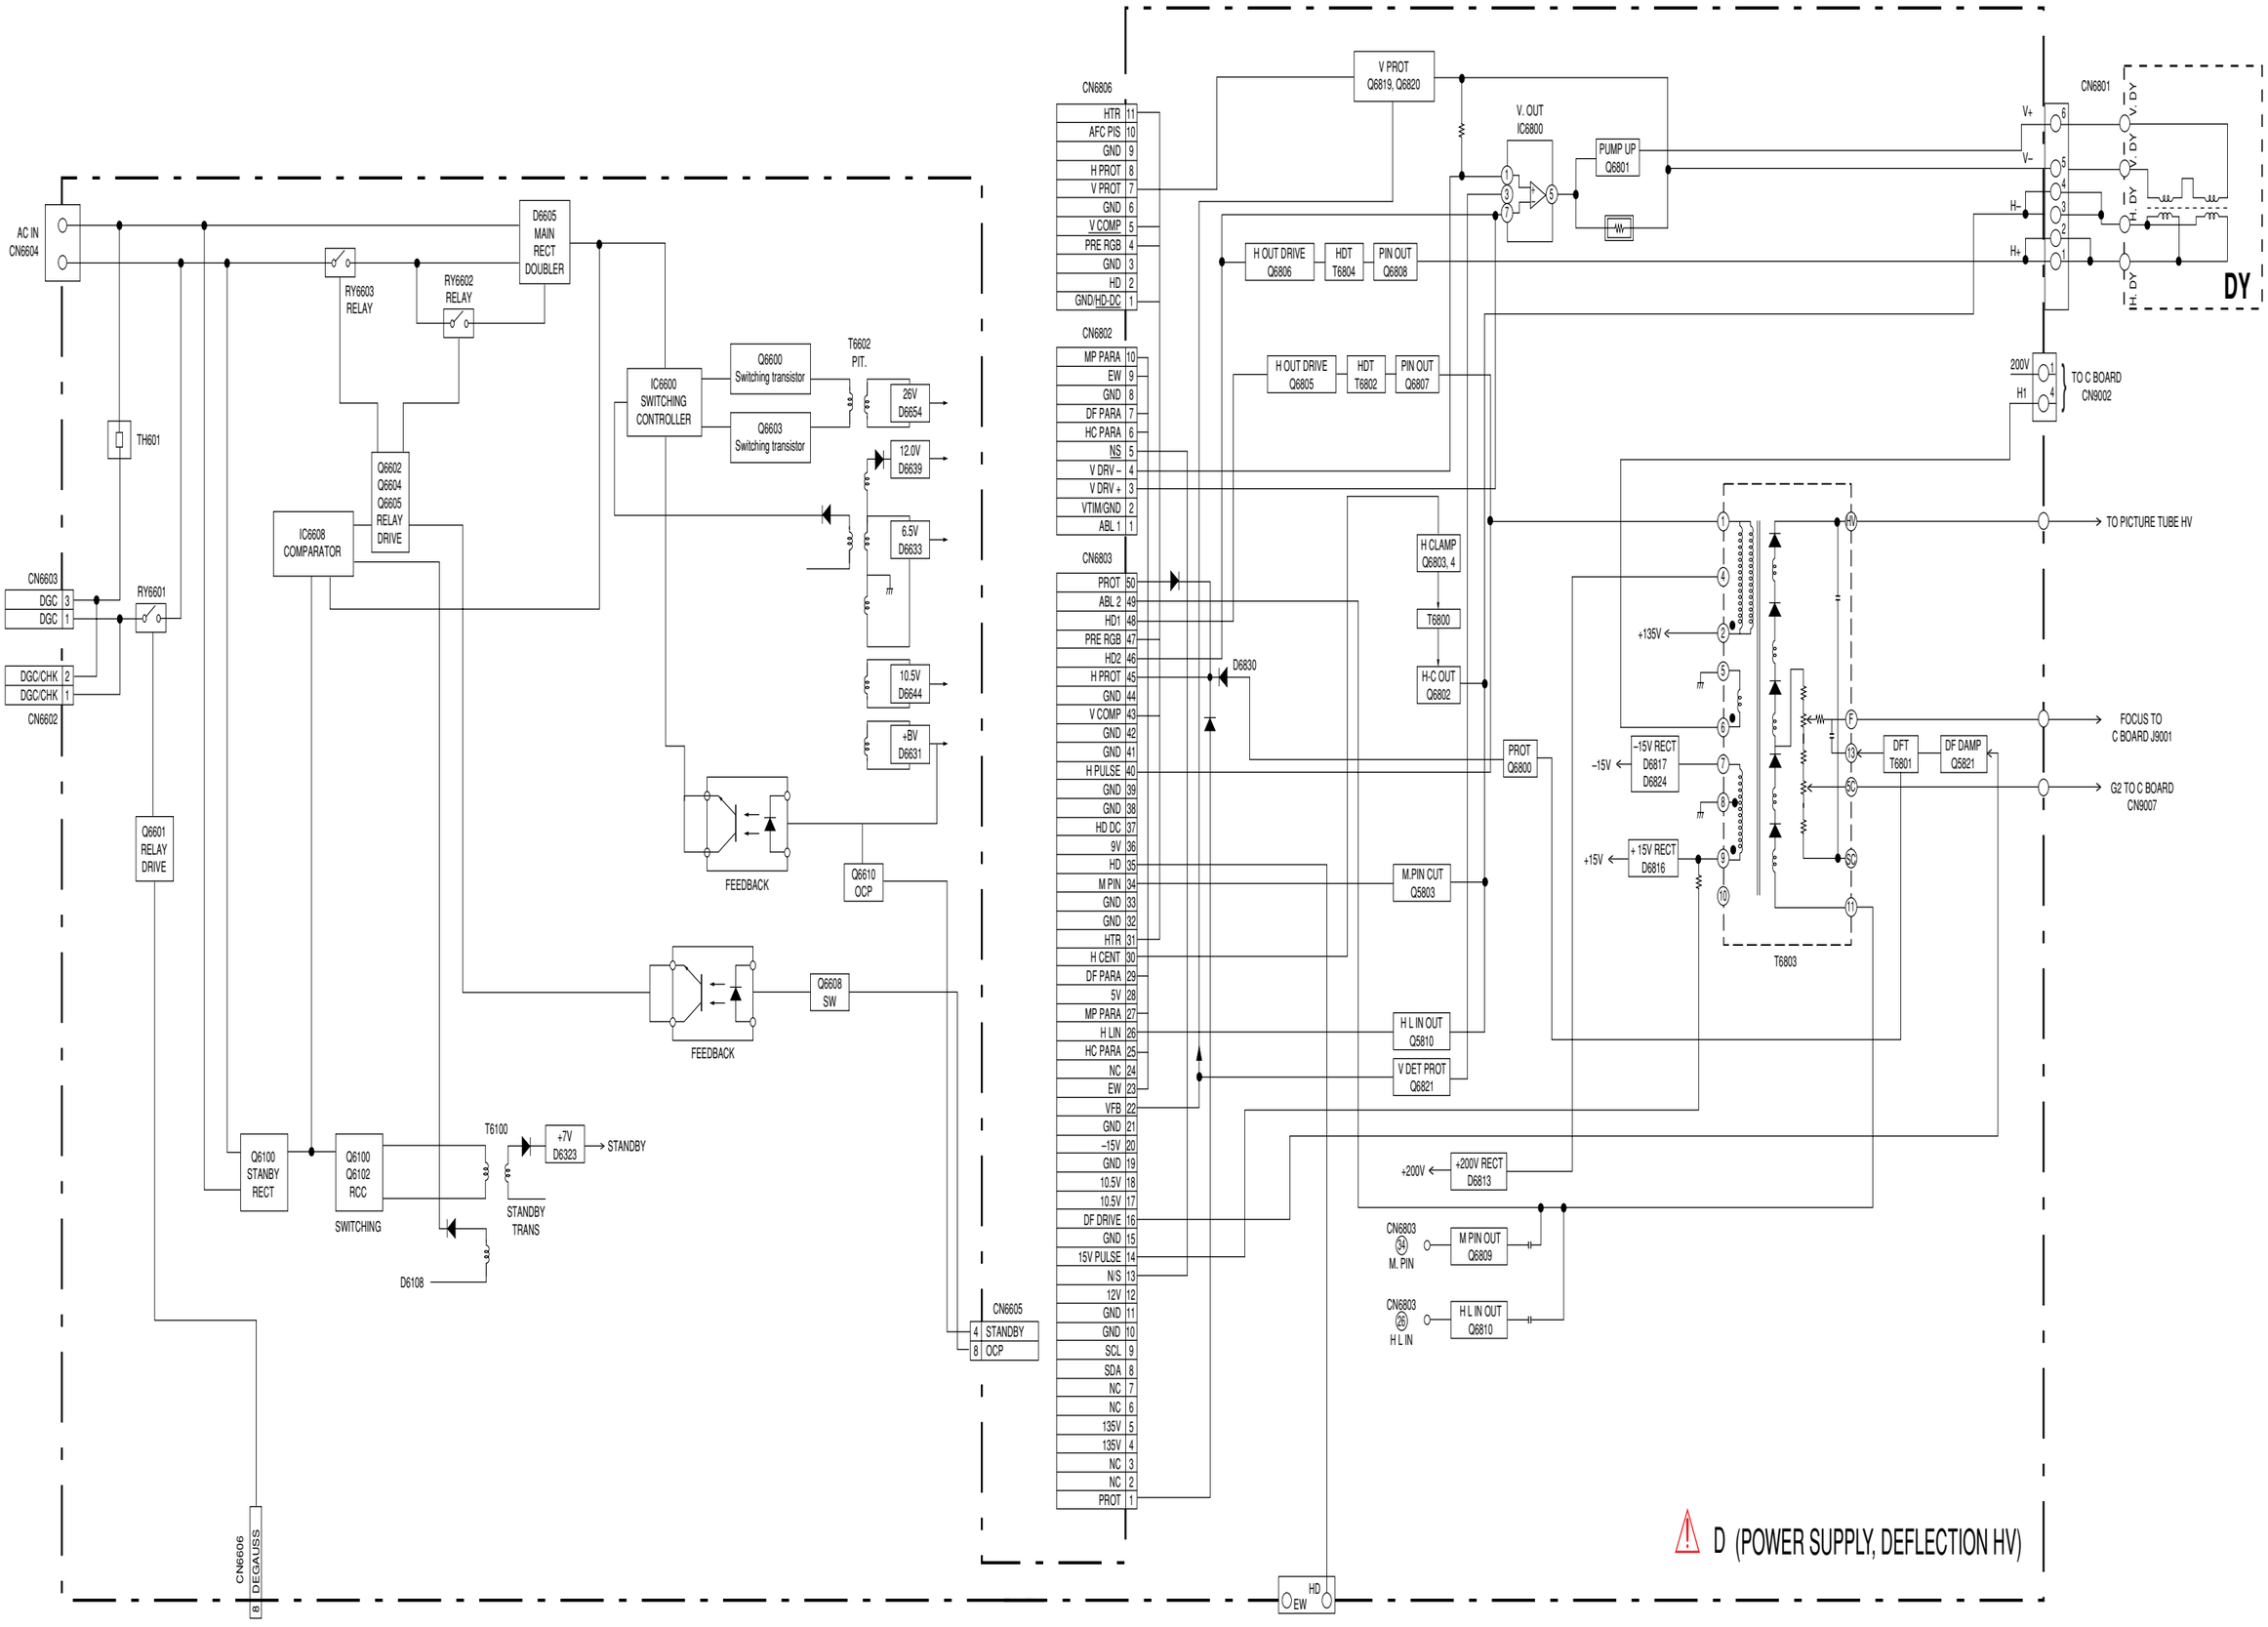

KV-DR34M69/DR34M89
RM-991

D5 (DEFLECTION CONTROL CIRCUIT)

CN6101
8P
WHT
: S-MICRO

8	7	6	5	4	3	2	1
9V	GND	N.C.	QP (–)	N.C.	QP (+)	N.C.	135V

CN6102
3P
BLK
: S-MICRO

3	2	1
ROT COIL (+)	NC	NOT COIL (–)

DQP DRIVE
Q6107
2SB1142-T

IC6501
LA6510 N/S-OUT

IC6205
CXA1875AM
DAC CONT

1	QPDV	VCC	16
2	QPAV	SCL	15
3	HCENT	SDA	14
4	HLIN	SAD 2	13
5	DFPH	SDA 1	12
6	QPPH	SDA 0	11
7	HTR	SW3	10
8	GND	SW2	9

IC6100
UPC-5023
DF/DQP
CONTROL

22	21	20	19	18	17	16	15	14	13	12
DFD	GND	HPIN	GND	OP6P	OP6M	OP6O	VCC1	DQPPOA	DQPVMA	DQPVM

1	2	3	4	5	6	7	8	9	10	11
ISEL	HSAW IN	HSAW	GND	DQPD	9VD	VCC2	DQPPHA	DFPHA	DQPAA	NC

Q6104
IRF1720-LF49
DQP (DC)
DRIVE

H LIN, DRIVE
Q6213/Q6212
MSD601-RT1/
2PB709AR

IC6201
LM393N
M. PIN CONP

IC6401
LM393N
HD COMP

H SIZE DETECT
Q6418/D6411
C6427

IC6402
UPC1898
HIP SYSTEM CONTROL

1	HD IN	VCC	28
2	SAW 1	HD1 OUT	27
3	SAW 2	HD2 OUT	26
4	SAW 3	SS	25
5	FH SELECT	HD1 DELAY SET	24
6	VRFF	DUTY	23
7	HST	PROT REF	22
8	EW	DY	21
9	HS AMP OUT	PIN OUT	20
10	HS CONT	LIMIT TIME	19
11	CENT	+B SENSE	18
12	L IN PARA	PWMSAW	17
13	CENT OUT	MP PARA	16
14	L IN OUT	H PULSE	15
15	GND	MP OUT	16

PROT DETECT
Q6414/Q6415
2PB709AR/
MSD601-RT

HDI. DRIVE
Q6413/Q6412
MSD601-RT1/
2PB709AR

HDZ. DRIVE
Q6410/Q6409
MSD601-RT1/
2PB709AR

HZ00MING /PIN. CONTROL
Q6422/Q6423/Q6424
Q6425
Q6417/Q6419/Q6420
Q6421/others

H PIN DRIVE
Q6215/Q6216
MSD601-RT1/
2PB709AR

CN6100
50P

1	PROT
2	NC
3	NC
4	135V
5	135V
6	NC
7	NC
8	SDA
9	SCL
10	GND
11	GND
12	12V
13	N/S
14	15V PULSE
15	GND
16	DF DRIVE
17	10.5V
18	10.5V
19	GND
20	–15V
21	GND
22	VFB
23	EW
24	NC
25	HC PARA
26	HL IN
27	MP PARA
28	5V
29	DF PARA
30	H CENT
31	HTR
32	GND
33	GND
34	M PIN
35	HD
36	9V
37	HD DC
38	GND
39	GND
40	H PULSE
41	GND
42	GND
43	V COMP
44	GND
45	H PROT
46	HD2
47	PRE RGB
48	HD 1
49	ABL (LARGE)
50	PROT

7-2. SCHEMATIC DIAGRAMS

Note:

- All capacitors are in µF unless otherwise noted.
- All electrolytic capacitors are rated at 50V unless otherwise noted.
- All resistors are in ohms.
  kΩ = 1000Ω, MΩ = 1000kΩ
- Indication of resistance which does not have rating electrical power is as follows.

  Pitch: 5 mm
  Rating electrical power 1/4W (CHIP: 1/10W)

- : nonflammable resistor.
- △ : internal component.
- : panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B unless otherwise noted.
- **Readings are taken with a color-bar signal input.**
  no mark : Common
  ( ) : PAL
  [ ] : NTSC 3.58
- **Readings are taken with a 10Ω digital multimeter.**
- **Voltage are dc with respect to ground unless otherwise noted.**
- **Voltage variations may be noted due to normal production tolerances.**
- **All voltages are in V.**
- * **: Cannot be measured.**
- **Circled numbers are waveform references.**
- **: B + bus.**
- **: B – bus.**
- **: signal path.**

Reference information

RESISTOR	: RN	METAL FILM
	: RC	SOLID
	: FPRD	NONFLAMMABLE CARBON
	: FUSE	NONFLAMMABLE FUSIBLE
	: RS	NONFLAMMABLE METAL OXIDE
	: RB	NONFLAMMABLE CEMENT
	: RW	NONFLAMMABLE WIREWOUND
	: ✻	ADJUSTMENT RESISTOR
COIL	: LF-8L	MICRO INDUCTOR
CAPACITOR	: TA	TANTALUM
	: PS	STYROL
	: PP	POLYPROPYLENE
	: PT	MYLAR
	: MPS	METALIZED POLYESTER
	: MPP	METALIZED POLYPROPYLENE
	: ALB	BIPOLAR
	: ALT	HIGH TEMPERATURE
	: ALR	HIGH RIPPLE

Note: The component identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

KV-DR34M69/DR34M89
RM-991

(1) A Board Schematic Diagrams

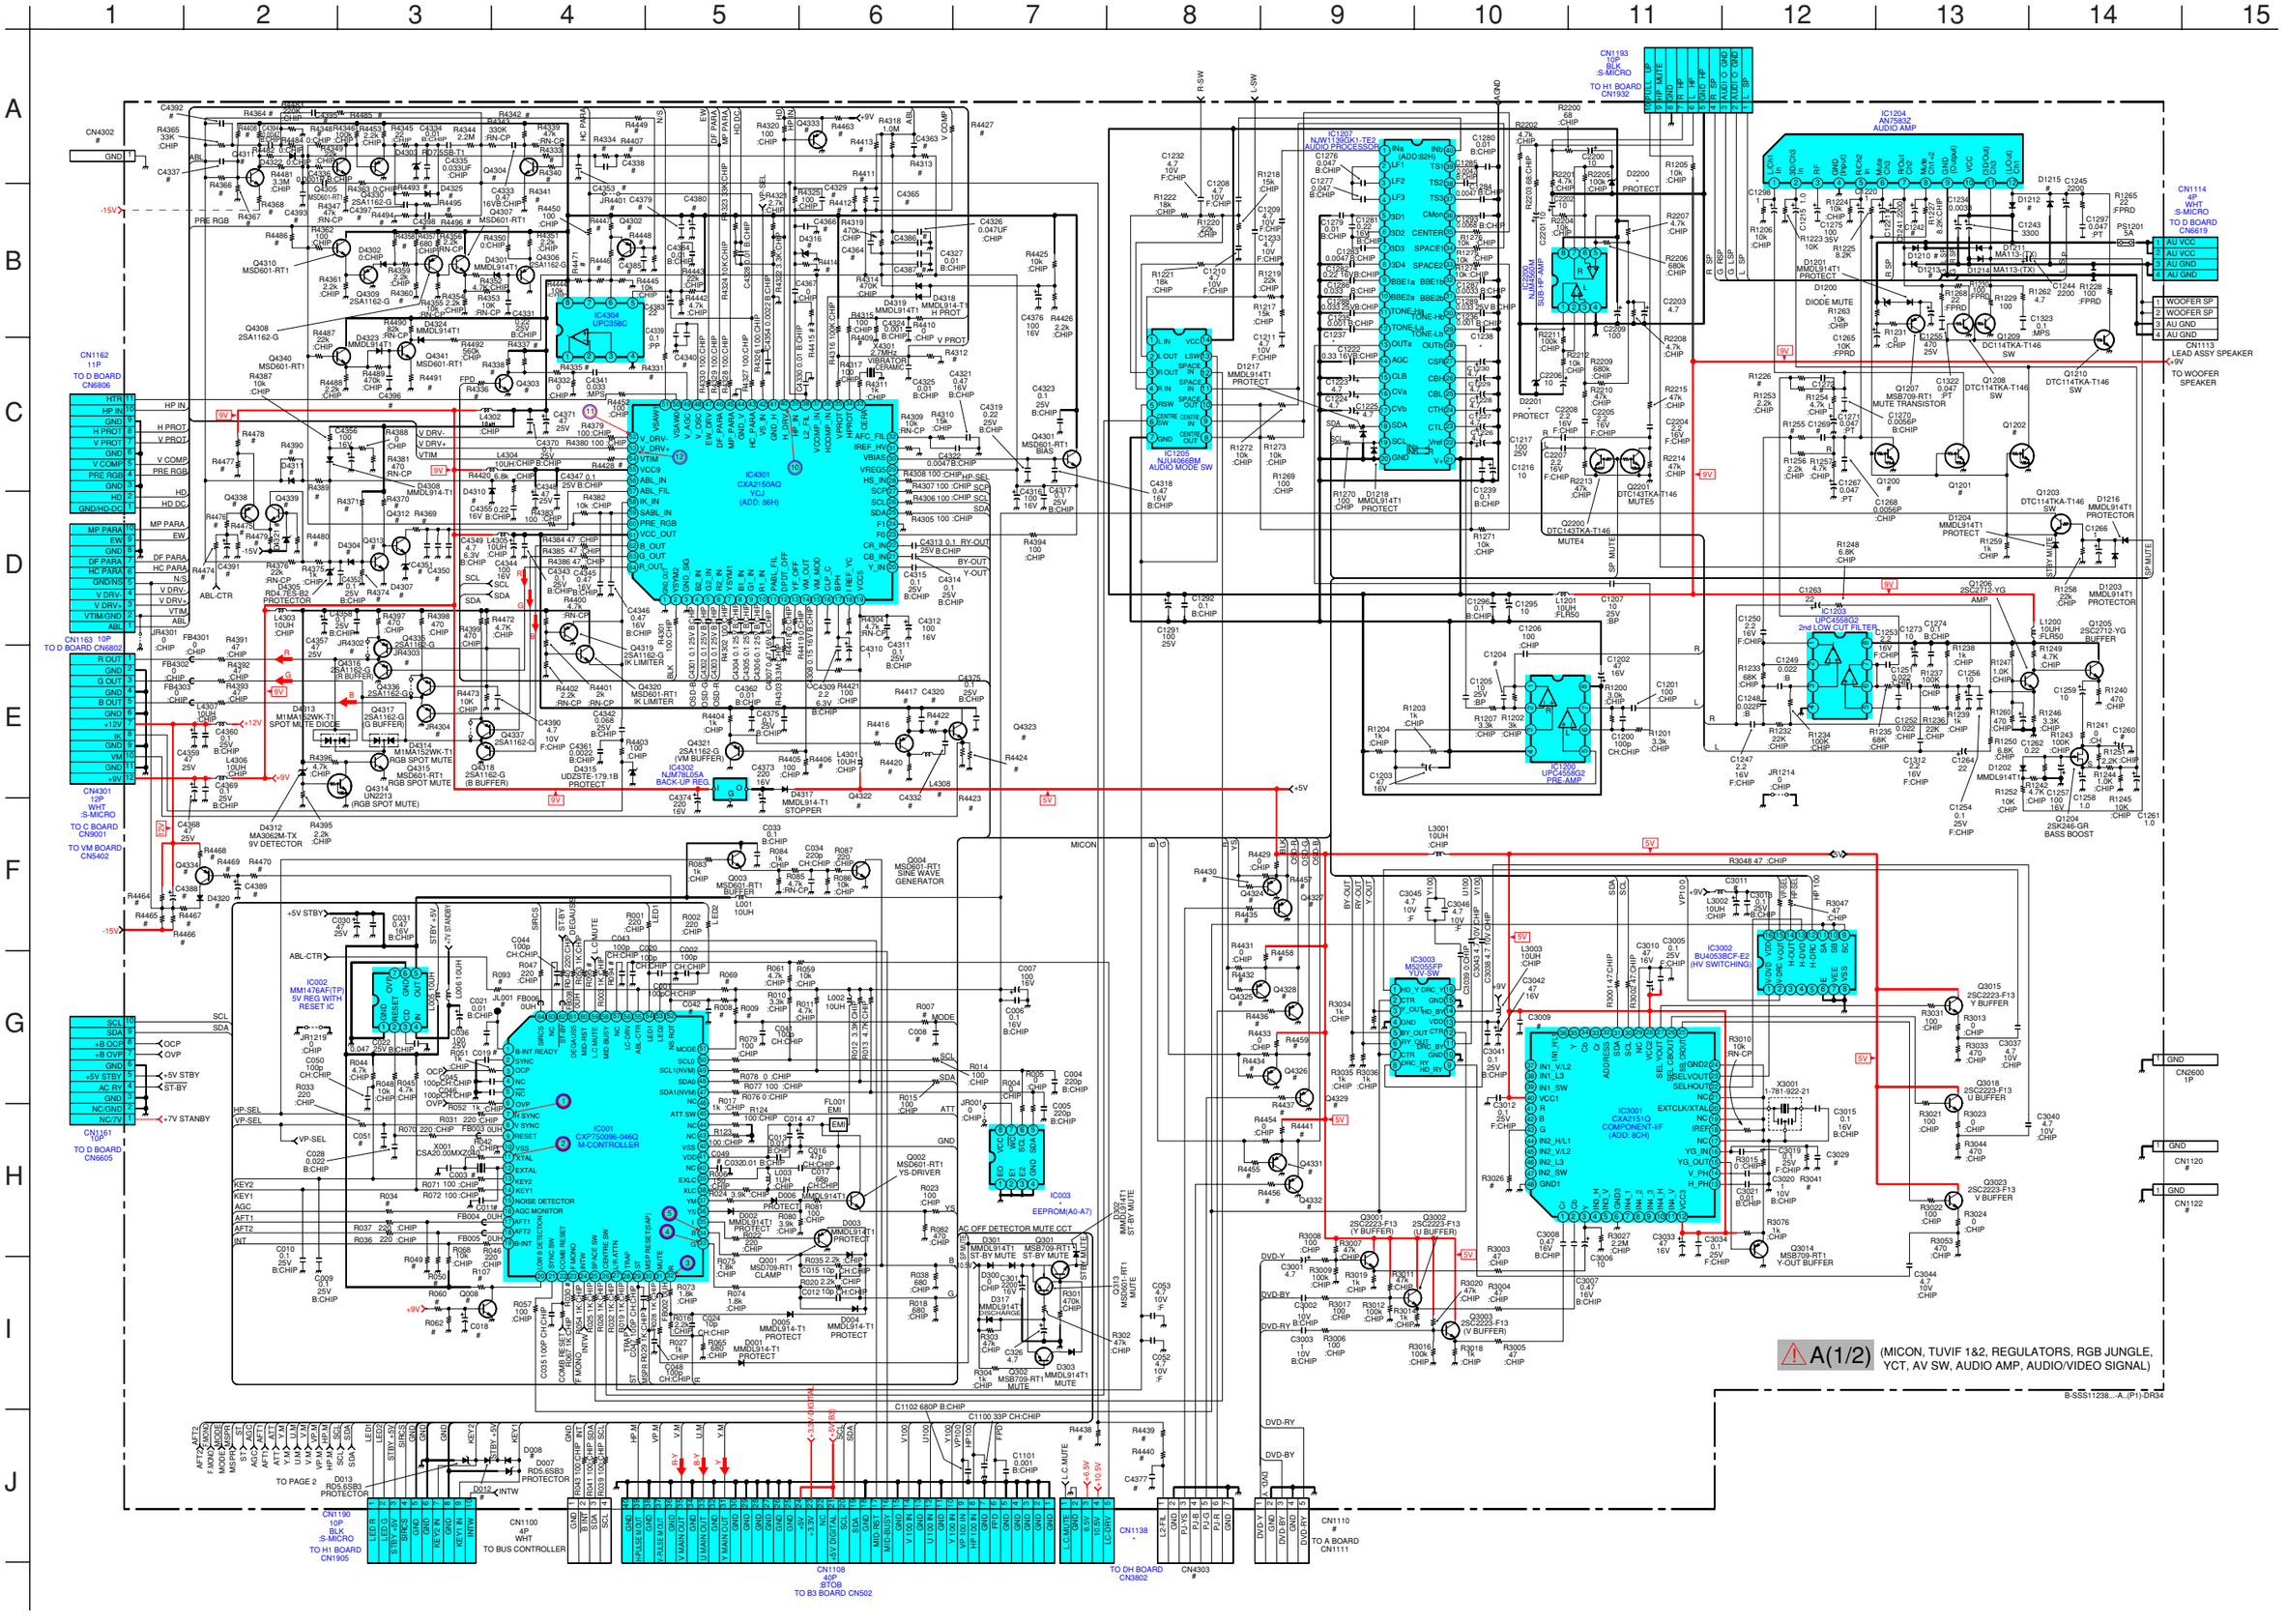

KV-DR34M69/DR34M89
RM-991

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

A B C D E F G H I J

CN8401 20P :BTOB TO BC1 BOARD CN2001

CN1118 7P :BTOB TO V2 BOARD CN5801 (TEXT)

CN1121 7P :BTOB TO V2 BOARD CN5803 (TEXT)

CN8402 20P :BTOB TO P BOARD CN8801 (PIP)

CN8301 10P WHT :S-MICRO TO H1 BOARD CN1834

CN8302 8P WHT :S-MICRO TO J BOARD CN2410

CN1111 TO A BOARD CN1110

CN1117 3P TO CP1300

CN1116 1P :FASTEN

CN1160 10P TO D BOARD CN6606

IC8306 CXA2163AQ-T6 COLOR DECODER (ADD: 88H)

IC8302 CXA2069Q AV SW (ADD: 90H)

IC8312 TC7SET08FU(TE85) NAND GATE

IC8309 MM1115XFBE NOISE DETECTOR

IC8310 TDA9178 (ADD: 40H) LTI IC

IC100 S-80743AL-A7-S MSP RESET

IC2600 PQ09RF2 9V REG.

IC2601 PQ05RF2 +5V REG

IC2602 #

IC2603 BA033FP-E2 3.3V REG.

TU101 TU3301 BTF-LG434

Q8302 MSD601-RT1 BUFFER

Q8303 MSD601-RT1 BUFFER

Q8304 MSD601-RT1 BUFFER

Q8306 MSB709-RT1 BUFFER

Q8301 MSB709-RT1 DRIVER

Q8305 MSB709-RT1 Y-PEAKING

Q8307 MSD601-RT1 AMP

Q8365 MSD601-RT1

Q8364 MSB709-RT1 LEVEL ADJUSTER

Q8310 MSD601-RT1 DRIVER

Q8327 UN2213 SWITCH

Q8328 UN2213 SWITCH

Q8320 MSB709-RT1 DRIVER

Q8361 MSD601-RT1 BUFFER

Q8362 MSD601-RT1 BUFFER

Q8363 MSD601-RT1 BUFFER

Q8330 MSD601-RT1 BUFFER

Q8332 MSD601-RT1 BUFFER

Q8331 MSD601-RT1

Q8334 MSD601-RT1 INVERTER AMP.

Q8335 MSD601-RT1 INVERTER AMP.

Q8336 MSD601-RT1 INVERTER AMP.

Q8326 MSD601-RT1 SLICER

Q8351 MSD601-RT1 Y-AMP

Q8352 MSB709-RT1 Y-AMP

Q8337 MSD601-RT1 INVERTER AMP.

Q8333 MSD601-RT1 INVERTER AMP.

Q8339 MSD601-RT1 INVERTER

Q8358 MSD601-RT1 INVERTER AMP.

Q8359 MSD601-RT1 INVERTER AMP.

Q8360 MSD601-RT1 INVERTER AMP.

D8331 MA113-(TX) DROPPER

D100 MMDL914-T1

FL8312 FL8303 FL8301 FL8304 FL8305 FL8311 EMI

L8306 L8302 L8303 L8304 L8305

X8301 16.2MHz

FB1300 0:CHIP

J8301 S TERMINAL

J8302 12P

VIDEO IN 1 / L/MONO / AUDIO

VIDEO IN 2 / L/MONO / AUDIO

VIDEO IN 3 / L/MONO / AUDIO

VIDEO OUT MONITOR / L/MONO / AUDIO R

D8301 D8302 D8303 D8304 D8305 D8306 D8307 D8308 D8309 D8310 D8311 D8312 D8313 D8314 D8315 D8316 D8321 D8322 D8323 D8324 D8325 D8326 D8327 D8328 D8329 D8330 D8331 D8332 D8333 D8334 D8335 D8336 D8337 D8338 D8339 D8340 D8341 D8342 D8343 D8344 D8345 D8346 D8347 D8348 D8349 D8350 D8351 D8352 D8353 D8354 D8355 D8356 D8357 D8358 D8359 D8360 D8361 D8362 D8363 D8364 D8365 D8366 D8367 D8368 D8369 D8370 D8371 D8372 D8373 D8374 D8375 D8376 D8377 D8378 D8379 D8380 D8381 D8382 D8383 D8384 D8385 D8386 D8387 D8388 D8389 D8390 D8391 D8392 D8393 D8394 D8395 D8396 D8397 D8398 D8399 D8400 D8401 D8402 D8403 D8404 D8405 D8406 D8407 D8408 D8409 D8410 D8411 D8412 D8413 D8414 D8415 D8416 D8417 D8418 D8419 D8420 D8421 D8422 D8423 D8424 D8425 D8426 D8427 D8428 D8429 D8430 D8431 D8432 D8433 D8434 D8435 D8436 D8437 D8438 D8439 D8440 D8441 D8442 D8443 D8444 D8445 D8446 D8447 D8448 D8449 D8450 D8451 D8452 D8453 D8454 D8455 D8456 D8457 D8458 D8459 D8460 D8461 D8462 D8463 D8464 D8465 D8466 D8467 D8468 D8469 D8470 D8471 D8472 D8473 D8474 D8475 D8476 D8477 D8478 D8479 D8480 D8481 D8482 D8483 D8484 D8485 D8486 D8487 D8488 D8489 D8490 D8491 D8492 D8493 D8494 D8495 D8496 D8497 D8498 D8499 D8500 D8501 D8502 D8503 D8504 D8505 D8506 D8507 D8508 D8509 D8510 D8511 D8512 D8513 D8514 D8515 D8516 D8517 D8518 D8519 D8520 D8521 D8522 D8523 D8524 D8525 D8526 D8527 D8528 D8529 D8530 D8531 D8532 D8533 D8534 D8535 D8536 D8537 D8538 D8539 D8540 D8541 D8542 D8543 D8544 D8545 D8546 D8547 D8548 D8549 D8550 D8551 D8552 D8553 D8554 D8555 D8556 D8557 D8558 D8559 D8560 D8561 D8562 D8563 D8564 D8565 D8566 D8567 D8568 D8569 D8570 D8571 D8572 D8573 D8574 D8575 D8576 D8577 D8578 D8579 D8580 D8581 D8582 D8583 D8584 D8585 D8586 D8587 D8588 D8589 D8590 D8591 D8592 D8593 D8594 D8595 D8596 D8597 D8598 D8599 D8600 D8601 D8602 D8603 D8604 D8605 D8606 D8607 D8608 D8609 D8610 D8611 D8612 D8613 D8614 D8615 D8616 D8617 D8618 D8619 D8620 D8621 D8622 D8623 D8624 D8625 D8626 D8627 D8628 D8629 D8630 D8631 D8632 D8633 D8634 D8635 D8636 D8637 D8638 D8639 D8640 D8641 D8642 D8643 D8644 D8645 D8646 D8647 D8648 D8649 D8650 D8651 D8652 D8653 D8654 D8655 D8656 D8657 D8658 D8659 D8660 D8661 D8662 D8663 D8664 D8665 D8666 D8667 D8668 D8669 D8670 D8671 D8672 D8673 D8674 D8675 D8676 D8677 D8678 D8679 D8680 D8681 D8682 D8683 D8684 D8685 D8686 D8687 D8688 D8689 D8690 D8691 D8692 D8693 D8694 D8695 D8696 D8697 D8698 D8699 D8700 D8701 D8702 D8703 D8704 D8705 D8706 D8707 D8708 D8709 D8710 D8711 D8712 D8713 D8714 D8715 D8716 D8717 D8718 D8719 D8720 D8721 D8722 D8723 D8724 D8725 D8726 D8727 D8728 D8729 D8730 D8731 D8732 D8733 D8734 D8735 D8736 D8737 D8738 D8739 D8740 D8741 D8742 D8743 D8744 D8745 D8746 D8747 D8748 D8749 D8750 D8751 D8752 D8753 D8754 D8755 D8756 D8757 D8758 D8759 D8760 D8761 D8762 D8763 D8764 D8765 D8766 D8767 D8768 D8769 D8770 D8771 D8772 D8773 D8774 D8775 D8776 D8777 D8778 D8779 D8780 D8781 D8782 D8783 D8784 D8785 D8786 D8787 D8788 D8789 D8790 D8791 D8792 D8793 D8794 D8795 D8796 D8797 D8798 D8799 D8800 D8801 D8802 D8803 D8804 D8805 D8806 D8807 D8808 D8809 D8810 D8811 D8812 D8813 D8814 D8815 D8816 D8817 D8818 D8819 D8820 D8821 D8822 D8823 D8824 D8825 D8826 D8827 D8828 D8829 D8830 D8831 D8832 D8833 D8834 D8835 D8836 D8837 D8838 D8839 D8840 D8841 D8842 D8843 D8844 D8845 D8846 D8847 D8848 D8849 D8850 D8851 D8852 D8853 D8854 D8855 D8856 D8857 D8858 D8859 D8860 D8861 D8862 D8863 D8864 D8865 D8866 D8867 D8868 D8869 D8870 D8871 D8872 D8873 D8874 D8875 D8876 D8877 D8878 D8879 D8880 D8881 D8882 D8883 D8884 D8885 D8886 D8887 D8888 D8889 D8890 D8891 D8892 D8893 D8894 D8895 D8896 D8897 D8898 D8899 D8900 D8901 D8902 D8903 D8904 D8905 D8906 D8907 D8908 D8909 D8910 D8911 D8912 D8913 D8914 D8915 D8916 D8917 D8918 D8919 D8920 D8921 D8922 D8923 D8924 D8925 D8926 D8927 D8928 D8929 D8930 D8931 D8932 D8933 D8934 D8935 D8936 D8937 D8938 D8939 D8940 D8941 D8942 D8943 D8944 D8945 D8946 D8947 D8948 D8949 D8950 D8951 D8952 D8953 D8954 D8955 D8956 D8957 D8958 D8959 D8960 D8961 D8962 D8963 D8964 D8965 D8966 D8967 D8968 D8969 D8970 D8971 D8972 D8973 D8974 D8975 D8976 D8977 D8978 D8979 D8980 D8981 D8982 D8983 D8984 D8985 D8986 D8987 D8988 D8989 D8990 D8991 D8992 D8993 D8994 D8995 D8996 D8997 D8998 D8999

R8301 R8302 R8303 R8304 R8305 R8306 R8307 R8308 R8309 R8310 R8311 R8312 R8313 R8314 R8315 R8316 R8317 R8318 R8319 R8320 R8321 R8322 R8323 R8324 R8325 R8326 R8327 R8328 R8329 R8330 R8331 R8332 R8333 R8334 R8335 R8336 R8337 R8338 R8339 R8340 R8341 R8342 R8343 R8344 R8345 R8346 R8347 R8348 R8349 R8350 R8351 R8352 R8353 R8354 R8355 R8356 R8357 R8358 R8359 R8360 R8361 R8362 R8363 R8364 R8365 R8366 R8367 R8368 R8369 R8370 R8371 R8372 R8373 R8374 R8375 R8376 R8377 R8378 R8379 R8380 R8381 R8382 R8383 R8384 R8385 R8386 R8387 R8388 R8389 R8390 R8391 R8392 R8393 R8394 R8395 R8396 R8397 R8398 R8399 R8400 R8401 R8402 R8403 R8404 R8405 R8406 R8407 R8408 R8409 R8410 R8411 R8412 R8413 R8414 R8415 R8416 R8417 R8418 R8419 R8420 R8421 R8422 R8423 R8424 R8425 R8426 R8427 R8428 R8429 R8430 R8431 R8432 R8433 R8434 R8435 R8436 R8437 R8438 R8439 R8440 R8441 R8442 R8443 R8444 R8445 R8446 R8447 R8448 R8449 R8450 R8451 R8452 R8453 R8454 R8455 R8456 R8457 R8458 R8459 R8460 R8461 R8462 R8463 R8464 R8465 R8466 R8467 R8468 R8469 R8470 R8471 R8472 R8473 R8474 R8475 R8476 R8477 R8478 R8479 R8480 R8481 R8482 R8483 R8484 R8485 R8486 R8487 R8488 R8489 R8490 R8491 R8492 R8493 R8494 R8495 R8496 R8497 R8498 R8499 R8500 R8501 R8502 R8503 R8504 R8505 R8506 R8507 R8508 R8509 R8510 R8511 R8512 R8513 R8514 R8515 R8516 R8517 R8518 R8519 R8520 R8521 R8522 R8523 R8524 R8525 R8526 R8527 R8528 R8529 R8530 R8531 R8532 R8533 R8534 R8535 R8536 R8537 R8538 R8539 R8540 R8541 R8542 R8543 R8544 R8545 R8546 R8547 R8548 R8549 R8550 R8551 R8552 R8553 R8554 R8555 R8556 R8557 R8558 R8559 R8560 R8561 R8562 R8563 R8564 R8565 R8566 R8567 R8568 R8569 R8570 R8571 R8572 R8573 R8574 R8575 R8576 R8577 R8578 R8579 R8580 R8581 R8582 R8583 R8584 R8585 R8586 R8587 R8588 R8589 R8590 R8591 R8592 R8593 R8594 R8595 R8596 R8597 R8598 R8599 R8600 R8601 R8602 R8603 R8604 R8605 R8606 R8607 R8608 R8609 R8610 R8611 R8612 R8613 R8614 R8615 R8616 R8617 R8618 R8619 R8620 R8621 R8622 R8623 R8624 R8625 R8626 R8627 R8628 R8629 R8630 R8631 R8632 R8633 R8634 R8635 R8636 R8637 R8638 R8639 R8640 R8641 R8642 R8643 R8644 R8645 R8646 R8647 R8648 R8649 R8650 R8651 R8652 R8653 R8654 R8655 R8656 R8657 R8658 R8659 R8660 R8661 R8662 R8663 R8664 R8665 R8666 R8667 R8668 R8669 R8670 R8671 R8672 R8673 R8674 R8675 R8676 R8677 R8678 R8679 R8680 R8681 R8682 R8683 R8684 R8685 R8686 R8687 R8688 R8689 R8690 R8691 R8692 R8693 R8694 R8695 R8696 R8697 R8698 R8699 R8700 R8701 R8702 R8703 R8704 R8705 R8706 R8707 R8708 R8709 R8710 R8711 R8712 R8713 R8714 R8715 R8716 R8717 R8718 R8719 R8720 R8721 R8722 R8723 R8724 R8725 R8726 R8727 R8728 R8729 R8730 R8731 R8732 R8733 R8734 R8735 R8736 R8737 R8738 R8739 R8740 R8741 R8742 R8743 R8744 R8745 R8746 R8747 R8748 R8749 R8750 R8751 R8752 R8753 R8754 R8755 R8756 R8757 R8758 R8759 R8760 R8761 R8762 R8763 R8764 R8765 R8766 R8767 R8768 R8769 R8770 R8771 R8772 R8773 R8774 R8775 R8776 R8777 R8778 R8779 R8780 R8781 R8782 R8783 R8784 R8785 R8786 R8787 R8788 R8789 R8790 R8791 R8792 R8793 R8794 R8795 R8796 R8797 R8798 R8799 R8800 R8801 R8802 R8803 R8804 R8805 R8806 R8807 R8808 R8809 R8810 R8811 R8812 R8813 R8814 R8815 R8816 R8817 R8818 R8819 R8820 R8821 R8822 R8823 R8824 R8825 R8826 R8827 R8828 R8829 R8830 R8831 R8832 R8833 R8834 R8835 R8836 R8837 R8838 R8839 R8840 R8841 R8842 R8843 R8844 R8845 R8846 R8847 R8848 R8849 R8850 R8851 R8852 R8853 R8854 R8855 R8856 R8857 R8858 R8859 R8860 R8861 R8862 R8863 R8864 R8865 R8866 R8867 R8868 R8869 R8870 R8871 R8872 R8873 R8874 R8875 R8876 R8877 R8878 R8879 R8880 R8881 R8882 R8883 R8884 R8885 R8886 R8887 R8888 R8889 R8890 R8891 R8892 R8893 R8894 R8895 R8896 R8897 R8898 R8899 R8900 R8901 R8902 R8903 R8904 R8905 R8906 R8907 R8908 R8909 R8910 R8911 R8912 R8913 R8914 R8915 R8916 R8917 R8918 R8919 R8920 R8921 R8922 R8923 R8924 R8925 R8926 R8927 R8928 R8929 R8930 R8931 R8932 R8933 R8934 R8935 R8936 R8937 R8938 R8939 R8940 R8941 R8942 R8943 R8944 R8945 R8946 R8947 R8948 R8949 R8950 R8951 R8952 R8953 R8954 R8955 R8956 R8957 R8958 R8959 R8960 R8961 R8962 R8963 R8964 R8965 R8966 R8967 R8968 R8969 R8970 R8971 R8972 R8973 R8974 R8975 R8976 R8977 R8978 R8979 R8980 R8981 R8982 R8983 R8984 R8985 R8986 R8987 R8988 R8989 R8990 R8991 R8992 R8993 R8994 R8995 R8996 R8997 R8998 R8999

C8301 C8302 C8303 C8304 C8305 C8306 C8307 C8308 C8309 C8310 C8311 C8312 C8313 C8314 C8315 C8316 C8317 C8318 C8319 C8320 C8321 C8322 C8323 C8324 C8325 C8326 C8327 C8328 C8329 C8330 C8331 C8332 C8333 C8334 C8335 C8336 C8337 C8338 C8339 C8340 C8341 C8342 C8343 C8344 C8345 C8346 C8347 C8348 C8349 C8350 C8351 C8352 C8353 C8354 C8355 C8356 C8357 C8358 C8359 C8360 C8361 C8362 C8363 C8364 C8365 C8366 C8367 C8368 C8369 C8370 C8371 C8372 C8373 C8374 C8375 C8376 C8377 C8378 C8379 C8380 C8381 C8382 C8383 C8384 C8385 C8386 C8387 C8388 C8389 C8390 C8391 C8392 C8393 C8394 C8395 C8396 C8397 C8398 C8399 C8400 C8401 C8402 C8403 C8404 C8405 C8406 C8407 C8408 C8409 C8410 C8411 C8412 C8413 C8414 C8415 C8416 C8417 C8418 C8419 C8420 C8421 C8422 C8423 C8424 C8425 C8426 C8427 C8428 C8429 C8430 C8431 C8432 C8433 C8434 C8435 C8436 C8437 C8438 C8439 C8440 C8441 C8442 C8443 C8444 C8445 C8446 C8447 C8448 C8449 C8450 C8451 C8452 C8453 C8454 C8455 C8456 C8457 C8458 C8459 C8460 C8461 C8462 C8463 C8464 C8465 C8466 C8467 C8468 C8469 C8470 C8471 C8472 C8473 C8474 C8475 C8476 C8477 C8478 C8479 C8480 C8481 C8482 C8483 C8484 C8485 C8486 C8487 C8488 C8489 C8490 C8491 C8492 C8493 C8494 C8495 C8496 C8497 C8498 C8499 C8500 C8501 C8502 C8503 C8504 C8505 C8506 C8507 C8508 C8509 C8510 C8511 C8512 C8513 C8514 C8515 C8516 C8517 C8518 C8519 C8520 C8521 C8522 C8523 C8524 C8525 C8526 C8527 C8528 C8529 C8530 C8531 C8532 C8533 C8534 C8535 C8536 C8537 C8538 C8539 C8540 C8541 C8542 C8543 C8544 C8545 C8546 C8547 C8548 C8549 C8550 C8551 C8552 C8553 C8554 C8555 C8556 C8557 C8558 C8559 C8560 C8561 C8562 C8563 C8564 C8565 C8566 C8567 C8568 C8569 C8570 C8571 C8572 C8573 C8574 C8575 C8576 C8577 C8578 C8579 C8580 C8581 C8582 C8583 C8584 C8585 C8586 C8587 C8588 C8589 C8590 C8591 C8592 C8593 C8594 C8595 C8596 C8597 C8598 C8599 C8600 C8601 C8602 C8603 C8604 C8605 C8606 C8607 C8608 C8609 C8610 C8611 C8612 C8613 C8614 C8615 C8616 C8617 C8618 C8619 C8620 C8621 C8622 C8623 C8624 C8625 C8626 C8627 C8628 C8629 C8630 C8631 C8632 C8633 C8634 C8635 C8636 C8637 C8638 C8639 C8640 C8641 C8642 C8643 C8644 C8645 C8646 C8647 C8648 C8649 C8650 C8651 C8652 C8653 C8654 C8655 C8656 C8657 C8658 C8659 C8660 C8661 C8662 C8663 C8664 C8665 C8666 C8667 C8668 C8669 C8670 C8671 C8672 C8673 C8674 C8675 C8676 C8677 C8678 C8679 C8680 C8681 C8682 C8683 C8684 C8685 C8686 C8687 C8688 C8689 C8690 C8691 C8692 C8693 C8694 C8695 C8696 C8697 C8698 C8699 C8700 C8701 C8702 C8703 C8704 C8705 C8706 C8707 C8708 C8709 C8710 C8711 C8712 C8713 C8714 C8715 C8716 C8717 C8718 C8719 C8720 C8721 C8722 C8723 C8724 C8725 C8726 C8727 C8728 C8729 C8730 C8731 C8732 C8733 C8734 C8735 C8736 C8737 C8738 C8739 C8740 C8741 C8742 C8743 C8744 C8745 C8746 C8747 C8748 C8749 C8750 C8751 C8752 C8753 C8754 C8755 C8756 C8757 C8758 C8759 C8760 C8761 C8762 C8763 C8764 C8765 C8766 C8767 C8768 C8769 C8770 C8771 C8772 C8773 C8774 C8775 C8776 C8777 C8778 C8779 C8780 C8781 C8782 C8783 C8784 C8785 C8786 C8787 C8788 C8789 C8790 C8791 C8792 C8793 C8794 C8795 C8796 C8797 C8798 C8799 C8800 C8801 C8802 C8803 C8804 C8805 C8806 C8807 C8808 C8809 C8810 C8811 C8812 C8813 C8814 C8815 C8816 C8817 C8818 C8819 C8820 C8821 C8822 C8823 C8824 C8825 C8826 C8827 C8828 C8829 C8830 C8831 C8832 C8833 C8834 C8835 C8836 C8837 C8838 C8839 C8840 C8841 C8842 C8843 C8844 C8845 C8846 C8847 C8848 C8849 C8850 C8851 C8852 C8853 C8854 C8855 C8856 C8857 C8858 C8859 C8860 C8861 C8862 C8863 C8864 C8865 C8866 C8867 C8868 C8869 C8870 C8871 C8872 C8873 C8874 C8875 C8876 C8877 C8878 C8879 C8880 C8881 C8882 C8883 C8884 C8885 C8886 C8887 C8888 C8889 C8890 C8891 C8892 C8893 C8894 C8895 C8896 C8897 C8898 C8899 C8900 C8901 C8902 C8903 C8904 C8905 C8906 C8907 C8908 C8909 C8910 C8911 C8912 C8913 C8914 C8915 C8916 C8917 C8918 C8919 C8920 C8921 C8922 C8923 C8924 C8925 C8926 C8927 C8928 C8929 C8930 C8931 C8932 C8933 C8934 C8935 C8936 C8937 C8938 C8939 C8940 C8941 C8942 C8943 C8944 C8945 C8946 C8947 C8948 C8949 C8950 C8951 C8952 C8953 C8954 C8955 C8956 C8957 C8958 C8959 C8960 C8961 C8962 C8963 C8964 C8965 C8966 C8967 C8968 C8969 C8970 C8971 C8972 C8973 C8974 C8975 C8976 C8977 C8978 C8979 C8980 C8981 C8982 C8983 C8984 C8985 C8986 C8987 C8988 C8989 C8990 C8991 C8992 C8993 C8994 C8995 C8996 C8997 C8998 C8999

L1300 L2601 L2602 L2603 L2604 L2605 L2606 L2607 L2608 L2609 L2610 L2611 L2612 L2613 L3301 L3302 L3303 L3304 L3305 L3306 L3307 L3308 L3309 L3310 L3311 L3312 L3313 L3314 L3315 L3316 L3317 L3318 L3319 L3320 L3321 L3322 L3323 L3324 L3325 L3326 L3327 L3328 L3329 L3330 L3331 L3332 L3333 L3334 L3335 L3336 L3337 L3338 L3339 L3340 L3341 L3342 L3343 L3344 L3345 L3346 L3347 L3348 L3349 L3350 L3351 L3352 L3353 L3354 L3355 L3356 L3357 L3358 L3359 L3360 L3361 L3362 L3363 L3364 L3365 L3366 L3367 L3368 L3369 L3370 L3371 L3372 L3373 L3374 L3375 L3376 L3377 L3378 L3379 L3380 L3381 L3382 L3383 L3384 L3385 L3386 L3387 L3388 L3389 L3390 L3391 L3392 L3393 L3394 L3395 L3396 L3397 L3398 L3399 L3400 L3401 L3402 L3403 L3404 L3405 L3406 L3407 L3408 L3409 L3410 L3411 L3412 L3413 L3414 L3415 L3416 L3417 L3418 L3419 L3420 L3421 L3422 L3423 L3424 L3425 L3426 L3427 L3428 L3429 L3430 L3431 L3432 L3433 L3434 L3435 L3436 L3437 L3438 L3439 L3440 L3441 L3442 L3443 L3444 L3445 L3446 L3447 L3448 L3449 L3450 L3451 L3452 L3453 L3454 L3455 L3456 L3457 L3458 L3459 L3460 L3461 L3462 L3463 L3464 L3465 L3466 L3467 L3468 L3469 L3470 L3471 L3472 L3473 L3474 L3475 L3476 L3477 L3478 L3479 L3480 L3481 L3482 L3483 L3484 L3485 L3486 L3487 L3488 L3489 L3490 L3491 L3492 L3493 L3494 L3495 L3496 L3497 L3498 L3499 L3500 L3501 L3502 L3503 L3504 L3505 L3506 L3507 L3508 L3509 L3510 L3511 L3512 L3513 L3514 L3515 L3516 L3517 L3518 L3519 L3520 L3521 L3522 L3523 L3524 L3525 L3526 L3527 L3528 L3529 L3530 L3531 L3532 L3533 L3534 L3535 L3536 L3537 L3538 L3539 L3540 L3541 L3542 L3543 L3544 L3545 L3546 L3547 L3548 L3549 L3550 L3551 L3552 L3553 L3554 L3555 L3556 L3557 L3558 L3559 L3560 L3561 L3562 L3563 L3564 L3565 L3566 L3567 L3568 L3569 L3570 L3571 L3572 L3573 L3574 L3575 L3576 L3577 L3578 L3579 L3580 L3581 L3582 L3583 L3584 L3585 L3586 L3587 L3588 L3589 L3590 L3591 L3592 L3593 L3594 L3595 L3596 L3597 L3598 L3599 L3600 L3601 L3602 L3603 L3604 L3605 L3606 L3607 L3608 L3609 L3610 L3611 L3612 L3613 L3614 L3615 L3616 L3617 L3618 L3619 L3620 L3621 L3622 L3623 L3624 L3625 L3626 L3627 L3628 L3629 L3630 L3631 L3632 L3633 L3634 L3635 L3636 L3637 L3638 L3639 L3640 L3641 L3642 L3643 L3644 L3645 L3646 L3647 L3648 L3649 L3650 L3651 L3652 L3653 L3654 L3655 L3656 L3657 L3658 L3659 L3660 L3661 L3662 L3663 L3664 L3665 L3666 L3667 L3668 L3669 L3670 L3671 L3672 L3673 L3674 L3675 L3676 L3677 L3678 L3679 L3680 L3681 L3682 L3683 L3684 L3685 L3686 L3687 L3688 L3689 L3690 L3691 L3692 L3693 L3694 L3695 L3696 L3697 L3698 L3699 L3700 L3701 L3702 L3703 L3704 L3705 L3706 L3707 L3708 L3709 L3710 L3711 L3712 L3713 L3714 L3715 L3716 L3717 L3718 L3719 L3720 L3721 L3722 L3723 L3724 L3725 L3726 L3727 L3728 L3729 L3730 L3731 L3732 L3733 L3734 L3735 L3736 L3737 L3738 L3739 L3740 L3741 L3742 L3743 L3744 L3745 L3746 L3747 L3748 L3749 L3750 L3751 L3752 L3753 L3754 L3755 L3756 L3757 L3758 L3759 L3760 L3761 L3762 L3763 L3764 L3765 L3766 L3767 L3768 L3769 L3770 L3771 L3772 L3773 L3774 L3775 L3776 L3777 L3778 L3779 L3780 L3781 L3782 L3783 L3784 L3785 L3786 L3787 L3788 L3789 L3790 L3791 L3792 L3793 L3794 L3795 L3796 L3797 L3798 L3799 L3800 L3801 L3802 L3803 L3804 L3805 L3806 L3807 L3808 L3809 L3810 L3811 L3812 L3813 L3814 L3815 L3816 L3817 L3818 L3819 L3820 L3821 L3822 L3823 L3824 L3825 L3826 L3827 L3828 L3829 L3830 L3831 L3832 L3833 L3834 L3835 L3836 L3837 L3838 L3839 L3840 L3841 L3842 L3843 L3844 L3845 L3846 L3847 L3848 L3849 L3850 L3851 L3852 L3853 L3854 L3855 L3856 L3857 L3858 L3859 L3860 L3861 L3862 L3863 L3864 L3865 L3866 L3867 L3868 L3869 L3870 L3871 L3872 L3873 L3874 L3875 L3876 L3877 L3878 L3879 L3880 L3881 L3882 L3883 L3884 L3885 L3886 L3887 L3888 L3889 L3890 L3891 L3892 L3893 L3894 L3895 L3896 L3897 L3898 L3899 L3900 L3901 L3902 L3903 L3904 L3905 L3906 L3907 L3908 L3909 L3910 L3911 L3912 L3913 L3914 L3915 L3916 L3917 L3918 L3919 L3920 L3921 L3922 L3923 L3924 L3925 L3926 L3927 L3928 L3929 L3930 L3931 L3932 L3933 L3934 L3935 L3936 L3937 L3938 L3939 L3940 L3941 L3942 L3943 L3944 L3945 L3946 L3947 L3948 L3949 L3950 L3951 L3952 L3953 L3954 L3955 L3956 L3957 L3958 L3959 L3960 L3961 L3962 L3963 L3964 L3965 L3966 L3967 L3968 L3969 L3970 L3971 L3972 L3973 L3974 L3975 L3976 L3977 L3978 L3979 L3980 L3981 L3982 L3983 L3984 L3985 L3986 L3987 L3988 L3989 L3990 L3991 L3992 L3993 L3994 L3995 L3996 L3997 L3998 L3999

JR1301 JR1302 JR1303 JR1304 JR1305 JR1306 JR1307 JR1308 JR1309 JR1310 JR1311 JR1312 JR1313 JR1314 JR1315 JR1316 JR1317 JR1318 JR1319 JR1320 JR1321 JR1322 JR1323 JR1324 JR1325 JR1326 JR1327 JR1328 JR1329 JR1330 JR1331 JR1332 JR1333 JR1334 JR1335 JR1336 JR1337 JR1338 JR1339 JR1340 JR1341 JR1342 JR1343 JR1344 JR1345 JR1346 JR1347 JR1348 JR1349 JR1350 JR1351 JR1352 JR1353 JR1354 JR1355 JR1356 JR1357 JR1358 JR1359 JR1360 JR1361 JR1362 JR1363 JR1364 JR1365 JR1366 JR1367 JR1368 JR1369 JR1370 JR1371 JR1372 JR1373 JR1374 JR1375 JR1376 JR1377 JR1378 JR1379 JR1380 JR1381 JR1382 JR1383 JR1384 JR1385 JR1386 JR1387 JR1388 JR1389 JR1390 JR1391 JR1392 JR1393 JR1394 JR1395 JR1396 JR1397 JR1398 JR1399 JR1400 JR1401 JR1402 JR1403 JR1404 JR1405 JR1406 JR1407 JR1408 JR1409 JR1410 JR1411 JR1412 JR1413 JR1414 JR1415 JR1416 JR1417 JR1418 JR1419 JR1420 JR1421 JR1422 JR1423 JR1424 JR1425 JR1426 JR1427 JR1428 JR1429 JR1430 JR1431 JR1432 JR1433 JR1434 JR1435 JR1436 JR1437 JR1438 JR1439 JR1440 JR1441 JR1442 JR1443 JR1444 JR1445 JR1446 JR1447 JR1448 JR1449 JR1450 JR1451 JR1452 JR1453 JR1454 JR1455 JR1456 JR1457 JR1458 JR1459 JR1460 JR1461 JR1462 JR1463 JR1464 JR1465 JR1466 JR1467 JR1468 JR1469 JR1470 JR1471 JR1472 JR1473 JR1474 JR1475 JR1476 JR1477 JR1478 JR1479 JR1480 JR1481 JR1482 JR1483 JR1484 JR1485 JR1486 JR1487 JR1488 JR1489 JR1490 JR1491 JR1492 JR1493 JR1494 JR1495 JR1496 JR1497 JR1498 JR1499 JR1500 JR1501 JR1502 JR1503 JR1504 JR1505 JR1506 JR1507 JR1508 JR1509 JR1510 JR1511 JR1512 JR1513 JR1514 JR1515 JR1516 JR1517 JR1518 JR1519 JR1520 JR1521 JR1522 JR1523 JR1524 JR1525 JR1526 JR1527 JR1528 JR1529 JR1530 JR1531 JR1532 JR1533 JR1534 JR1535 JR1536 JR1537 JR1538 JR1539 JR1540 JR1541 JR1542 JR1543 JR1544 JR1545 JR1546 JR1547 JR1548 JR1549 JR1550 JR1551 JR1552 JR1553 JR1554 JR1555 JR1556 JR1557 JR1558 JR1559 JR1560 JR1561 JR1562 JR1563 JR1564 JR1565 JR1566 JR1567 JR1568 JR1569 JR1570 JR1571 JR1572 JR1573 JR1574 JR1575 JR1576 JR1577 JR1578 JR1579 JR1580 JR1581 JR1582 JR1583 JR1584 JR1585 JR1586 JR1587 JR1588 JR1589 JR1590 JR1591 JR1592 JR1593 JR1594 JR1595 JR1596 JR1597 JR1598 JR1599 JR1600 JR1601 JR1602 JR1603 JR1604 JR1605 JR1606 JR1607 JR1608 JR1609 JR1610 JR1611 JR1612 JR1613 JR1614 JR1615 JR1616 JR1617 JR1618 JR1619 JR1620 JR1621 JR1622 JR1623 JR1624 JR1625 JR1626 JR1627 JR1628 JR1629 JR1630 JR1631 JR1632 JR1633 JR1634 JR1635 JR1636 JR1637 JR1638 JR1639 JR1640 JR1641 JR1642 JR1643 JR1644 JR1645 JR1646 JR1647 JR1648 JR1649 JR1650 JR1651 JR1652 JR1653 JR1654 JR1655 JR1656 JR1657 JR1658 JR1659 JR1660 JR1661 JR1662 JR1663 JR1664 JR1665 JR1666 JR1667 JR1668 JR1669 JR1670 JR1671 JR1672 JR1673 JR1674 JR1675 JR1676 JR1677 JR1678 JR1679 JR1680 JR1681 JR1682 JR1683 JR1684 JR1685 JR1686 JR1687 JR1688 JR1689 JR1690 JR1691 JR1692 JR1693 JR1694 JR1695 JR1696 JR1697 JR1698 JR1699 JR1700 JR1701 JR1702 JR1703 JR1704 JR1705 JR1706 JR1707 JR1708 JR1709 JR1710 JR1711 JR1712 JR1713 JR1714 JR1715 JR1716 JR1717 JR1718 JR1719 JR1720 JR1721 JR1722 JR1723 JR1724 JR1725 JR1726 JR1727 JR1728 JR1729 JR1730 JR1731 JR1732 JR1733 JR1734 JR1735 JR1736 JR1737 JR1738 JR1739 JR1740 JR1741 JR1742 JR1743 JR1744 JR1745 JR1746 JR1747 JR1748 JR1749 JR1750 JR1751 JR1752 JR1753 JR1754 JR1755 JR1756 JR1757 JR1758 JR1759 JR1760 JR1761 JR1762 JR1763 JR1764 JR1765 JR1766 JR1767 JR1768 JR1769 JR1770 JR1771 JR1772 JR1773 JR1774 JR1775 JR1776 JR1777 JR1778 JR1779 JR1780 JR1781 JR1782 JR1783 JR1784 JR1785 JR1786 JR1787 JR1788 JR1789 JR1790 JR1791 JR1792 JR1793 JR1794 JR1795 JR1796 JR1797 JR1798 JR1799 JR1800 JR1801 JR1802 JR1803 JR1804 JR1805 JR1806 JR1807 JR1808 JR1809 JR1810 JR1811 JR1812 JR1813 JR1814 JR1815 JR1816 JR1817 JR1818 JR1819 JR1820 JR1821 JR1822 JR1823 JR1824 JR1825 JR1826 JR1827 JR1828 JR1829 JR1830 JR1831 JR1832 JR1833 JR1834 JR1835 JR1836 JR1837 JR1838 JR1839 JR1840 JR1841 JR1842 JR1843 JR1844 JR1845 JR1846 JR1847 JR1848 JR1849 JR1850 JR1851 JR1852 JR1853 JR1854 JR1855 JR1856 JR1857 JR1858 JR1859 JR1860 JR1861 JR1862 JR1863 JR1864 JR1865 JR1866 JR1867 JR1868 JR1869 JR1870 JR1871 JR1872 JR1873 JR1874 JR1875 JR1876 JR1877 JR1878 JR1879 JR1880 JR1881 JR1882 JR1883 JR1884 JR1885 JR1886 JR1887 JR1888 JR1889 JR1890 JR1891 JR1892 JR1893 JR1894 JR1895 JR1896 JR1897 JR1898 JR1899 JR1900 JR1901 JR1902 JR1903 JR1904 JR1905 JR1906 JR1907 JR1908 JR1909 JR1910 JR1911 JR1912 JR1913 JR1914 JR1915 JR1916 JR1917 JR1918 JR1919 JR1920 JR1921 JR1922 JR1923 JR1924 JR1925 JR1926 JR1927 JR1928 JR1929 JR1930 JR1931 JR1932 JR1933 JR1934 JR1935 JR1936 JR1937 JR1938 JR1939 JR1940 JR1941 JR1942 JR1943 JR1944 JR1945 JR1946 JR1947 JR1948 JR1949 JR1950 JR1951 JR1952 JR1953 JR1954 JR1955 JR1956 JR1957 JR1958 JR1959 JR1

KV-DR34M69/DR34M89
RM-991

(2) B3 Board Schematic Diagram

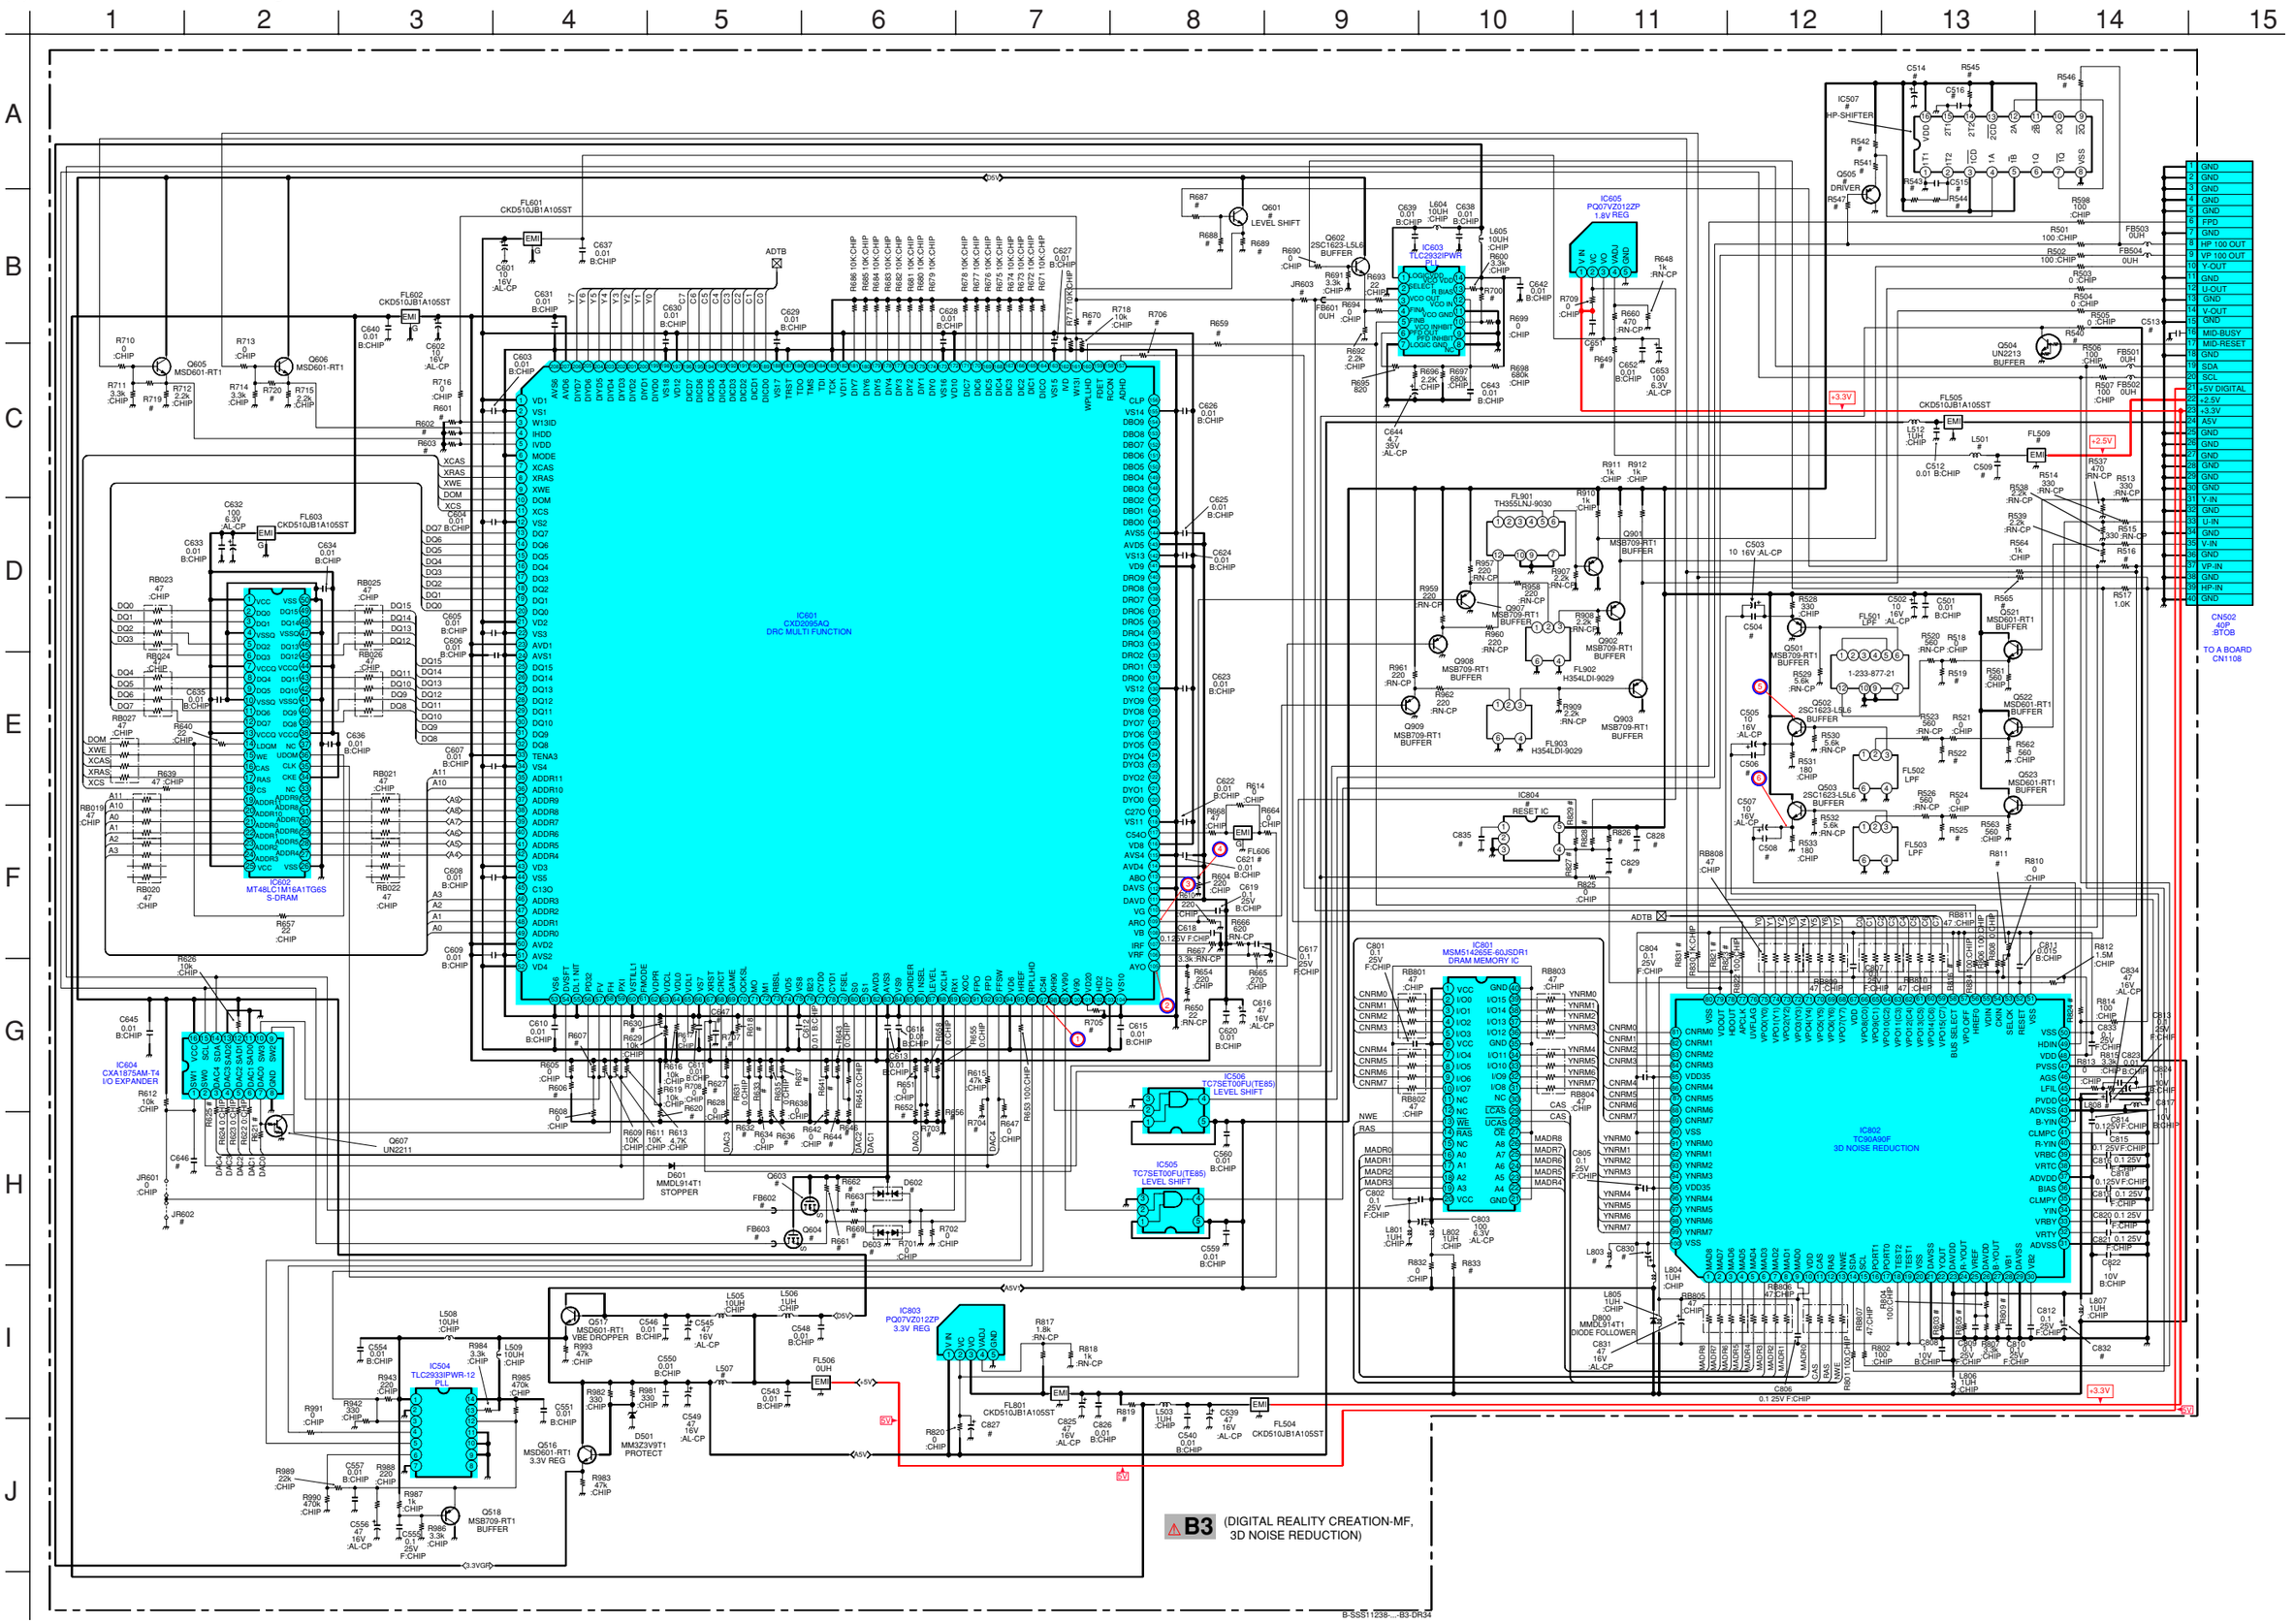

KV-DR34M69/DR34M89
RM-991

(3) D Board Schematic Diagram

D (POWER SUPPLY, DEFLECTION HV)

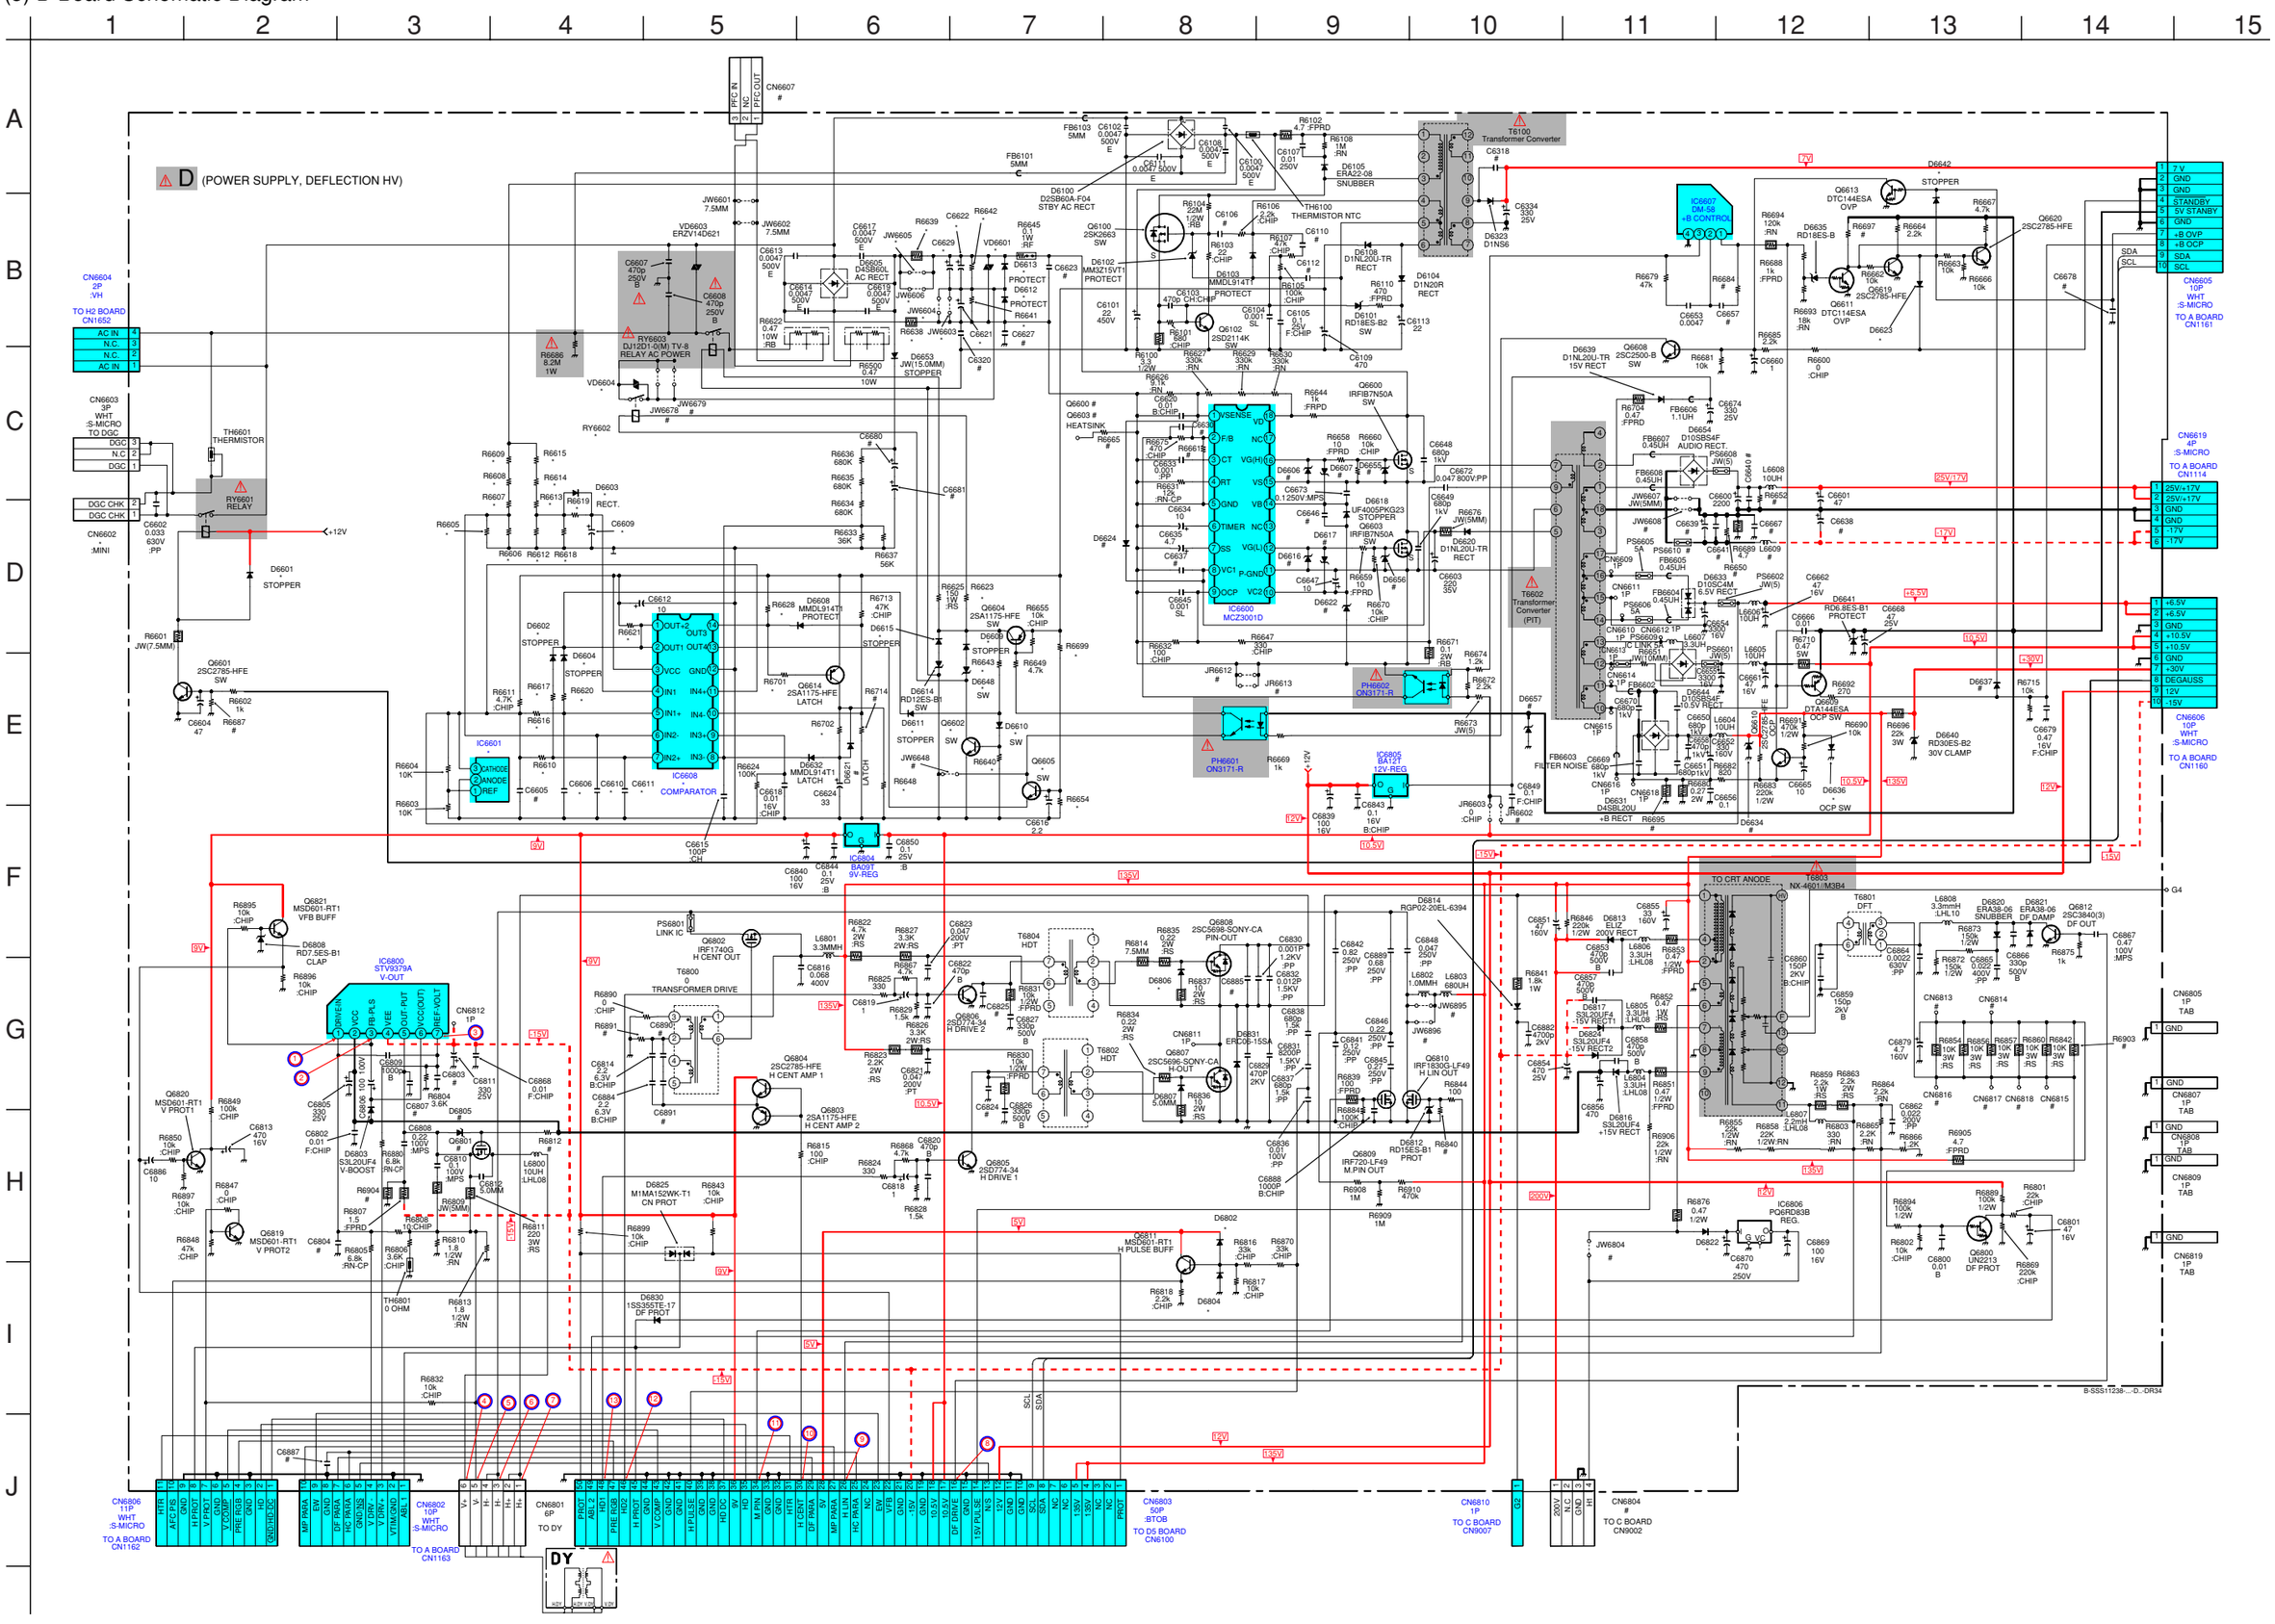
CN6607
CN6604
TO H2 BOARD CN1652
CN6603
TO DGC
CN6602
TH6601 THERMISTOR
RY6601 RELAY
D6601 STOPPER
Q6601 2SC2785-HFE SW
RY6603 DJ12D1-0(M) TV-8 RELAY AC POWER
D6603 RECT.
IC6601
IC6608 COMPARATOR
IC6600 MCZ3001D
IC6607 +B CONTROL
T6100 Transformer Converter
T6602 Transformer Converter (PIT)
PH6601 ON3171-R
PH6602 ON3171-R
IC6805 BA12T 12V-REG
IC6804 BA09T 9V-REG
Q6600 IRFIB7N50A SW
Q6603 IRFIB7N50A SW
Q6604 2SA1175-HFE SW
Q6605 2SD774-34 H DRIVE 2
Q6606 2SD774-34 H DRIVE 1
Q6804 2SC2785-HFE H CENT AMP 1
Q6803 2SA1175-HFE H CENT AMP 2
Q6807 2SC5696-SONY-CA H-OUT
Q6808 2SC5698-SONY-CA PIN-OUT
Q6809 IRF720-LF49 M.PIN OUT
Q6810 IRF1B30G-LF49 H.LIN OUT
Q6811 MSD601-RT1 H PULSE BUFF
Q6819 MSD601-RT1 V PROT2
Q6820 MSD601-RT1 V PROT1
Q6821 MSD601-RT1 VFB BUFF
Q6822 2SC3840(3) DF OUT
Q6823 2SC3840(3) DF DAMP
Q6812 2SC3840(3) DF OUT
Q6620 2SC2785-HFE
Q6613 DTC144ESA OVP
Q6611 DTC114ESA OVP
Q6608 2SC2500-B SW
Q6609 DTA144ESA OCP SW
Q6610 DTC144ESA OCP SW
Q6102 2SD2114K SW
Q6103 CHCHIP
Q6104 SL
Q6100 2SK2663 SW
D6100 D2SB60A-F04 STBY AC RECT
D6105 ERA22-08 SNUBBER
D6106 D1NL20U-TR RECT
D6104 D1N20R RECT
D6101 RD18ES-B2 SW
D6103 MMDL914T1 PROTECT
D6102 MM3Z15VT1 PROTECT
D6639 D1NL20U-TR 15V RECT
D6640 RD30ES-B2 30V CLAMP
D6642 STOPPER
D6643 FILTER NOISE
D6644 D10SBS4F +0.5V RECT
D6645 D10SC4M 6.5V RECT
D6646 D10SBS4F AUDIO RECT.
D6647 DTC114ESA OVP
D6648 +B RECT
D6649 S3L20UF4 -15V RECT1
D6650 S3L20UF4 -15V RECT2
D6651 S3L20UF4 +15V RECT
D6652 D1NL20U-TR RECT
D6653 JW(15.0MM) STOPPER
D6654 D10SBS4F AUDIO RECT.
D6655 RD6.8ES-B1 PROTECT
D6656 RD18ES-B2 PROTECT
D6657 RD18ES-B2 PROTECT
D6658 RD18ES-B2 PROTECT
D6659 RD18ES-B2 PROTECT
D6660 RD18ES-B2 PROTECT
D6661 RD18ES-B2 PROTECT
D6662 RD18ES-B2 PROTECT
D6663 RD18ES-B2 PROTECT
D6664 RD18ES-B2 PROTECT
D6665 RD18ES-B2 PROTECT
D6666 RD18ES-B2 PROTECT
D6667 RD18ES-B2 PROTECT
D6668 RD18ES-B2 PROTECT

(4) D5 Board Schematic Diagram

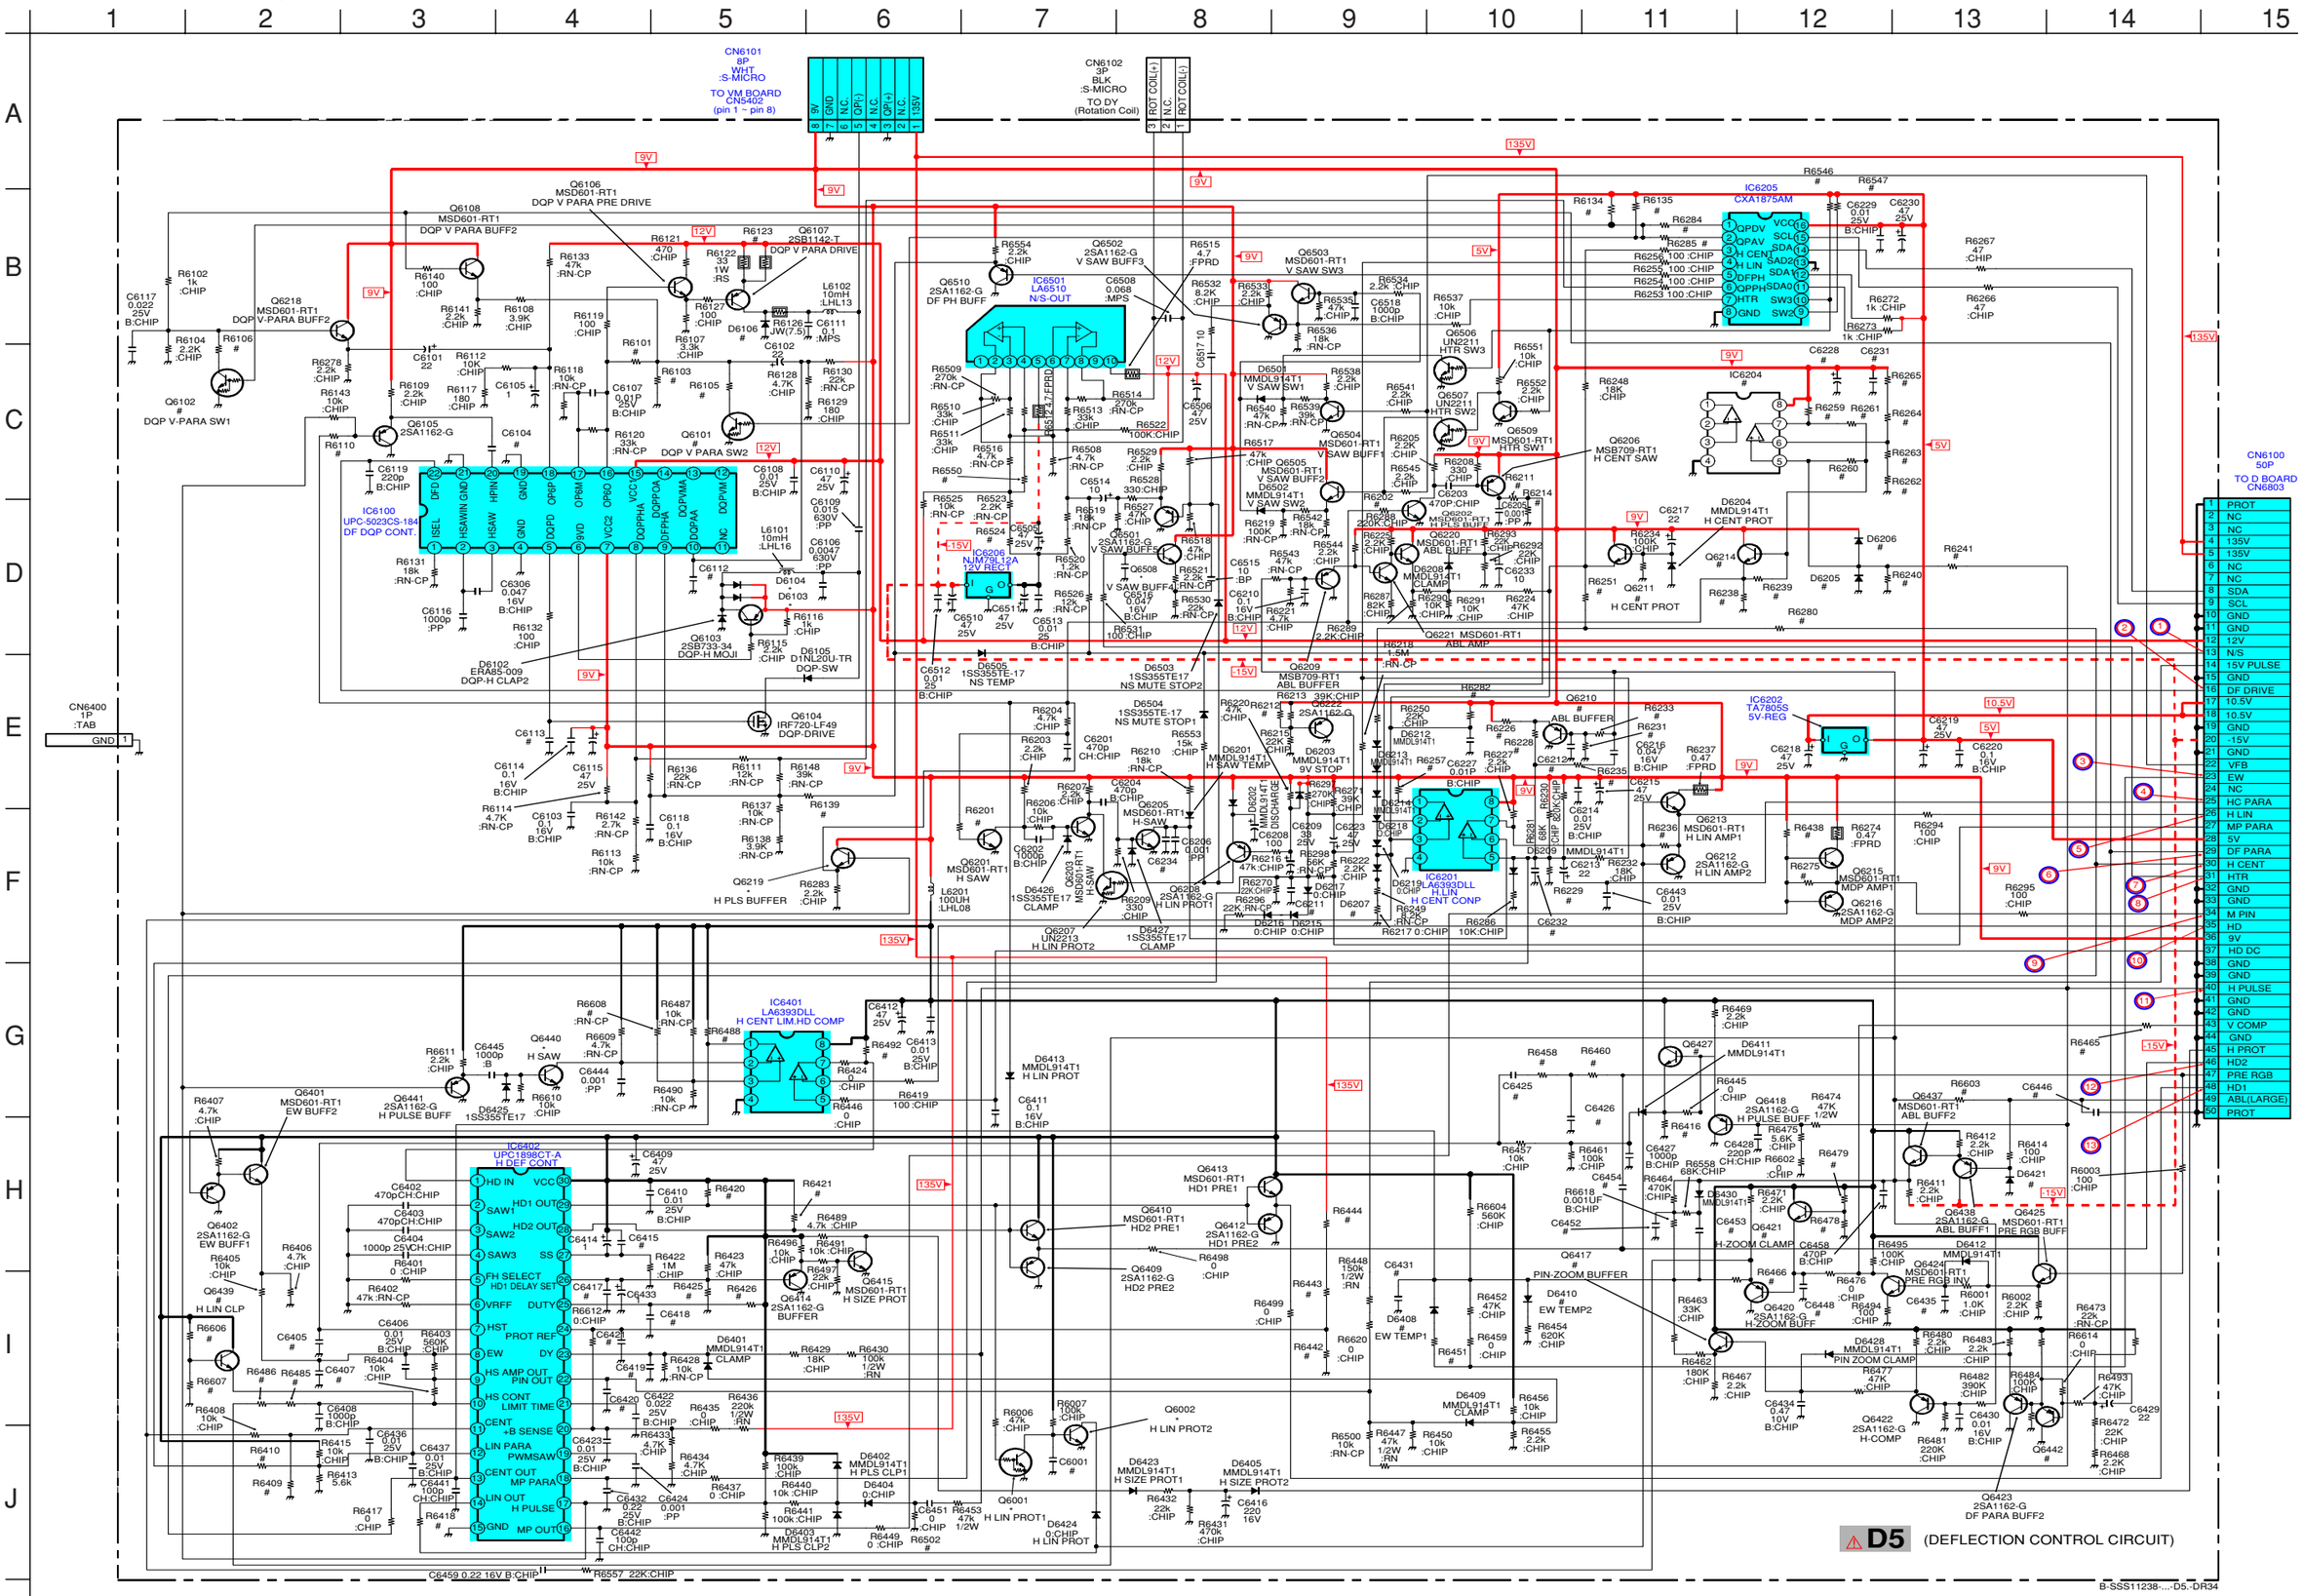
CN6101 8P WHT :S-MICRO TO VM BOARD CN5402 (pin 1 ~ pin 8)
CN6102 3P BLK :S-MICRO TO DY (Rotation Coil)
IC6100 UPC-5023CS-184 DF DQP CONT.
IC6205 CXA1875AM
IC6501 LA6510 N-S-OUT
IC6201 LA6393DLL H CENT CONP
IC6202 TA7805S 5V-REG
IC6401 LA6393DLL H CENT LIM.HD COMP
IC6402 UPC1898CT-A H DEF CONT
IC6206 NJM79L12A 12V REG
CN6100 50P TO D BOARD CN6803
CN6400 1P :TAB
D5 (DEFLECTION CONTROL CIRCUIT)
B-SSS11238-....-D5..-DR34

KV-DR34M69/DR34M89
RM-991

(5) C Board Schematic Diagram

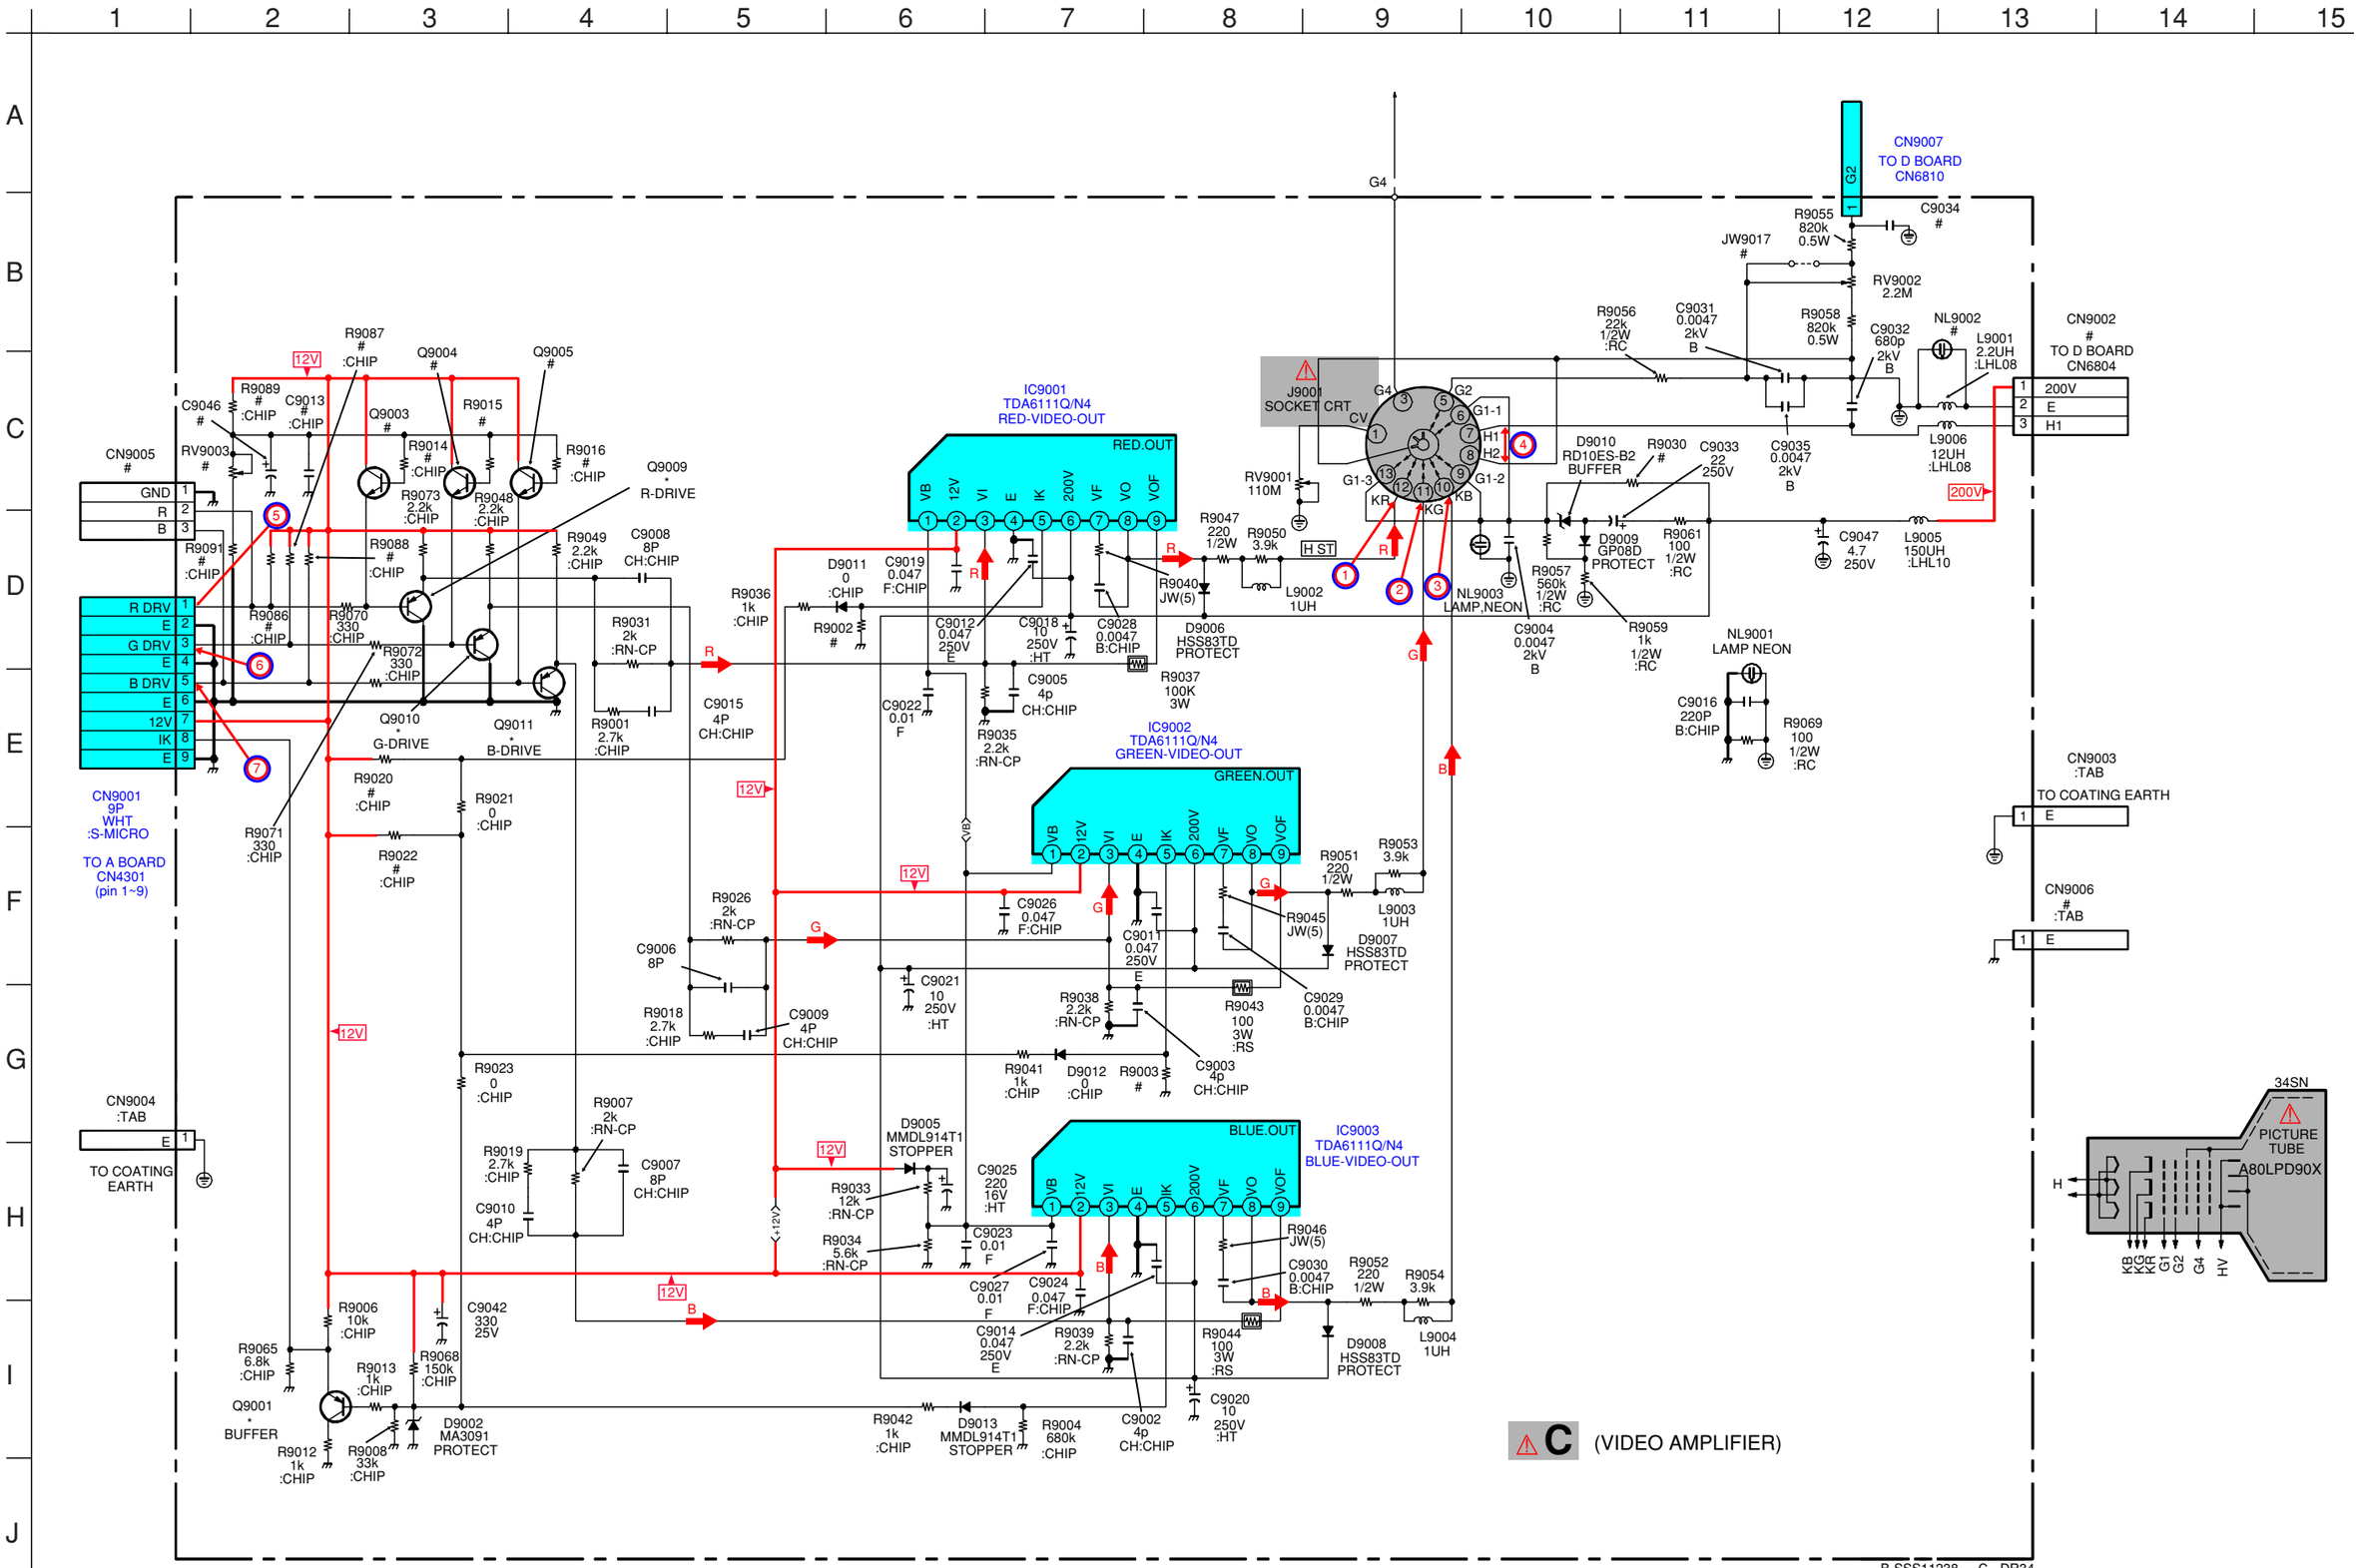

KV-DR34M69/DR34M89
RM-991

(6) P and F1 Boards Schematic Diagrams

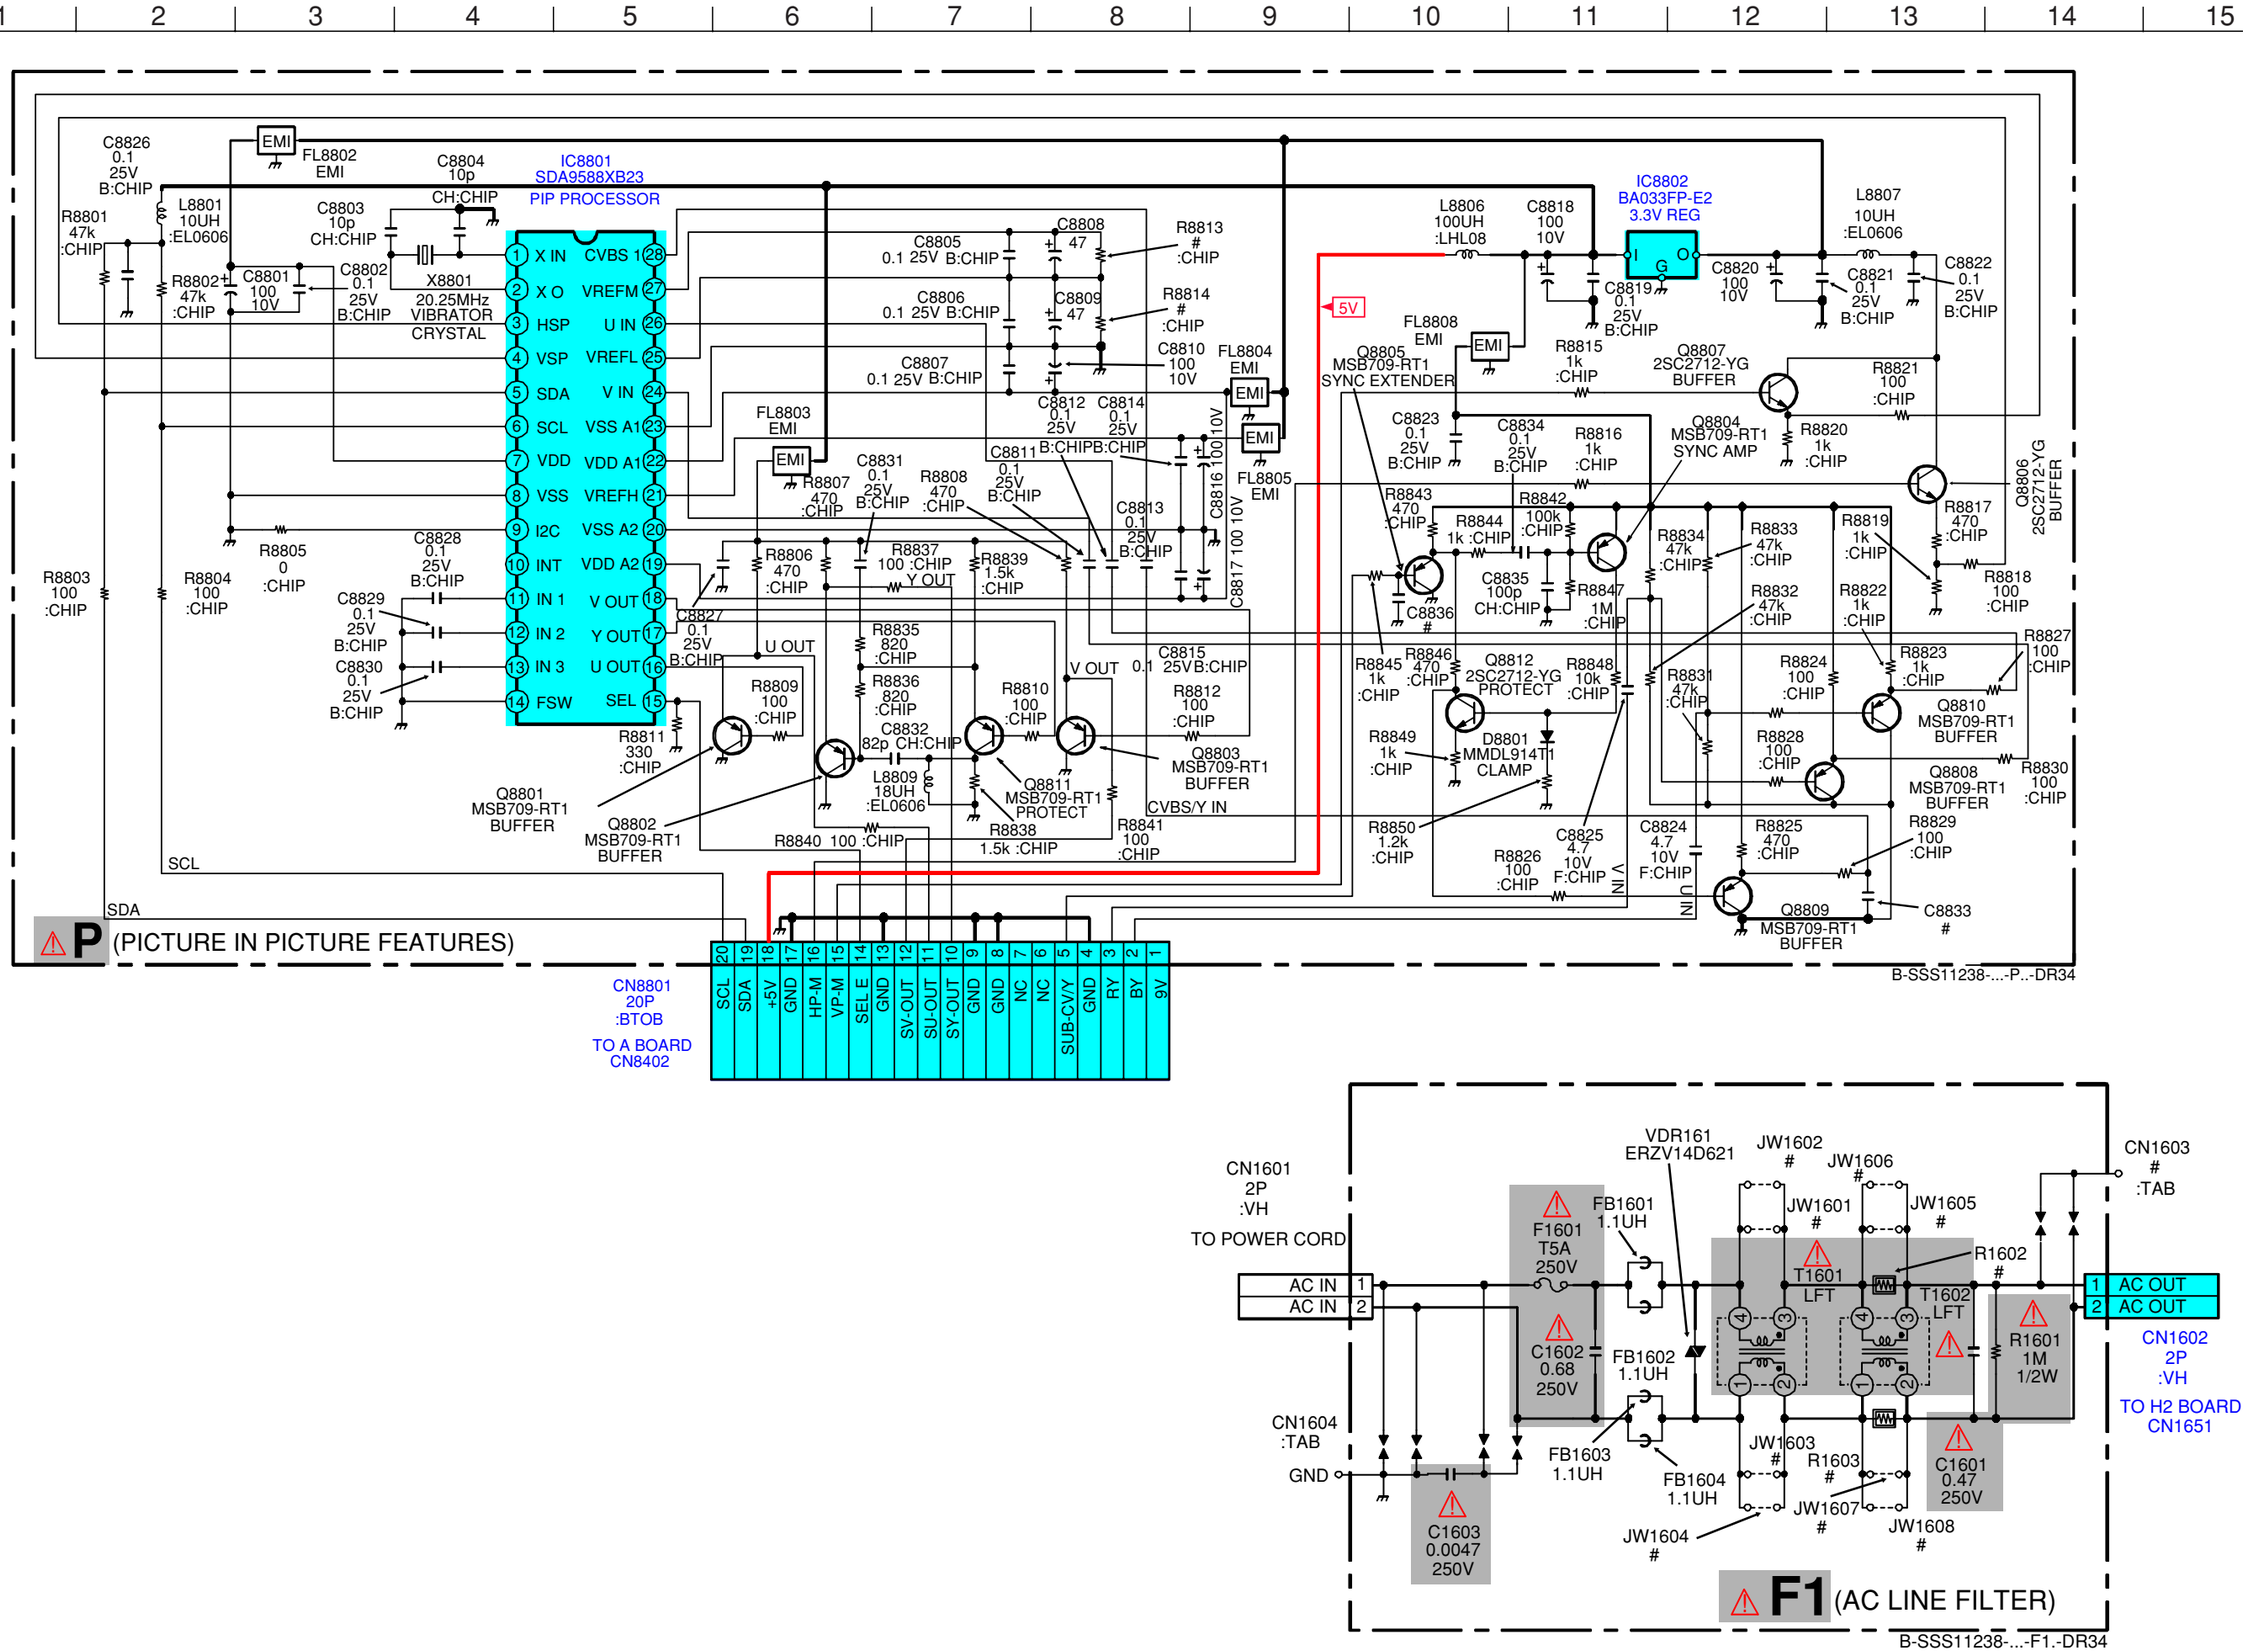

KV-DR34M69/DR34M89
RM-991

(7) BC1 Board Schematic Diagram

⚠BC1

(2D & 3D DIGITAL COMB)

(Y/C SEP)

2.5V	A2.5V
2.5V-2	D2.5V
5V	A5V
5V-2	D5V
3.3V-2	D3.3V
9V	9V

IC2300 TC90A69F :B2H 2D COMB

IC2004 UPD64083GF-3BA 3D COMB:B8H

IC2001 BA25BC0FP-E2 2.5V REGULATOR

IC2005 BA033FP-E2 3.3V REGULATOR

CN2001 20P :BTOB TO A BOARD CN8401

1	NT-Y OUT
2	NT-C OUT
3	E
4	E
5	C IN
6	COMP V IN
7	RESET
8	GND
9	PAL-C
10	PAL-Y
11	GND
12	E
13	SDA
14	5V
15	SCL
16	GND
17	E
18	9V
19	FSC
20	+6.5V

CN2002 #

1	GND

B-SSS11238-...-BC1-DR34

KV-DR34M69/DR34M89
RM-991

(8) H1 Board Schematic Diagram

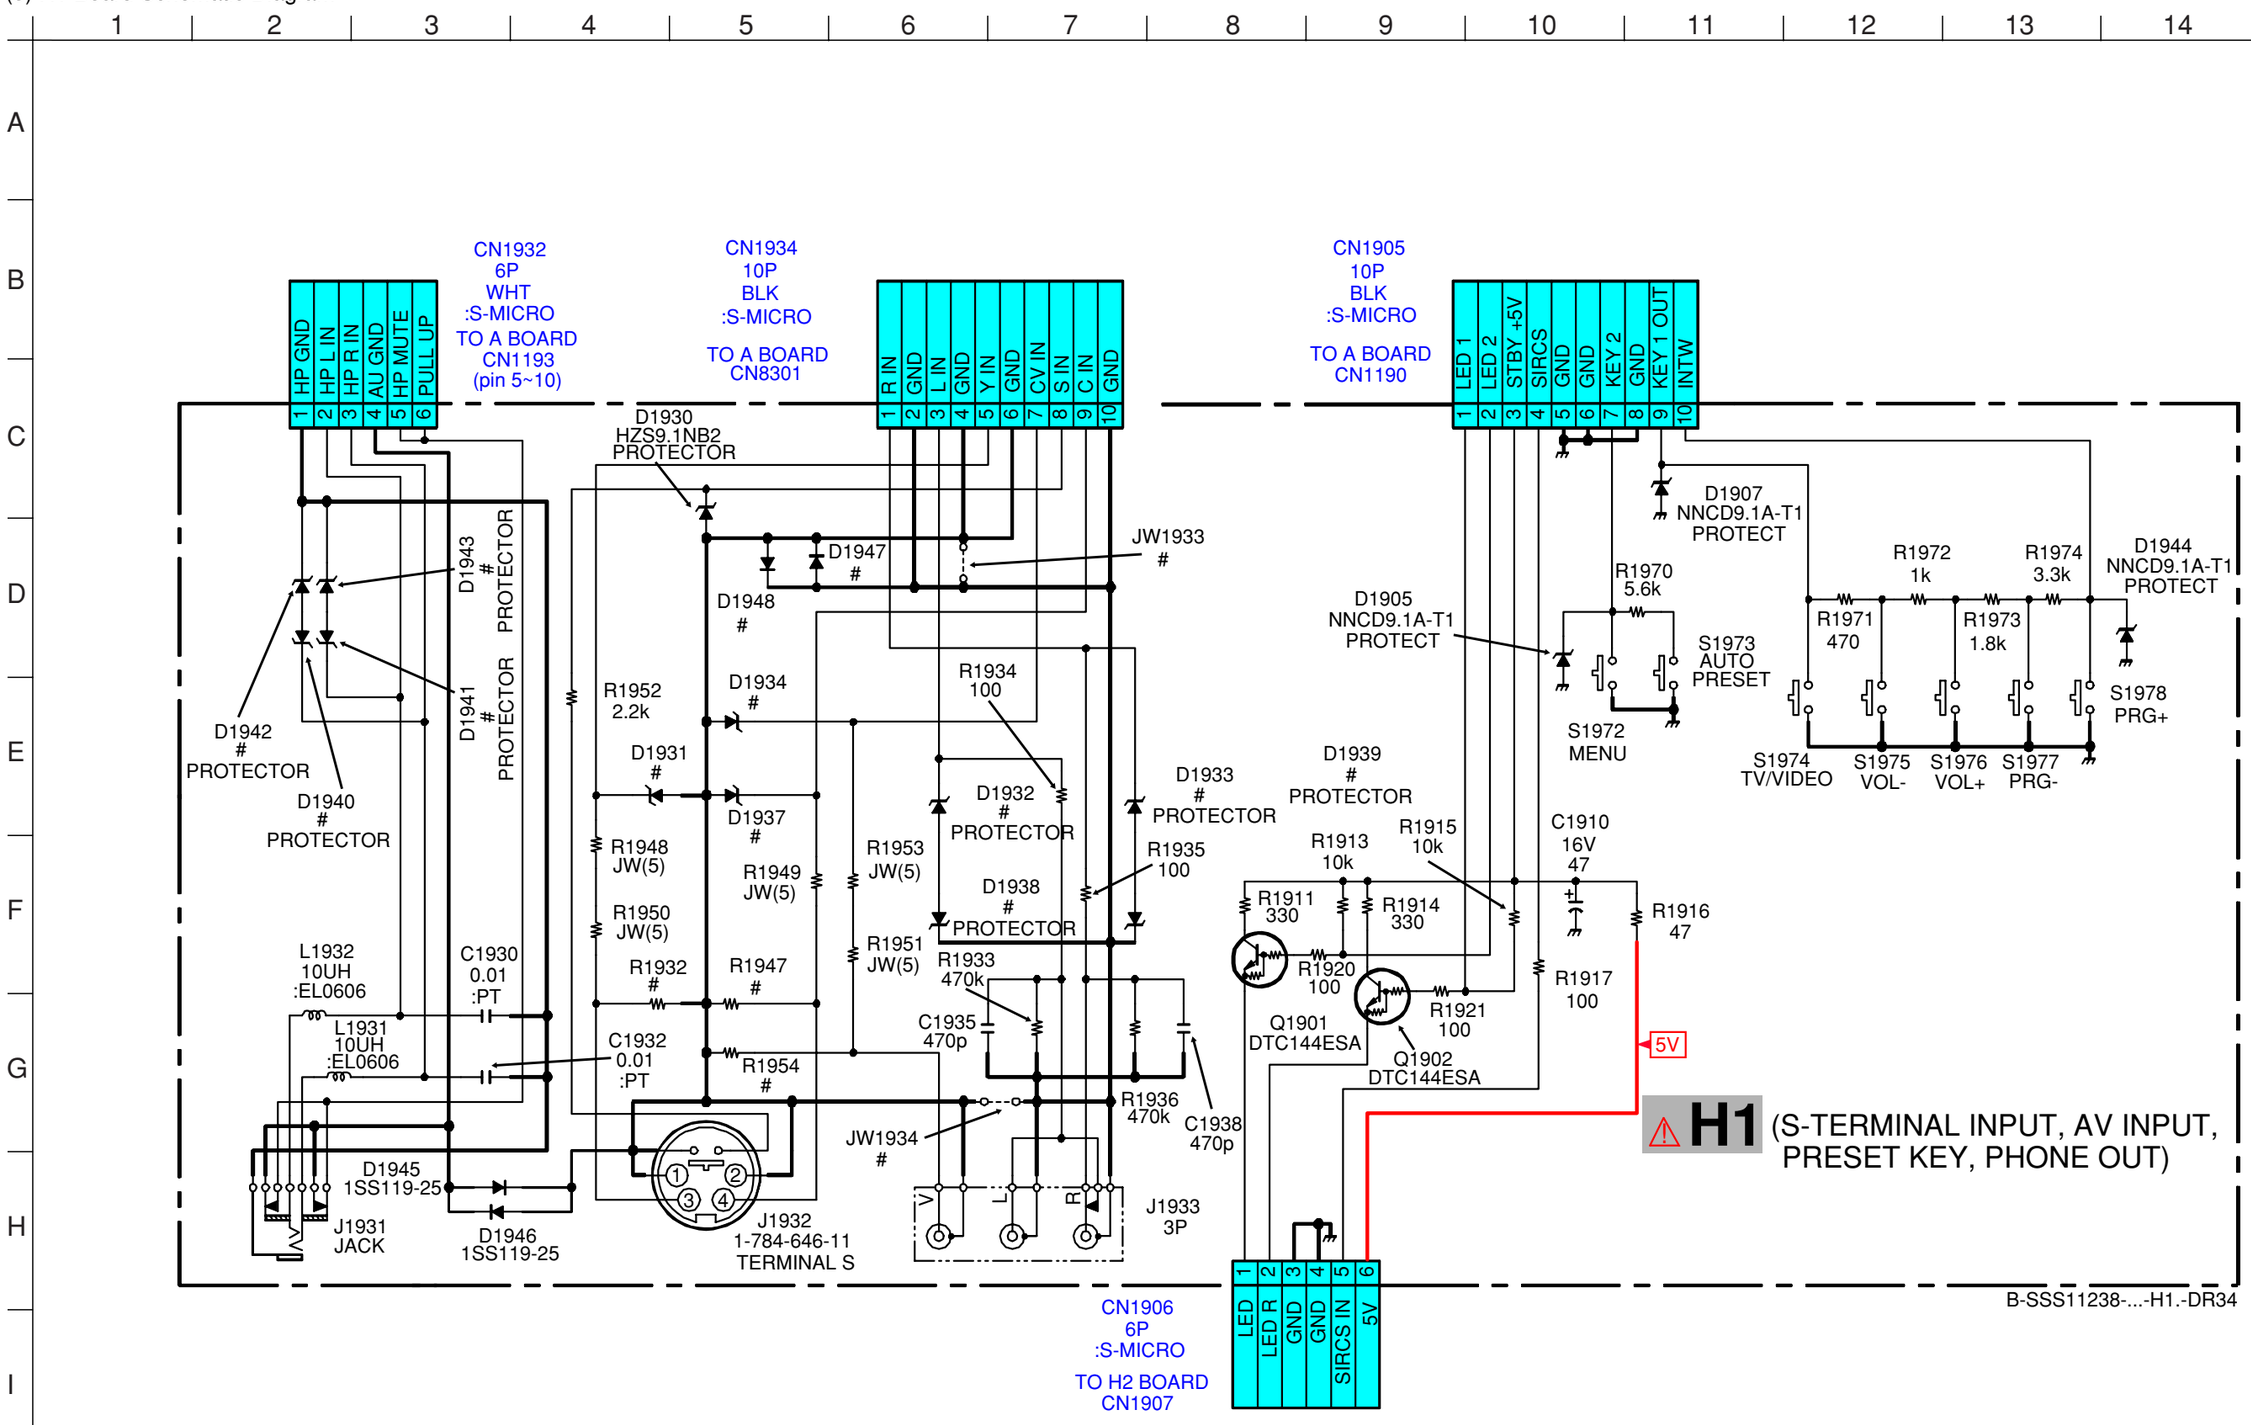

KV-DR34M69/DR34M89
RM-991

(9) V2 Board Schematic Diagram

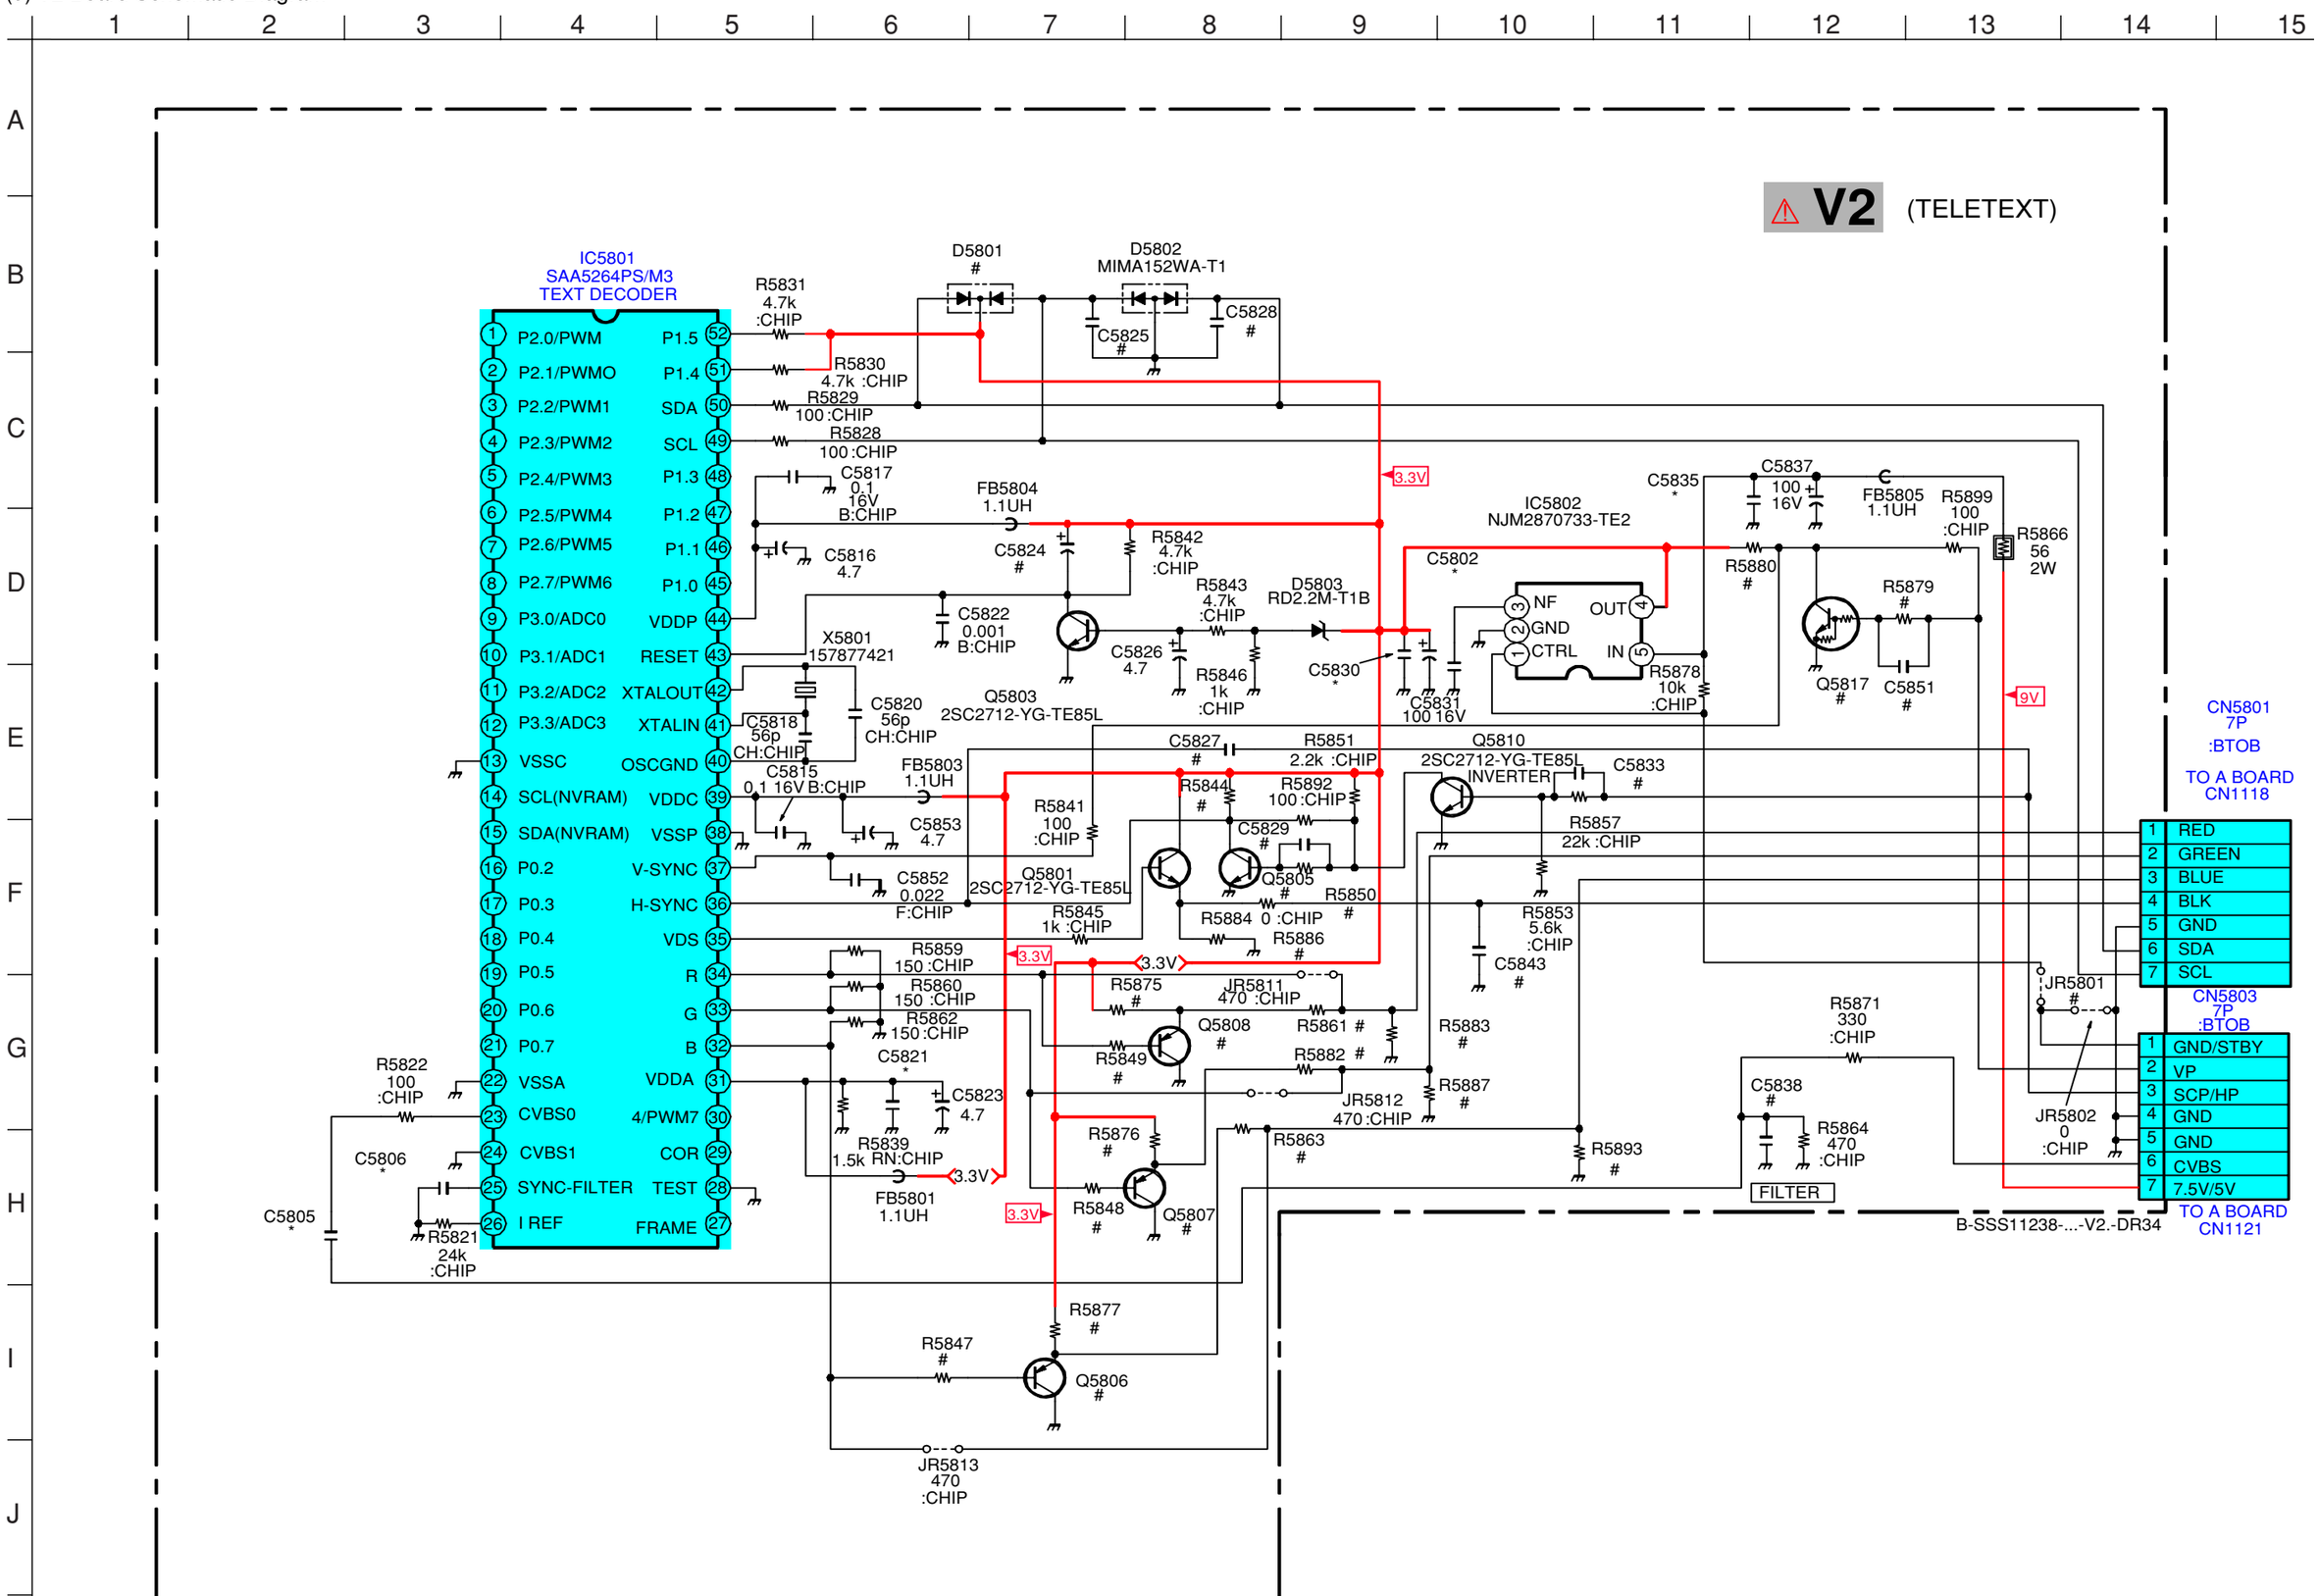

KV-DR34M69/DR34M89
RM-991

(10) DH and VM Boards Schematic Diagrams

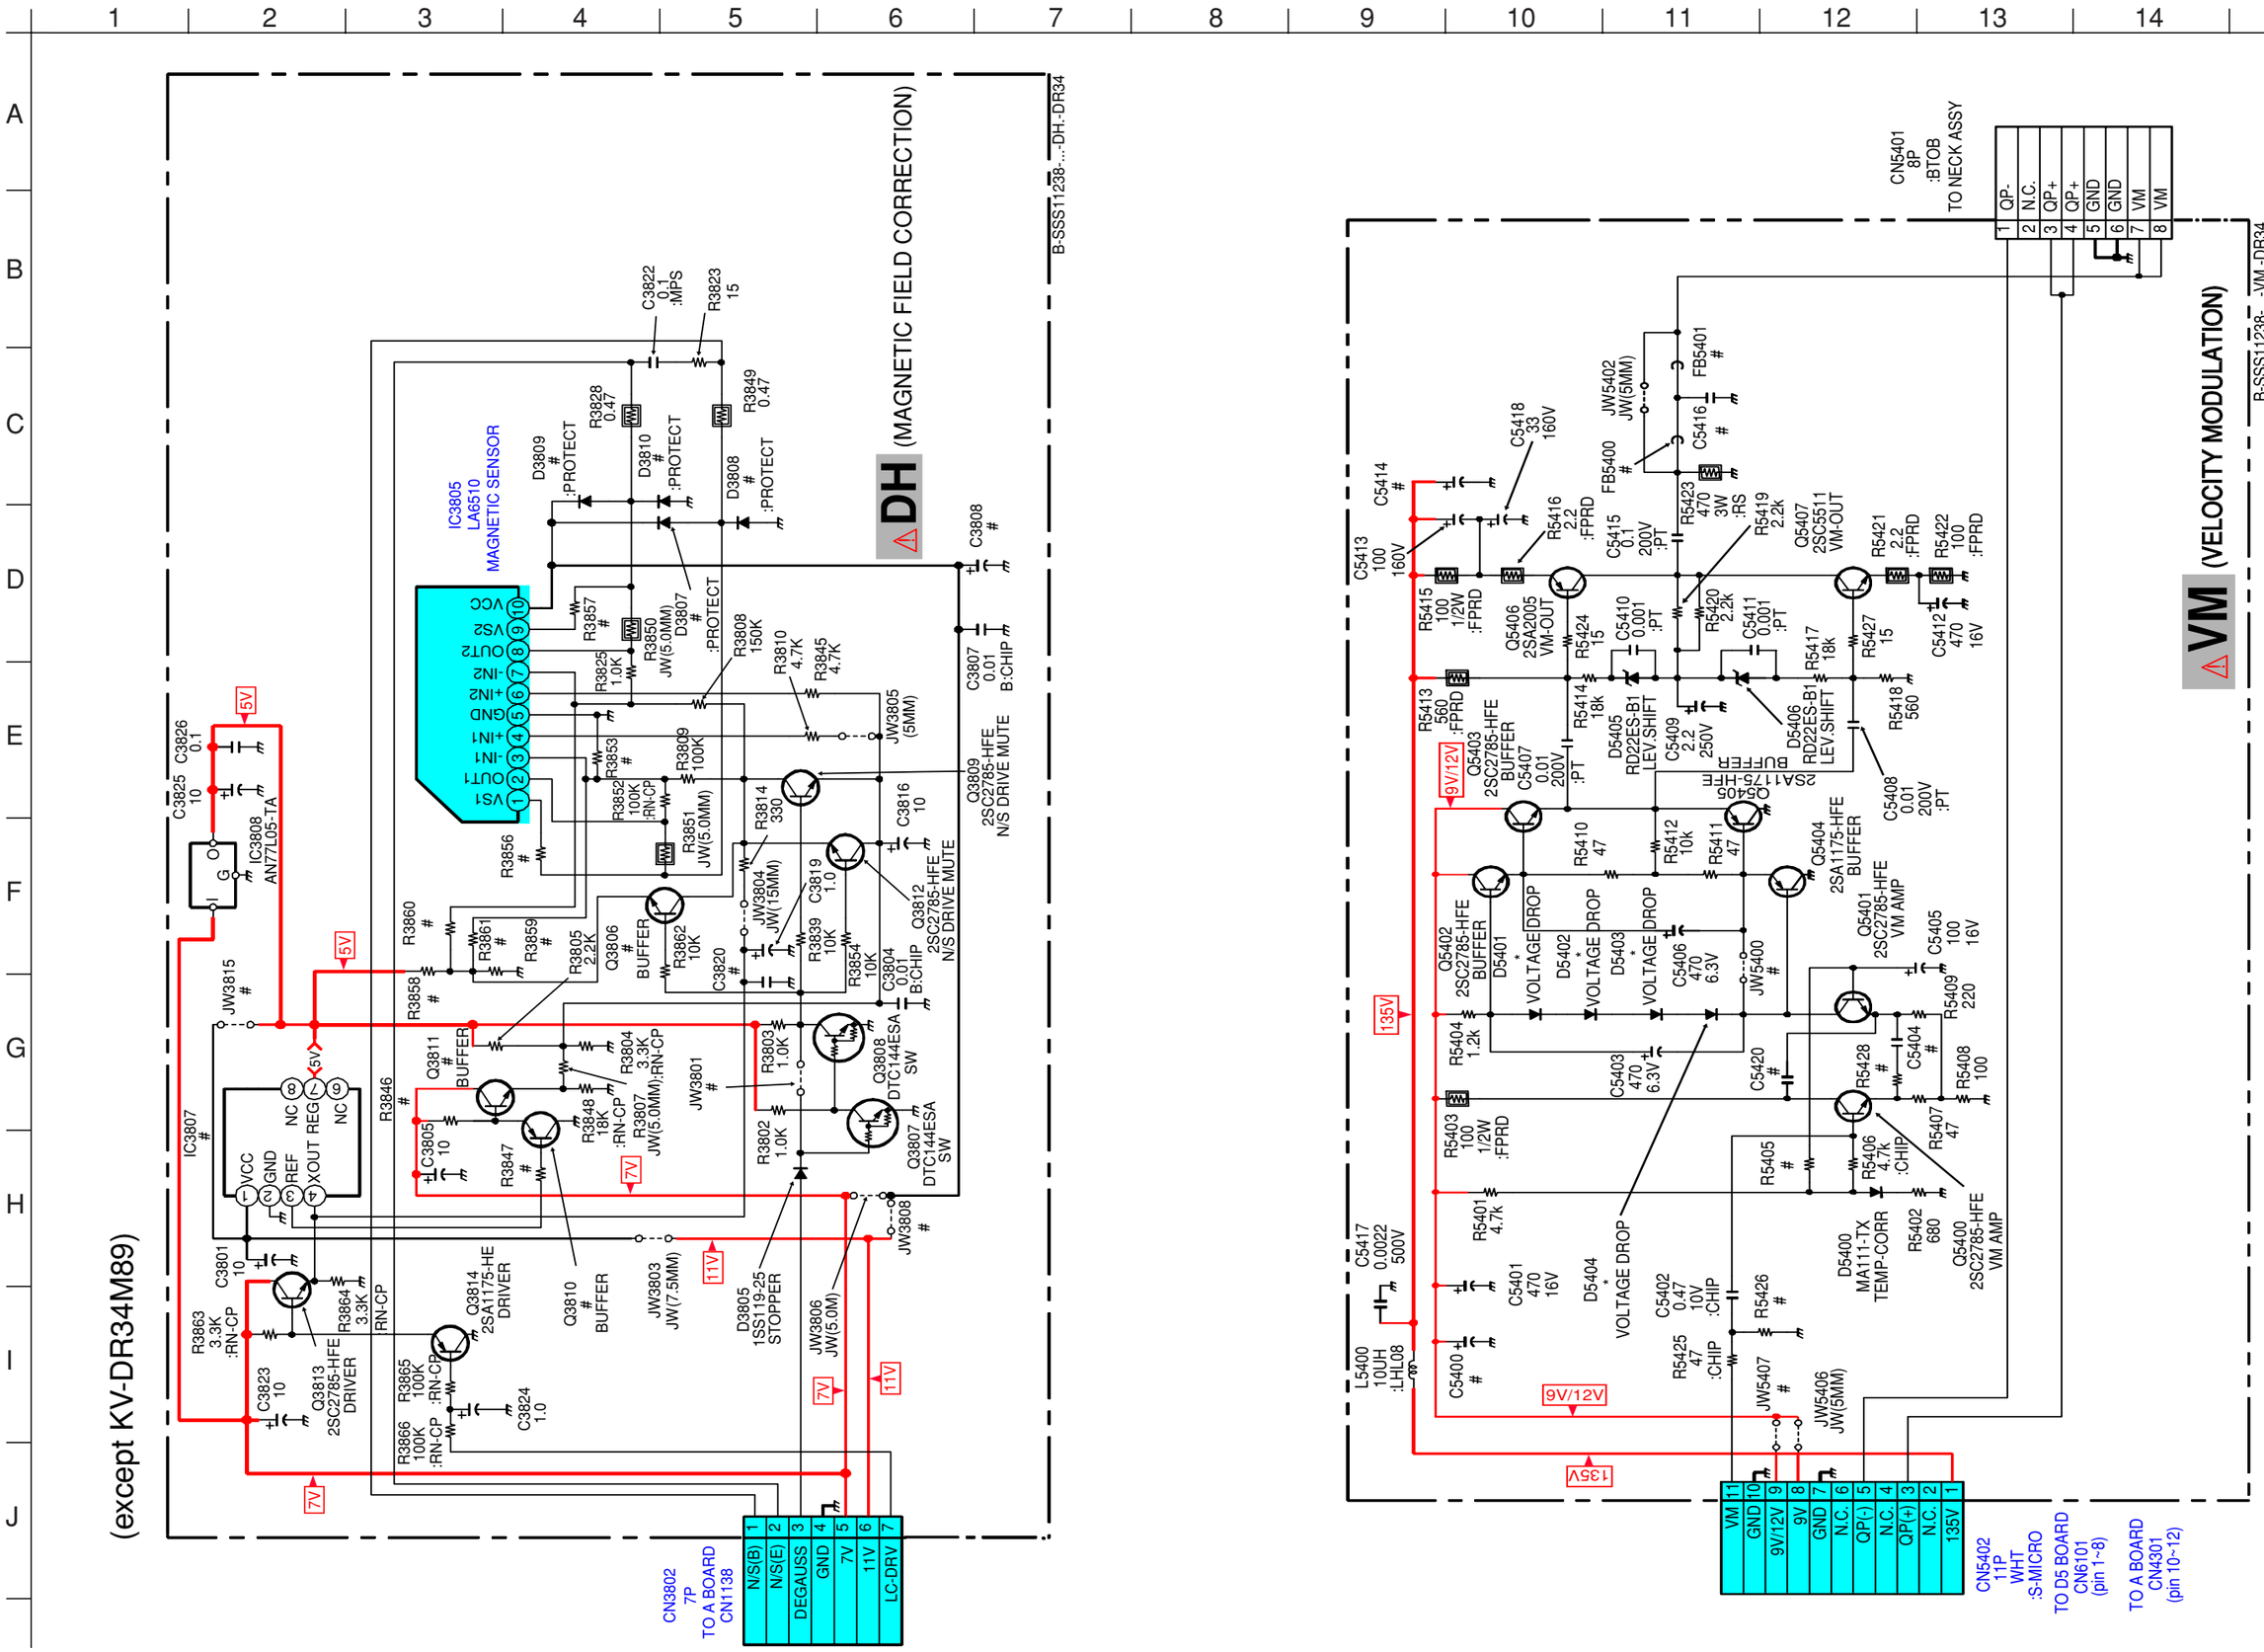

(11) H2 and J Boards Schematic Diagrams

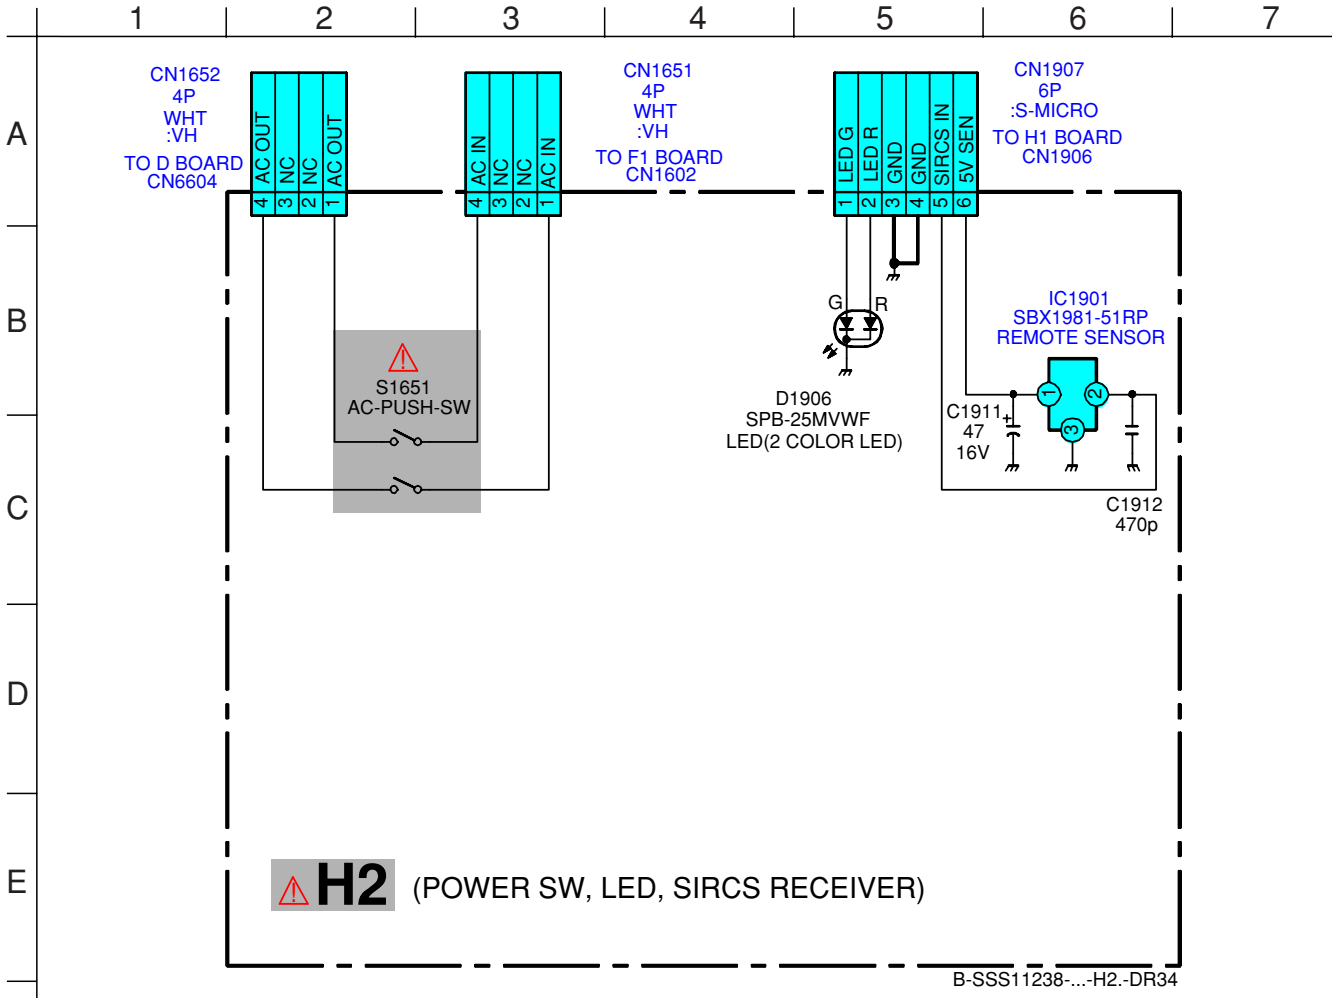

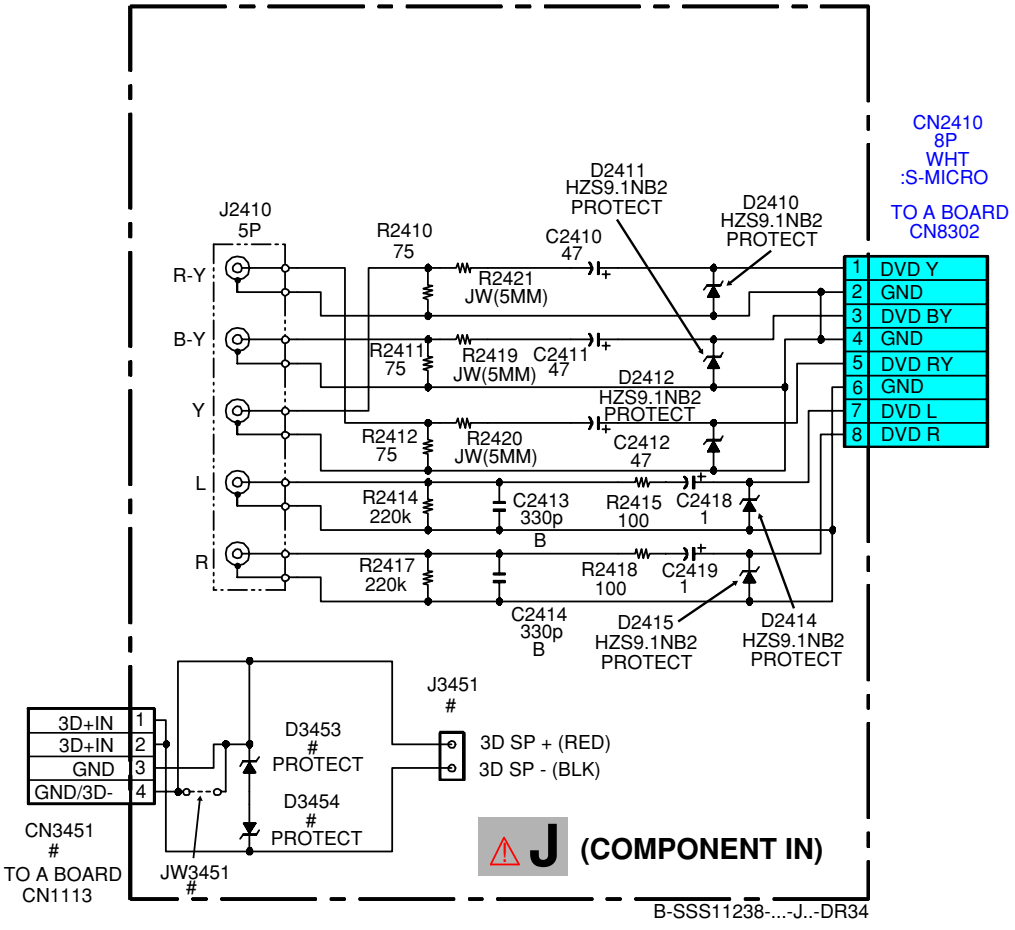

D Board ✲ Mark List

	KV-DR34M69(GE)	KV-DR34M69(THAILAND)	KV-DR34M89(ME)
C6606	100P :CHIP	#	100P :CHIP
C6609	1	#	1
C6610	100P :CHIP	#	100P :CHIP
C6611	0.001P 25V :CHIP	#	0.001P 25V :CHIP
C6621	0.0012 250V	#	0.0012 250V
C6622	0.0012 250V	#	0.0012 250V
C6629	#	560 450V	#
C6679	0.47 16V	0.47 10V	0.47 16V
C6814	2.2 10V	2.2 6.3V	2.2 10V
C6844	0.1 :CHIP	0.1 25V :CHIP	0.1 :CHIP
C6849	0.1 :CHIP	0.1 25V	0.1 :CHIP
C6850	0.1 :CHIP	0.1 25V	0.1 :CHIP
C6884	2.2 10V	2.2E + 06PF 6.3V	2.2 10V
CN6602	2P	#	2P
D6601	1SS119-25	1SS133T-77	1SS119-25
D6602	MMDL914-TI	#	MMDL914-TI
D6603	MMDL914-TI	#	MMDL914-TI
D6604	MMDL914-TI	#	MMDL914-TI
D6609	1SS119-25	#	1SS119-25
D6610	MMDL914-TI	#	MMDL914-TI
D6611	MMDL914-TI	#	MMDL914-TI
D6612	U05G	#	U05G
D6613	U05G	#	U05G
D6615	1SS119-25	1SS133T-77	1SS119-25
D6623	1SS119-25	1SS133T-77	1SS119-25
D6636	1SS119-25	1SS133T-77	1SS119-25
D6642	1SS119-25	1SS133T-77	1SS119-25
D6648	RD12ES-B1	#	RD12ES-B1
D6802	1SS119-25	1SS133T-77	1SS119-25
D6804	1SS119-25	1SS133T-77	1SS119-25
D6806	1SS119-25	1SS133T-77	1SS119-25
D6822	#	RN4Z	#
IC6601	#	UPC1093J-I-T	#
IC6608	#	UPC339C	#
Q6602	2SC2785-HFE	#	2SC2785-HFE
Q6605	#	2SC2712-YG	#
R6605	120K :RN	#	120K :RN
R6606	75K :RN	#	75K :RN
R6607	680K :RN	#	680K :RN
R6608	680K :RN	#	680K :RN
R6609	680K :RN	4.7K: RN-CP	680K :RN
R6610	100K :CHIP	10K: RN-CP	100K :CHIP
R6612	120K :RN	0 :CHIP	120K :RN
R6613	680K :RN	#	680K :RN
R6614	680K :RN	#	680K :RN
R6615	680K :RN	#	680K :RN
R6616	100K :CHIP	#	100K :RN
R6617	390K :CHIP	#	390K :CHIP
R6618	75K :RN	#	75K :RN
R6619	470K :CHIP	#	470K :CHIP
R6620	470K :CHIP	#	470K :CHIP
R6621	10K :CHIP	#	10K :CHIP
R6623	150 1W :RS	#	150 1W :RS
R6628	#	10K :CHIP	#
R6638	1.0 15W	2.2	1.0 15W
R6639	1.0 15W	#	1.0 15W
R6640	22K :CHIP	#	22K :CHIP
R6641	470K 1/2W	#	470K 1/2W
R6642	470K 1/2W	#	470K 1/2W
R6643	22K :CHIP	#	22K :CHIP
R6648	#	4.7K :CHIP	#
R6654	#	47K :CHIP	#
R6699	#	10K	#
R6701	#	10K :CHIP	#
R6702	#	39K :CHIP	#
RY6602	RELAY, AC POWER	#	RELAY, AC POWER
VD6601	ENE471D-20A	#	ENE471D-20A
VD6604	ENE271D-20A	#	ENE271D-20A

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

D5 Board ✲ Mark List

	KV-DR34M69(GE)	KV-DR34M69(THAILAND)	KV-DR34M89(ME)
C6216	0.047 :CHIP	0.047 16V	0.047 :CHIP
C6306	0.047 :CHIP	0.047 16V	0.047 :CHIP
C6422	0.022 :CHIP	0.022 25V	0.022 :CHIP
C6430	0.047 :CHIP	0.047 16V	0.047 :CHIP
C6452	0.047 :CHIP	0.047 16V	0.047 :CHIP
C6459	0.22 25V	0.22 16V	0.22 25V
C6460	0.033 :CHIP	0.033 16V	0.033 :CHIP
C6516	0.047 :CHIP	0.047 16V	0.047 :CHIP
D6103	1SS119-25	1SS133T-77	1SS119-25
D6104	1SS119-25	1SS133T-77	1SS119-25
Q6001	TR DTC144EKA	UN2213	TR DTC144EKA
Q6002	2SD601A-Q-TX	MSD601-RT1	2SD601A-Q-TX
Q6219	2SD601A-Q-TX	MSD601-RT1	2SD601A-Q-TX
Q6440	2SD601A-Q-TX	MSD601-RT1	2SD601A-Q-TX
Q6508	2SD601A-Q-TX	MSD601-RT1	2SD601A-Q-TX

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

C Board ✲ Mark List

	KV-DR34M69(GE)	KV-DR34M69(THAILAND)	KV-DR34M89(ME)
CN9002	3P	4P	3P
Q9001	2SA1037-T146	MSB709-RT1	2SA1037AK-T146
Q9009	2SA1037-T146	MSB709-RT1	2SA1037AK-T146
Q9010	2SA1037-T146	MSB709-RT1	2SA1037AK-T146
Q9011	2SA1037-T146	MSB709-RT1	2SA1037AK-T146

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

V2 Board ✲ Mark List

	KV-DR34M69(GE)	KV-DR34M69(THAILAND)	KV-DR34M89(ME)
C5802	0.1 25V	0.1 16V	0.1 25V
C5805	0.1 25V	0.1 16V	0.1 25V
C5806	0.1 25V	0.1 16V	0.1 25V
C5821	0.1 25V	0.1 16V	0.1 25V
C5830	0.1 25V	0.1 16V	0.1 25V
C5835	0.1 25V	0.1 16V	0.1 25V

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

VM Board ✲ Mark List

	KV-DR34M69(GE)	KV-DR34M69(THAILAND)	KV-DR34M89(ME)
D5401	DINS4	11EQS04	DINS4
D5402	1SS119-25	1SS133T-77	1SS119-25
D5403	1SS119-25	1SS133T-77	1SS119-25
D5404	1SS119-25	1SS133T-77	1SS119-25

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

A Board ✲ Mark List

	KV-DR34M69(GE)	KV-DR34M69(THAILAND)	KV-DR34M89(ME)
C1237	0.15 16V B:CHIP	0.15 16V B:CHIP	0.22 16V B:CHIP
C1238	0.15 16V B:CHIP	0.15 16V B:CHIP	0.22 16V B:CHIP
CN1138	5P	5P	#
D1200	DTZ-TT-11-16B	UDZS-TE17-16B	DTZ-TT11-16B
D2200	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D2201	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8301	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8302	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8303	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8304	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8305	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8306	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8307	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8308	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8309	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8310	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8311	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8312	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8313	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8314	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8315	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8316	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8320	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8321	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8322	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8323	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8324	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
D8325	RD9.1S-B	UDZSTE-179-1B	RD9.1S-B
IC003	BR24C16F-E2	M24C16-MN6T(A)	BR24C16F-E2
JR109	#	#	0 :CHIP
TU101	BTF-WG442	BTF-WG442	BTF-LG434

Note: The parts indicated as "#" in this circuit diagram are not listed here, as they are not used for these models.

7-3. VOLTAGE LIST AND WAVEFORM

A BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC001	1	4.9
	2	5.0
	3	0
	4	0
	5	0
	6	0
	7	0.4
	①  5.2Vp-p	
	8	0
	9	4.9
	10	0
	11	2.3
	② PAL 3.2Vp-p	
	② NTSC3.58 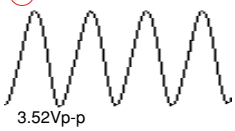 3.52Vp-p	
	12	2.3
	13	4.9
	14	4.9
	15	0.3
	16	0.2
	17	(2.3)[2.7]
	18	2.4
	19	4.9
	20	0
	21	4.9
	22	4.9
	23	0
	24	4.8
	25	0
	26	0
	27	4.9
	28	0
	29	4.7
	30	4.9
	31	4.5
	32	0
	③ PAL 156mVp-p	
	③ NTSC3.58 148mVp-p	

Ref	Pin No.	Voltage[v]
	33	0
	④ PAL 156mVp-p	
	④ NTSC3.58 148mVp-p	
	34	0
	⑤ PAL 156mVp-p	
	⑤ NTSC3.58 168mVp-p	
	35	4.9
	36	0
	37	0
	38	2.4
	39	2.4
	40	4.7
	41	4.9
	42	0
	43	0
	44	0
	45	0
	46	0
	47	4.9
	48	4.4
	49	4.9
	50	4.4
	51	0
	52	0
	53	0
	54	4.5
	55	0
	56	0
	57	(0.3)[0.1]
	58	0
	59	0
	60	0
	61	0
	62	4.4
	63	0
	64	4.8
IC002	1	0
	2	4.9
	3	4.9
	4	7.1
	5	4.9
	6	0
	7	0.9
IC003	1	0
	2	0
	3	0
	4	0
	5	4.9
	6	4.9
	7	0
	8	4.9

Ref	Pin No.	Voltage[v]
IC100	1	4.9
	2	4.9
	3	0
IC1200	1	4.5
	2	4.5
	3	4.5
	4	0
	5	4.5
	6	4.5
	7	4.5
	8	9.0
IC1203	1	4.5
	2	4.5
	3	4.4
	4	0
	5	4.4
	6	4.5
	7	4.5
	8	9.0
IC1204	1	0
	2	0
	3	28.0
	4	0
	5	0
	6	2.1
	7	13.7
	8	2.1
	9	0
	10	29.0
	11	13.7
	12	13.7
IC1205	1	4.5
	2	4.5
	3	4.5
	4	4.5
	5	4.9
	6	0
	7	0
	8	4.5
	9	4.5
	10	4.5
	11	4.5
	12	0
	13	4.9
	14	9.0
IC1207	1	4.5
	2	4.5
	3	4.5
	4	4.5
	5	4.5
	6	4.5
	7	4.5
	8	4.5
	9	4.5
	10	4.5
	11	4.5
	12	4.5
	13	4.5
	14	0.6
	15	1.5
	16	1.6
	17	1.7
	18	4.4
	19	4.5
	20	0
	21	9.0
	22	4.5
	23	0
	24	3.4
	25	3.4
	26	3.2
	27	0.6
	28	4.6

A BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
	29	4.6
	30	4.5
	31	4.6
	32	4.6
	33	4.5
	34	4.5
	35	4.5
	36	4.5
	37	4.5
	38	4.5
	39	4.5
	40	4.5
IC2200	1	4.5
	2	4.5
	3	4.4
	4	0
	5	4.3
	6	4.4
	7	4.5
	8	9.0
IC2600	I	10.7
	G	0
	O	9.0
IC2601	I	6.3
	G	0
	O	5.0
IC2602	I	9.5
	G	0
	O	4.9
IC2603	I	5.8
	G	0
	O	3.3
IC3001	1	2.8
	2	2.8
	3	(2.7)[0]
	4	1.9
	5	1.9
	6	0
	7	(2.7)[2.3]
	8	(2.7)[2.3]
	9	(2.7)[2.3]
	10	1.9
	11	1.9
	12	5.0
	13	4.0
	14	4.0
	15	2.9
	16	2.7
	17	0
	18	1.0
	19	0
	20	(2.9)[2.5]
	21	0
	22	0.3
	23	0
	24	0
	25	2.8
	26	2.8
	27	3.1
	28	5.0
	29	0
	30	4.5
	31	4.5
	32	2.5
	33	2.9
	34	2.9
	35	2.8
	36	1.3
	37	1.0
	38	0.7
	39	2.5
	40	5.0
	41	2.3
	42	2.3
	43	2.3
	44	(1.9)[0]
	45	2.0
	46	(1.0)[0.7]
	47	2.5
	48	0
IC3002	1	0
	2	0
	3	0.3
	4	0.3
	5	0.3
	6	0
	7	0
	8	0
	9	4.9
	10	4.9
	11	4.9
	12	0.3
	13	0.3
	14	0.3
	15	0
	16	9.0
IC3003	1	0
	2	0
	3	3.2
	4	0
	5	3.2
	6	0
	7	0
	8	4.6
	9	4.6
	10	0
	11	4.6
	12	0
	13	9.1
	14	4.6
	15	0
	16	0
IC4301	1	0
	2	0
	3	0
	4	3.1
	5	3.1
	6	3.1
	7	0
	8	3.5
	9	3.5
	10	3.5
	11	0
	12	0
	13	0
	14	2.5
	15	4.9
	16	2.5
	17	2.6
	18	1.1
	19	4.9
	20	3.6
	21	3.4
	22	3.4
	23	5.0
	24	0
	25	4.5
	26	4.5
	27	0.9
	28	0.3
	29	5.0
	30	5.7
	31	1.3
	32	3.1
	33	1.6
	34	0
	35	0.8
	36	0.8
	37	2.9
	38	2.6
	39	0.6
	40	2.8
	⑩ PAL  740mVp-p	
	⑩ NTSC3.58 700mVp-p	
	41	0
	42	0
	43	3.5
	44	0
	45	3.7
	46	3.5
	47	3.8
	48	4.4
	49	4.8
	50	5.2
	51	4.2
	52	3.4
	⑪ PAL  720mVp-p	
	⑪ NTSC3.58  660mVp-p	
	53	3.4
	⑫ PAL  1.140Vp-p	
	⑫ NTSC3.58  780mVp-p	
	54	0.6
	55	9.0
	56	1.0
	57	3.9
	58	4.4
	59	1.7
	60	1.7
	61	9.0
	62	3.2
	63	3.3
	64	3.4
IC4302	I	9.0
	G	0
	O	5.0

A BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC4304	1	0
	2	0.7
	3	0.8
	4	0
	5	0
	6	1.6
	7	0
	8	9.1
IC8302	1	3.9
	2	4.4
	3	3.9
	4	4.4
	5	4.4
	6	(1.1)[0.7]
	7	(0)[4.9]
	8	3.9
	9	4.4
	10	(5.1)[4.8]
	11	(0)[4.4]
	12	4.4
	13	(1.0)[0.7]
	14	4.9
	15	3.9
	16	4.4
	17	(5.0)[4.8]
	18	4.4
	19	4.4
	20	(1.0)[0.7]
	21	4.9
	22	3.9
	23	4.4
	24	3.9
	25	4.4
	26	4.4
	27	0.6
	28	4.9
	29	4.4
	30	3.9
	31	4.4
	32	0
	33	4.4
	34	4.4
	35	0
	36	0
	37	4.4
	38	4.5
	39	3.8
	40	4.5
	41	4.6
	42	9.0
	43	4.5
	44	4.4
	45	4.5
	46	3.7
	47	4.4
	48	0
	49	4.9
	50	4.5
	51	4.4
	52	4.5
	53	4.5
	54	4.5
	55	3.8
	56	3.3
	57	0
	58	4.3
	59	4.4
	60	4.4
	61	4.5
	62	4.5
	63	4.4
	64	4.5

Ref	Pin No.	Voltage[v]
IC8306	1	2.2
	2	1.9
	3	1.4
	4	0.1
	5	2.8
	6	4.9
	7	2.5
	8	0
	9	0.3
	10	0.8
	11	2.3
	12	5.0
	13	(4.5)[4.3]
	14	4.5
	15	0
	16	0
	17	2.5
	18	2.5
	19	1.3
	20	2.3
	⑨ PAL 148mVp-p	
	⑨ NTSC3.58 140mVp-p	
	21	1.7
	⑧  4.0Vp-p	
	22	1.8
	⑦  1.64Vp-p	
	23	1.8
	⑥  1.64Vp-p	
	24	0
	25	0.9
	26	0.9
	27	(0.8)[1.0]
	28	0
	29	2.5
	30	2.5
	31	1.7
	32	5.0
	33	2.5
	34	2.5
	35	2.5
	36	0
	37	1.1
	38	4.0
	39	1.7
	40	3.2

Ref	Pin No.	Voltage[v]
	41	2.3
	42	0
	43	1.7
	44	2.3
	45	4.5
	46	2.3
	47	(0)[3.7]
	48	1.7
IC8309	1	3.0
	2	5.3
	3	2.7
	4	0
	5	0
	6	9.0
	7	2.1
	8	0
IC8310	1	0.8
	2	0
	3	0
	4	0
	5	0
	6	2.1
	7	0
	8	5.0
	9	5.7
	10	0
	11	4.4
	12	0
	13	0
	14	4.5
	15	5.0
	16	2.7
	17	2.7
	18	0
	19	3.0
	20	8.3
	21	2.4
	22	(1.1)[1.7]
	23	0
	24	0
IC8312	1	5.0
	2	0.3
	3	0
	4	0.3
	5	5.0
Q001	B	4.9
	C	0
	E	(0.3)[0.5]
Q002	B	0
	C	4.9
	E	0
Q003	B	0.3
	C	4.9
	E	0.3
Q004	B	0.1
	C	0
	E	0
Q008	B	0.6
	C	0
	E	0
Q101	B	2.5
	C	0
	E	3.1
Q301	B	10.6
	C	0
	E	(10.4)[10.6]
Q313	B	0
	C	(10.4)[10.6]
	E	0.3
Q1203	B	2.2
	C	4.9
	E	1.5

A BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]
Q1204	G	0	Q4305	B	1.7	Q8307	B	6.0
	D	0		C	6.7		C	9.0
	S	0		E	1.2		E	5.4
Q1205	B	5.6	Q4306	B	6.5	Q8310	B	0.1
	C	9.0		C	0		C	5.0
	E	4.9		E	7.1		E	0.1
Q1206	B	2.9	Q4307	B	7.1	Q8319	B	1.8
	C	5.6		C	9.0		C	0
	E	2.3		E	6.4		E	2.4
Q1207	B	14.3	Q4308	B	6.5	Q8320	B	1.8
	C	-0.3		C	7.1		C	0
	E	12.4		E	7.2		E	2.5
Q1208	B	-0.2	Q4309	B	0	Q8321	B	1.7
	C	13.6		C	0		C	0
	E	0		E	0.7		E	2.3
Q1209	B	-0.3	Q4310	B	-0.2	Q8326	B	0.2
	C	13.7		C	9.0		C	3.4
	E	0		E	0		E	0
Q1210	B	-0.4	Q4314	B	4.0	Q8327	B	3.4
	C	13.7		C	5.4		C	0.2
	E	0		E	4.0		E	0
Q2200	B	2.7	Q4315	B	0.1	Q8328	B	0.2
	C	0		C	(5.2)[5.4]		C	5.4
	E	0		E	0		E	0
Q2201	B	2.7	Q4316	B	3.4	Q8329	B	2.5
	C	0		C	0		C	5.7
	E	0		E	4.0		E	1.8
Q2305	B	(2.2)[3.1]	Q4317	B	3.3	Q8330	B	5.7
	C	4.9		C	0		C	9.0
	E	(1.5)[2.4]		E	4.0		E	5.0
Q3001	B	2.4	Q4318	B	3.3	Q8331	B	2.5
	C	5.0		C	0		C	6.4
	E	1.7		E	4.0		E	1.8
Q3002	B	2.4	Q4319	B	4.2	Q8332	B	6.4
	C	5.0		C	0		C	9.0
	E	1.7		E	4.4		E	5.7
Q3003	B	2.4	Q4320	B	2.2	Q8333	B	2.7
	C	5.0		C	9.0		C	7.0
	E	1.7		E	4.4		E	2.0
Q3004	B	2.4	Q4321	B	2.5	Q8334	B	4.3
	C	5.0		C	0		C	9.0
	E	1.8		E	3.1		E	3.7
Q3005	B	3.4	Q4322	B	3.3	Q8335	B	2.7
	C	4.5		C	4.0		C	6.4
	E	2.9		E	4.1		E	2.1
Q3014	B	2.9	Q4323	B	4.0	Q8336	B	4.3
	C	0		C	9.0		C	9.0
	E	3.5		E	3.4		E	3.7
Q3300	B	3.7	Q4330	B	6.7	Q8351	B	3.1
	C	0		C	0		C	8.4
	E	4.3		E	7.3		E	2.5
Q3015	B	3.0	Q8301	B	4.5	Q8352	B	8.4
	C	4.9		C	0		C	(4)[3.8]
	E	2.3		E	5.2		E	9.0
Q3018	B	2.8	Q8302	B	4.4	Q8361	B	3.1
	C	4.9		C	9.0		C	5.0
	E	2.0		E	3.8		E	2.5
Q3023	B	2.8	Q8303	B	4.3	Q8362	B	3.1
	C	4.9		C	9.0		C	5.0
	E	2.0		E	3.7		E	2.5
Q3024	B	4.4	Q8304	B	4.4	Q8363	B	3.1
	C	0.1		C	9.0		C	5.0
	E	5.0		E	3.8		E	2.5
Q3025	B	0.1	Q8305	B	5.4	Q8364	B	(1.5)[1.3]
	C	5.0		C	3.0		C	0
	E	0		E	6.0		E	1.9
Q4301	B	5.7	Q8306	B	4.6			
	C	9.0		C	9.0			
	E	5.0		E	4.0			

DH BOARD VOLTAGE LIST AND WAVEFORM (KV-DR34M69 ONLY)

Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]
IC3807	1	10.6	Q3806	B	0	Q3811	B	6.3
	2	0		C	1.9		C	6.3
	3	6.6		E	0		E	5.6
	4	1.9	Q3807	B	1.4	Q3812	B	1.4
	6	0		C	0.4		C	4.9
	7	1.4		E	0		E	1.9
	8	0	Q3808	B	0.4	Q3813	B	2.5
IC3805	1	5.0		C	1.4		C	6.3
	2	5.0		E	0		E	1.9
	3	3.2	Q3809	B	1.4	Q3814	B	1.9
	4	4.9		C	1.9		C	0
	5	0		E	4.9		E	2.5
	6	4.9	Q3810	B	6.5			
	7	4.9		C	0			
	8	4.9		E	6.3			
	9	4.9						
	10	6.3						

VM BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
Q5400	B	1.5
	C	8.4
	E	0.9
Q5401	B	1.6
	C	5.0
	E	1.0
Q5402	B	7.0
	C	8.9
	E	6.3
Q5403	B	6.3
	C	8.9
	E	6.0
Q5404	B	5.0
	C	0
	E	5.6
Q5405	B	5.6
	C	0
	E	6.0
Q5406	B	134
	C	68
	E	135
Q5407	B	1.3
	C	68
	E	0.8

H1 BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
Q1901	B	0.2
	C	4.9
	E	0.2
Q1902	B	(4.4)[0.1]
	C	(1.9)[4.9]
	E	(1.7)[0.1]

H2 BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC1901	1	4.9
	2	(4.8)[4.5]
	3	0

P BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]
IC8801	1	1.4	Q8802	B	0.9
	2	(1.7)[1.4]		C	0
	3	0.2		E	1.6
	4	0.1	Q8803	B	0.7
	5	4.4		C	0
	6	4.4		E	1.4
	7	3.3	Q8804	B	4.7
	8	0		C	0
	9	0		E	4.9
	10	0.8	Q8805	B	1.9
	11	0		C	0
	12	0		E	2.6
	13	0	Q8806	B	0.3
	14	0		C	3.3
	15	0		E	0.3
	16	0.7	Q8807	B	0.1
	17	0.3		C	3.3
	18	0.7		E	0.1
	19	3.3	Q8808	B	2.5
	20	0		C	0
	21	3.3		E	(1.6)[3.2]
	22	3.3	Q8809	B	2.6
	23	0		C	0
	24	1.7		E	3.3
	25	1.2	Q8810	B	2.5
	26	1.7		C	0
	27	2.1		E	3.2
	28	2.0	Q8811	B	0.3
IC8802	I	4.9		C	0
	G	0		E	0.9
	O	3.3	Q8812	B	-0.5
Q8801	B	0.7		C	2.6
	C	0		E	0
	E	1.4			

D5 BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC6100	1	5.8
	2	2.7
	3	4.0
	4	0
	5	5.1
	6	6.3
	7	8.9
	8	5.0
	9	4.2
	10	2.7
	11	0
	12	0
	13	0
	14	1.9
	15	12.0
	16	9.2
	17	2.1
	18	2.1
	19	0
	20	4.7
	21	0
	22	1.0
IC6201	1	0.1
	2	8.9
	3	1.5
	4	0
	5	2.4
	6	3.9
	7	2.1
	8	8.9
IC6202	I	10.7
	G	0
	O	5.0
IC6204	1	(7.0)[6.6]
	2	1.4
	3	(2.4)[2.1]
	4	0
	5	0.2
	6	1.8
	7	1.0
	8	8.9
IC6205	1	5.0
	2	5.0
	3	(3.0)[1.6]
	4	(0)[3.0]
	5	2.4
	6	2.4
	7	3.8
	8	0
	9	2.8
	10	0
	11	5.0
	12	5.0
	13	0
	14	4.4
	15	4.4
	16	5.0
IC6206	I	-15
	G	0
	O	-12
IC6401	1	0
	2	(2.2)[1.7]
	3	(2.2)[1.8]
	4	0
	5	2.1
	6	2.8
	7	4.9
	8	8.9
IC6402	1	4.9
	2	2.7
	3	3.4
	4	1.3
	5	0
	6	3.1
	7	3.7
	8	3.7
	9	3.2
	10	3.1
	11	(2.4)[2.0]
	12	2.4
	13	(1.2)[0.8]
	14	1.2
	15	0
	16	3.5
	17	1.8
	18	3.7
	19	2.6
	20	5.4
	21	2.6
	22	1.0
	23	1.0
	24	5.4
	25	4.3
	26	3.9
	27	2.8
	28	3.9
	29	3.8
	30	8.9
IC6501	1	-0.5
	2	-0.5
	3	-1.8
	4	-1.5
	5	-15.8
	6	-1.7
	7	-2.0
	8	-2.7
	9	-2.8
	10	11.8
Q6103	B	8.7
	C	2.8
	E	8.9
Q6104	G	5.1
	D	25.8
	S	0
Q6105	B	1.1
	C	0
	E	1.8
Q6106	B	9.2
	C	10.8
	E	8.5
Q6107	B	8.5
	C	1.0
	E	9.1
Q6108	B	3.4
	C	8.9
	E	2.8
Q6201	B	0.5
	C	4.9
	E	0
Q6202	B	-0.3
	C	6.5
	E	0
Q6203	B	-0.6
	C	2.4
	E	0
Q6205	B	0
	C	3.8
	E	0
Q6206	B	8.9
	C	2.7
	E	8.9
Q6207	B	-0.4
	C	2.4
	E	0
Q6208	B	9.0
	C	(-0.5)[-0.1]
	E	8.6
Q6209	B	0
	C	0
	E	(-5.4)[-4.3]
Q6210	B	0
	C	0
	E	-5.4
Q6212	B	1.0
	C	0
	E	1.4
Q6213	B	1.0
	C	8.9
	E	1.4
Q6215	B	3.5
	C	8.9
	E	3.6
Q6216	B	3.5
	C	0
	E	3.6
Q6218	B	2.6
	C	8.9
	E	2.0
Q6401	B	4.4
	C	8.9
	E	3.8
Q6402	B	3.8
	C	0
	E	4.4
Q6409	B	3.9
	C	0
	E	4.0
Q6410	B	3.9
	C	8.9
	E	4.0
Q6412	B	3.8
	C	0
	E	3.9
Q6413	B	3.8
	C	8.9
	E	3.9
Q6414	B	3.9
	C	0
	E	(4.4)[3.9]
Q6415	B	0.7
	C	0
	E	0
Q6417	B	2.6
	C	8.9
	E	2.0
Q6418	B	0.2
	C	0
	E	0.8
Q6419	B	3.1
	C	8.9
	E	2.6
Q6420	B	7.1
	C	0
	E	7.7
Q6421	B	7.6
	C	8.9
	E	7.1
Q6422	B	1.8
	C	0
	E	2.5
Q6423	B	2.1
	C	0
	E	2.8

D5 BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
Q6424	B C E	1.2 6.6 0.7
Q6425	B C E	1.6 8.9 1.1
Q6437	B C E	2.6 8.9 1.9
Q6438	B C E	1.9 -15 2.5
Q6501	B C E	4.3 8.9 3.7
Q6502	B C E	2.4 0 3.0
Q6503	B C E	2.7 8.9 2.4
Q6504	B C E	0 8.3 0
Q6505	B C E	0 8.9 0
Q6506	B C E	0 3.3 0
Q6507	B C E	2.8 0 0
Q6508	B C E	5.3 4.7 8.9

Ref	Pin No.	Voltage[v]
	① PAL	216mVp-p
	① NTSC3.58	200mVp-p
	②	 2.32Vp-p
	③	880mVp-p
	④ PAL	456mVp-p
	④ NTSC3.58	820mVp-p
	⑤	9.0Vp-p
	⑥ PAL	1.56Vp-p
	⑥ NTSC3.58	1.6Vp-p
	⑦	 7.2Vp-p
	⑧ PAL	 660mVp-p
	⑧ NTSC3.58	820mVp-p
	⑨	 9.0Vp-p
	⑩ PAL	 4.24Vp-p
	⑩ NTSC3.58	 4.16Vp-p
	⑪ PAL	 59.2Vp-p
	⑪ NTSC3.58	 51.2Vp-p
	⑫ PAL	8.8Vp-p
	⑫ NTSC3.58	 9.0Vp-p
	⑬ PAL	 8.6Vp-p
	⑬ NTSC3.58	 8.8Vp-p

C BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC9001	1	3.5
	2	12
	3	3.4
	4	0
	5	8.9
	6	201
	7	107
	8	161
	9	107
IC9002	1	3.5
	2	12
	3	3.4
	4	0
	5	(8.7)[8.5]
	6	201
	7	(112)[116]
	8	159
	9	(111)[116]
IC9003	1	3.5
	2	12
	3	3.4
	4	0
	5	(9.4)[9.1]
	6	201
	7	(112)[119]
	8	(141)[146]
	9	(112)[118]
J9001	G2	320
	H1	6.2
	④ 560mVp-p	
	H2	0

Ref	Pin No.	Voltage[v]
	KB	(142)[149]
	③ PAL  122Vp-p	
	③ NTSC3.58  116Vp-p	
	KG	(159)[161]
	② PAL 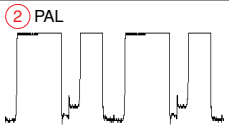 104Vp-p	
	② NTSC3.58  120Vp-p	
	KR	(161)[159]
	① PAL  106Vp-p	
	① NTSC3.58  92Vp-p	
Q9001	B	8.2
	C	0
	E	4.5
Q9009	B	4.0
	C	0
	E	4.6

Ref	Pin No.	Voltage[v]
Q9010	B	3.9
	C	0
	E	4.6
Q9011	B	3.9
	C	0
	E	4.5
	⑤ PAL 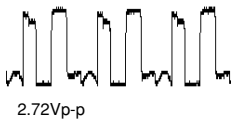 2.72Vp-p	
	⑤ NTSC3.58  3.20Vp-p	
	⑥ PAL  2.56Vp-p	
	⑥ NTSC3.58 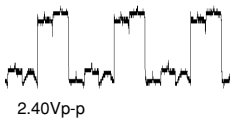 2.40Vp-p	
	⑦ PAL 3.92Vp-p	
	⑦ NTSC3.58 4.08Vp-p	

V2 BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC5801	1	0
	2	0
	3	0
	4	0
	5	0
	6	0
	7	0
	8	0
	9	0
	10	0
	11	0
	12	0
	13	0
	14	0
	15	0
	16	0
	17	0
	18	0
	19	0
	20	0
	21	0
	22	0

Ref	Pin No.	Voltage[v]
	23	2.2
	24	0
	25	2
	26	2.4
	27	0
	28	0
	29	0
	30	0
	31	2.5
	32	0
	33	0
	34	0
	35	0
	36	1.3
	37	0
	38	0
	39	3.3
	40	0
	41	2.4
	42	2.4
	43	0
	44	0

Ref	Pin No.	Voltage[v]
	45	0
	46	0
	47	0
	48	0
	49	0
	50	4.6
	51	0
	52	0
Q5801	B	0
	C	5
	E	0
Q5803	B	0.6
	C	0
	E	0
Q5805	B	0.5
	C	1.3
	E	0
Q5810	B	0.4
	C	3.6
	E	0

BC1 BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC2001	VCC	5.0
	OUT	2.5
	GND	0
IC2004	1	0
	2	0
	3	0
	4	0
	5	0
	6	0
	7	0
	8	0
	9	0
	10	0
	11	3.4
	12	3.4
	13	0
	14	0
	15	0
	16	0
	17	0
	18	0
	19	0
	20	1.1
	21	0
	22	0
	23	1.1
	24	1.0
	25	1.1
	26	1.1
	27	1.1
	28	1.1
	29	0
	30	0
	31	2.4
	32	2.4
	33	0
	34	0
	35	0
	36	0
	37	0
	38	3.3
	39	0
	40	0
	41	0
	42	0
	43	0
	44	0
	45	2.4
	46	2.5
	47	2.5
	48	1.2
	49	0
	50	1.3
	51	0
	52	1.3
	53	2.4
	54	01
	55	0
	56	0
	57	4.9
	58	0
	59	4.5
	60	4.5
	61	0
	62	0
	63	0
	64	2.4
	65	2.6
	66	0
	67	0
	68	2.6
	69	2.6
	70	2.6
	71	2.6
	72	2.6
	73	2.6
	74	2.6
	75	0
	76	4.1
	77	0
	78	0
	79	0
	80	0
	81	2.4
	82	0
	83	1.3
	84	1.1
	85	1.0
	86	0
	87	0
	88	0
	89	0.3
	90	0.7
	91	0
	92	2.4
	93	2.5
	94	0
	95	0
	96	1.1
	97	0
	98	0
	99	0
	100	2.5
IC2005	VCC	5.0
	OUT	3.3
	GND	0
IC2300	1	0
	2	3.1
	3	0.5
	4	0
	5	0
	6	1.8
	7	2.1
	8	0
	9	0
	10	0
	11	4.9
	12	0
	13	5.0
	14	0
	15	4.4
	16	4.4
	17	0
	18	0
	19	2.5
	20	5.0
	21	0
	22	3.6
	23	3.6
	24	3.4
	25	2.6
	26	0
	27	3
	28	1.1
Q2002	B	1.3
	C	0
	E	2.0
Q2003	B	1.3
	C	0
	E	2.0
Q2004	B	1.2
	C	0
	E	1.9
Q2005	B	2.5
	C	8.9
	E	1.9
Q2006	B	2.5
	C	8.9
	E	1.9
Q2007	B	2.8
	C	5.7
	E	2.2
Q2008	B	5.7
	C	(8.9)[5.9]
	E	(5.0)[2.1]
Q2009	B	5.7
	C	8.9
	E	5.0
Q2010	B	5.9
	C	8.9
	E	5.3
Q2011	B	0.1
	C	4.1
	E	0
Q2012	B	1.0
	C	0
	E	1.7
Q2013	B	4.8
	C	0.5
	E	0.5
Q2014	B	6.2
	C	8.9
	E	5.6
Q2015	B	3.5
	C	4.8
	E	(3.2)[3.6]
Q2016	B	1.7
	C	8.9
	E	1.1
Q2018	B	2.5
	C	0
	E	3.2
Q2019	B	(3.3)[3.6]
	C	8.9
	E	2.7
Q2300	B	0
	C	8.9
	E	0
Q2301	B	2.5
	C	0
	E	3.1
Q2302	B	3.0
	C	9.0
	E	2.4
Q2303	B	(2.6)[3.2]
	C	8.3
	E	(3.2)[2.6]
Q2304	B	8.3
	C	5.5
	E	9.0
Q2305	B	(2.6)[2.9]
	C	9.0
	E	0
Q2306	B	3.2
	C	8.3
	E	(0)[2.5]
Q2307	B	4.9
	C	9.0
	E	4.3
Q2308	B	8.3
	C	4.9
	E	9.0
Q2309	B	5.7
	C	8.9
	E	5.1

B3 BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC504	1	4.2
	2	0
	3	(0.8)[1.4]
	4	3.3
	5	1.6
	6	2.1
	7	0
	8	0
	9	0
	10	0
	11	0
	12	2.2
	13	2.2
	14	4.2
IC505	1	4.9
	2	3.2
	3	0
	4	0
	5	4.9
IC506	1	4.9
	2	3.0
	3	0
	4	0.4
	5	4.9
IC507	1	0
	2	3.6
	3	4.8
	4	1.0
	5	4.8
	6	1.4
	7	3.3
	8	0
	9	4.1
	10	0.7
	11	4.8
	12	3.3
	13	4.8
	14	4.2
	15	0
	16	4.8
IC601	1	2.4
	2	0
	3	0
	4	0
	5	0
	6	0
	7	3.1
	8	3.1
	9	3.1
	10	0.5
	11	3.1
	12	0
	13	0.9
	14	1.3
	15	1.4
	16	1.3
	17	1.4
	18	1.4
	19	1.4
	20	1.5
	21	2.4
	22	0
	23	3.2
	24	0
	25	0.8
	26	1.3
	27	1.5
	28	1.5
	29	1.4
	30	1.5
	31	1.4
	32	1.6
	33	3.2

Ref	Pin No.	Voltage[v]
	34	0
	35	0
	36	0
	37	0
	38	0
	39	0
	40	0
	41	0
	42	0
	43	2.4
	44	0
	45	1.6
	46	0
	47	0
	48	0
	49	0
	50	3.2
	51	0
	52	2.4
	53	0
	54	3.2
	55	0
	56	0
	57	3.2
	58	3.2
	59	3.1
	60	0
	61	0
	62	3.2
	63	3.2
	64	3.2
	65	0
	66	0
	67	3.2
	68	0
	69	0.4
	70	3.2
	71	0
	72	3.2
	73	0
	74	2.4
	75	0
	76	0
	77	0
	78	3.2
	79	3.2
	80	3.0
	81	0.4
	82	3.2
	83	0
	84	0
	85	3.2
	86	0.3
	87	3.2
	88	0
	89	0
	90	0
	91	1.5
	92	1.5
	93	0
	94	2.4
	95	1.5
	96	3.2

Ref	Pin No.	Voltage[v]
	97	1.4
	① PAL  4.96Vp-p	
	① NTSC3.58 4.48Vp-p	
	98	3.0
	99	3.2
	100	0
	101	0
	102	0
	103	2.4
	104	0
	105	0.3
	② PAL  860mVp-p	
	② NTSC3.58  620mVp-p	
	106	0.9
	107	0.9
	108	1.1
	109	0.5
	③ PAL 660mVp-p	
	③ NTSC3.58 680mVp-p	
	110	2.1
	111	3.2
	112	0
	113	0.5
	④ PAL 720mVp-p	
	④ NTSC3.58 640mVp-p	
	114	3.2
	115	0
	116	2.4
	117	1.6
	118	0

B3 BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]
	119	1.6		192	0		7	0
	120	1.3		193	0		8	0
	121	1.3		194	0		9	0
	122	1.3		195	0		10	0
	123	1.3		196	0		11	0
	124	1.2		197	2.4		12	1.4
	125	1.3		198	0		13	2.1
	126	1.7		199	0		14	3.3
	127	1.3		200	0	IC604	1	4.9
	128	1.2		201	0		2	(0)[3.1]
	129	0.3		202	0		3	0.4
	130	0		203	0		4	0.4
	131	1.3		204	0		5	3.0
	132	1.1		205	0		6	0.4
	133	1.4		206	0		7	0.4
	134	1.5		207	3.2		8	0
	135	1.8		208	0		9	(3.2)[0]
	136	1.5	IC602	1	3.3		10	(3.2)[0]
	137	1.5		2	1.5		11	0
	138	1.6		3	1.5		12	4.9
	139	1.2		4	0		13	0
	140	1.7		5	1.1		14	4.5
	141	2.4		6	1.5		15	4.4
	142	0		7	3.3		16	4.9
	143	3.2		8	1.6	IC605	1	2.3
	144	0		9	1.5		2	1.8
	145	1.3		10	0		3	1.8
	146	1.1		11	1.1		4	*
	147	1.3		12	(0.6)[1.0]		5	0
	148	1.3		13	3.3	IC801	1	4.8
	149	1.3		14	0.5		2	*
	150	1.2		15	3.2		3	*
	151	1.1		16	3.2		4	*
	152	1.3		17	3.2		5	*
	153	1.2		18	3.2		6	4.8
	154	1.9		19	0		7	*
	155	0		20	0		8	*
	156	0		21	0		9	*
	157	3.2		22	0		10	*
	158	(1.5)[1.9]		23	0		11	*
	159	(0.6)[2.2]		24	0		12	*
	160	1.3		25	3.3		13	*
	161	1.4		26	0		14	*
	162	0		27	0		15	*
	163	0		28	0		16	*
	164	1.3		29	0		17	*
	165	1.2		30	0		18	*
	166	1.4		31	0		19	*
	167	1.3		32	0		20	4.8
	168	1.2		33	0		21	*
	169	1.3		34	3.3		22	*
	170	1.1		35	0		23	*
	171	1.9		36	0		24	*
	172	2.4		37	0		25	*
	173	0		38	3.3		26	*
	174	1.6		39	1.5		27	*
	175	1.4		40	1.5		28	*
	176	(1.4)[0.8]		41	0		29	*
	177	1.5		42	1.7		30	*
	178	1.7		43	1.6		31	*
	179	(1.5)[1.1]		44	3.2		32	*
	180	1.3		45	1.8		33	*
	181	0.3		46	1.6		34	*
	182	2.4		47	0		35	*
	183	0		48	1.5		36	*
	184	3.2		49	1.1		37	*
	185	3.2		50	0		38	*
	186	0.7	IC603	1	3.3		39	*
	187	3.2		2	0		40	*
	188	0		3	1.4	IC802	1	*
	189	0		4	0.2		2	*
	190	0		5	1.3		3	*
	191	0		6	1.4		4	*

B3 BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
	5	*
	6	*
	7	*
	8	1.2
	9	1.0
	10	3.4
	11	*
	12	*
	13	*
	14	*
	15	*
	16	0
	17	0
	18	0
	19	0
	20	0
	21	0
	22	2.4
	23	3.4
	24	2.7
	25	2.1
	26	3.4
	27	2.7
	28	1.4
	29	0
	30	2.1
	31	0
	32	2.4
	33	1.0
	34	1.3
	35	1.7
	36	0.9
	37	3.4
	38	2.4
	39	1.0
	40	1.7
	41	1.7
	42	(1.4)[1.7]
	43	0
	44	3.4
	45	*
	46	0
	47	0
	48	3.4
	49	0.3
	50	0
	51	*
	52	3.0
	53	3.4
	54	1.6
	55	*
	56	1.6
	57	*
	58	0
	59	*
	60	*
	61	*
	62	*
	63	*
	64	*
	65	*
	66	*
	67	*
	68	*
	69	*
	70	*
	71	*
	72	*
	73	*
	74	*
	75	*
	76	1.7
	77	1.7
	78	0.2
	79	0
	80	0
	81	*
	82	*
	83	*
	84	*
	85	*
	86	*
	87	*
	88	*
	89	*
	90	0
	91	*
	92	*
	93	*
	94	*
	95	*
	96	*
	97	*
	98	*
	99	*
	100	*
IC803	1	4.8
	2	2.7
	3	3.5
	4	1.2
	5	0
IC804	1	*
	2	0
	3	0
	4	2.7
	5	4.8
Q501	B	2.3
	C	0
	E	3.0
Q502	B	2.7
	C	4.9
	⑤ PAL 160mVp-p	
	E	2.0
Q503	B	2.7
	C	4.9
	E	2.0
	⑥  940mVp-p	
Q504	B	0
	C	3
	E	0
Q505	B	0.3
	C	0
	E	1.0
Q516	B	4.0
	C	4.9
	E	3.3
Q517	B	4.9
	C	4.9
	E	4.2
Q518	B	3.2
	C	0
	E	2.2
Q521	B	3.2
	C	4.9
	E	2.6
Q522	B	3.6
	C	4.9
	E	3.0
Q523	B	3.7
	C	4.9
	E	3.0
Q601	B	0.1
	C	4.9
	E	0
Q602	B	0.3
	C	4.9
	E	0.2
Q603	G	3.2
	D	*
	S	*
Q604	G	3.2
	D	*
	S	*
Q901	B	0.9
	C	0
	E	1.6
Q902	B	1.1
	C	0
	E	1.8
Q903	B	1.1
	C	0
	E	1.8
Q907	B	0.5
	C	0
	E	1.2
Q908	B	0.3
	C	0
	E	1.0
Q909	B	0.5
	C	0
	E	1.2

D BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]
IC6600	1	2.9
	2	1.8
	3	2.3
	4	2.5
	5	0
	6	0
	7	4.7
	8	17.8
	9	0
	10	10.6
	11	0
	12	4.9
	13	0
	14	138
	15	1.7
	16	129
	17	323
	18	321
IC6601	1	9.8
	2	0
	3	2.4
IC6607	1	134.1
	2	2.5
	3	8.1
	4	0
IC6608	1	0
	2	0
	3	18.2
	4	6.3
	5	4.1
	6	6.4
	7	4.0
	8	2.8
	9	5.0
	10	17.7
	11	5.0
	12	0
	13	0.1
	14	17.8
IC6800	1	1.2
	①  1.18Vp-p	
	2	14
	3	-14
	②  32Vp-p	
	4	-15
	5	(0.2)[0]
	6	14.6
	7	1.2
	③ PAL 980mVp-p	
	③ NTSC3.58 1.14Vp-p	

Ref	Pin No.	Voltage[v]
IC6804	I	10.3
	G	0
	O	9.0
IC6805	I	13.3
	G	0
	O	12
IC6806	I	8.3
	G	0
	O	6.3
	VC	2.2
PH6601	1	78
	2	77.4
	3	4.0
	4	3.7
PH6602	1	81.5
	2	80.7
	3	17.8
	4	16.0
Q6100	G	0.9
	D	*
	S	0
Q6102	B	*
	C	*
	E	*
Q6600	G	(107.8)[112]
	D	269
	S	105.6
Q6601	B	0
	C	12
	E	0
Q6602	B	3.8
	C	13.8
	E	4.2
Q6603	G	-13.4
	D	0
	S	-18.3
Q6604	B	13.1
	C	13.8
	E	13.8
Q6605	B	3.3
	C	4.0
	E	4.0
Q6608	B	0.6
	C	0
	E	0
Q6609	B	4.9
	C	0
	E	4.9
Q6611	B	0.2
	C	3.5
	E	0
Q6613	B	0
	C	0.6
	E	0
Q6619	B	0.6
	C	0
	E	0
Q6620	B	0
	C	3.6
	E	0
Q6800	B	6.7
	C	0
	E	0
Q6801	G	0
	D	11.9
	S	0
Q6802	G	135
	D	(206)[*]
	S	135

Ref	Pin No.	Voltage[v]
Q6803	B	1.2
	C	0
	E	1.5
Q6804	B	1.2
	C	9.0
	E	1.5
Q6805	B	-0.5
	C	79
	E	0
Q6806	B	-0.5
	C	66
	E	0
Q6807	B	0
	C	*
	E	0
Q6808	B	*
	C	*
	E	0
Q6809	G	3.4
	D	(12.3)[10.3]
	S	0
Q6810	G	1.4
	D	(*)[138]
	S	0
Q6811	B	0.3
	C	5.0
	E	0.6
Q6812	B	-0.4
	C	*
	E	0
Q6819	B	0
	C	0.8
	E	0
Q6820	B	-0.1
	C	0
	E	0
Q6821	B	-0.4
	C	9.0
	E	0.3

D BOARD VOLTAGE LIST AND WAVEFORM

Ref	Pin No.	Voltage[v]	Ref	Pin No.	Voltage[v]
	④ PAL  56.0Vp-p			⑨ 9.0Vp-p	
	④ NTSC3.58  58.4Vp-p			⑩ PAL  7.8Vp-p	
	⑤ PAL  2.16Vp-p			⑩ NTSC3.58  7.4Vp-p	
	⑤ NTSC3.58  1.76Vp-p			⑪ PAL  9.2Vp-p	
	⑥ PAL 190Vp-p			⑪ NTSC3.58  9.0Vp-p	
	⑥ NTSC3.58 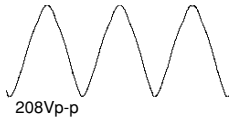 208Vp-p			⑫  8.6Vp-p	
	⑦ PAL  334Vp-p			⑬ PAL  9.0Vp-p	
	⑦ NTSC3.58  322Vp-p			⑬ NTSC3.58  8.6Vp-p	
	⑧ PAL 2.8Vp-p				
	⑧ NTSC3.58  2.48Vp-p				

KV-DR34M69/DR34M89
RM-991

7-4. PRINTED WIRING BOARDS AND PARTS LOCATION

PRINTED WIRING BOARDS

A [MICON, AUDIO AMP., TUVIF 1 & 2, REGULATORS, RGB JUNGLE, YCT, AV SW, VIDEO/AUDIO SIGNAL]

– A board (Component Side) –

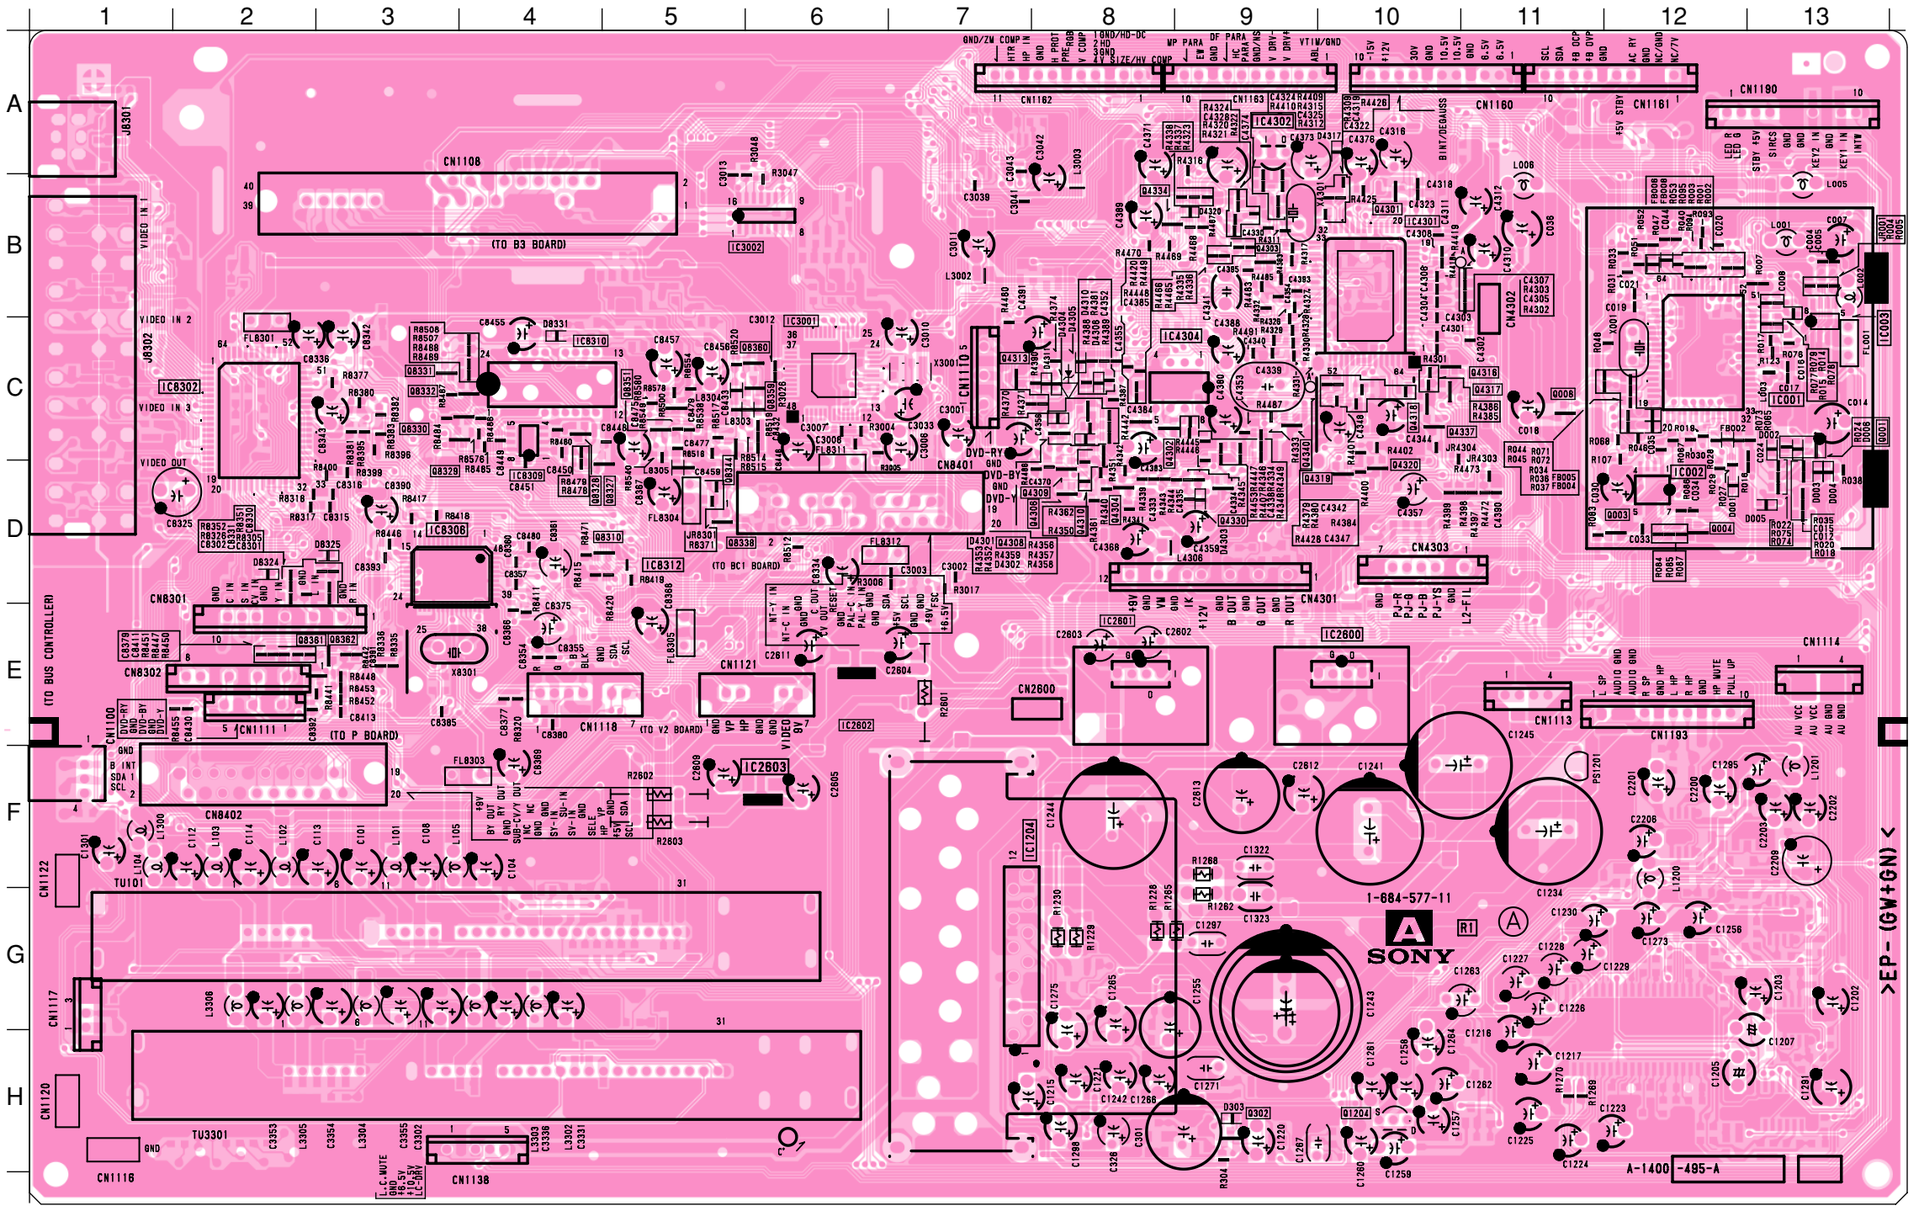

- : Pattern from the side which enables seeing.
- : Pattern from the rear side.

A BOARD (Component Side)

IC		Q8336	B-10
		Q8337	C-8
IC100	F-10	Q8339	D-8
IC1200	G-1	Q8352	D-9
IC1203	H-5	Q8356	C-9
IC1204	F-7	Q8357	C-9
IC1205	H-1	Q8358	C-9
IC1207	H-3	Q8364	C-10
IC2200	F-3	Q8383	E-11
IC2600	E-4	Q8385	E-10
IC2601	E-6	**DIODE**	
IC3003	B-7		
IC4302	A-5	D007	A-1
IC8310	C-11	D008	A-1
TRANSISTOR		D012	A-1
		D013	A-1
Q002	C-1	D300	H-7
Q101	F-10	D301	H-7
Q301	H-5	D302	F-2
Q313	H-5	D317	H-7
Q1200	H-5	D1200	H-6
Q1201	H-6	D1201	H-6
Q1202	H-7	D1203	F-3
Q1203	H-6	D1210	G-7
Q1204	H-4	D1211	F-7
Q1205	H-4	D1212	G-6
Q1207	H-6	D1213	G-7
Q1208	G-6	D1214	G-6
Q1210	G-6	D1215	F-5
Q2200	F-1	D1216	F-2
Q2201	F-1	D1217	H-3
Q3001	C-7	D1218	H-3
Q3002	D-7	D1219	F-2
Q3003	D-8	D2201	F-2
Q3014	C-8	D4305	C-6
Q3015	B-8	D4307	C-6
Q3018	B-8	D4312	E-5
Q3023	B-8	D4313	E-5
Q4305	C-5	D4314	D-5
Q4325	E-4	D4315	D-4
Q4326	D-4	D4316	C-3
Q4327	D-3	D4318	B-4
Q4328	E-4	D4321	B-7
Q4329	D-4	D4322	B-5
Q4331	E-4	D4323	C-5
Q4332	E-3	D4324	C-5
Q4333	B-5	D4325	D-6
Q4335	C-3	D8301	A-13
Q4336	C-4	D8302	A-13
Q4338	B-6	D8303	B-12
Q4339	B-7	D8304	B-12
Q4341	C-5	D8305	B-12
Q8300	G-9	D8306	B-12
Q8302	C-11	D8307	C-12
Q8303	C-11	D8308	B-12
Q8304	C-11	D8309	C-12
Q8305	D-9	D8310	C-12
Q8306	C-11	D8311	C-12
Q8307	D-8	D8312	D-13
Q8319	E-11	D8313	D-13
Q8320	D-11	D8314	D-13
Q8321	D-11	D8315	B-12
Q8328	D-10	D8320	D-12
Q8333	B-9	D8321	A-13
Q8334	B-10	D8322	D-12
Q8335	C-9	D8323	D-12

KV-DR34M69/DR34M89
RM-991

PRINTED WIRING BOARDS

A [MICON, AUDIO AMP., TUVIF 1 & 2, REGULATORS, RGB JUNGLE, YCT, AV SW, VIDEO/AUDIO SIGNAL]

– A board (Conductor Side) –

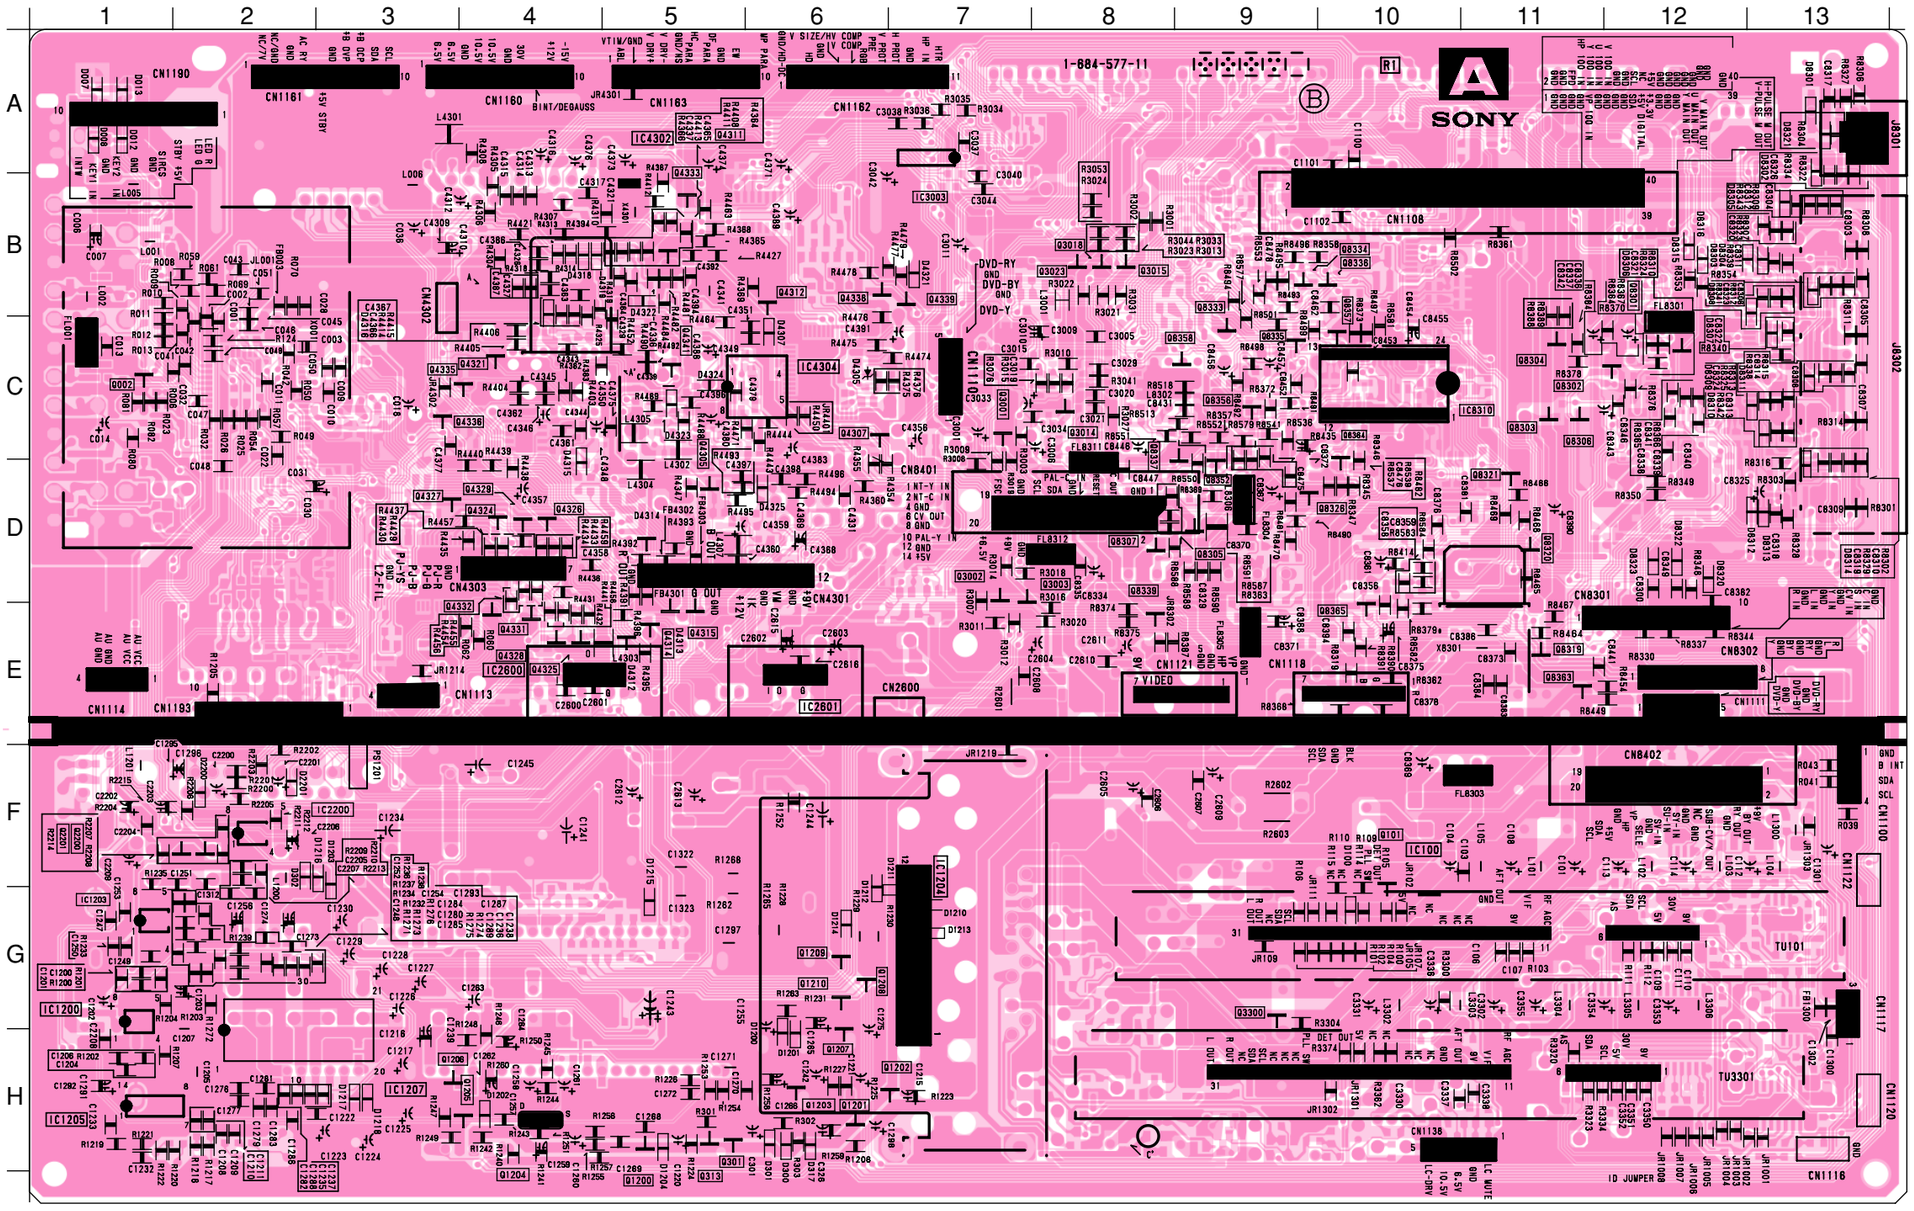

- : Pattern from the side which enables seeing.
- : Pattern from the rear side.

A BOARD (Conductor Side)

IC			
IC001	C-13	Q4330	D-9
IC002	D-12	Q4334	B-8
IC003	C-13	Q4337	C-10
IC1204	F-7	Q4340	C-9
IC2600	E-10	Q8310	D-4
IC2601	E-8	Q8327	D-5
IC2603	F-6	Q8328	D-4
IC2802	E-6	Q8329	D-3
IC3001	C-6	Q8330	C-3
IC3002	B-5	Q8331	C-3
IC4301	B-10	Q8332	C-3
IC4302	A-9	Q8338	D-5
IC4304	C-8	Q8344	D-5
IC8302	C-1	Q8351	C-5
IC8306	D-3	Q8359	C-6
IC8309	D-4	Q8360	C-6
IC8310	C-4	Q8361	E-2
IC8312	D-5	Q8362	E-3
TRANSISTOR		**DIODE**	
Q001	C-13	D001	D-12
Q003	D-12	D002	C-13
Q004	D-12	D003	D-13
Q008	C-11	D004	D-13
Q302	H-9	D005	D-13
Q1204	H-10	D006	C-13
Q4301	B-10	D303	H-9
Q4302	C-8	D4301	D-7
Q4303	B-9	D4302	D-7
Q4304	D-8	D4303	D-9
Q4308	D-7	D4304	C-8
Q4309	D-7	D4305	C-8
Q4310	D-8	D4308	C-8
Q4313	C-7	D4310	B-8
Q4316	C-11	D4311	C-8
Q4317	C-11	D4317	A-10
Q4318	C-10	D4320	B-9
Q4320	D-10	D8324	D-2
		D8325	D-3
		D8331	C-4

KV-DR34M69/DR34M89
RM-991

PRINTED WIRING BOARDS

D [POWER SUPPLY, DEFLECTION HV]

NOTE:
The circuit indicated at left contains high voltage of over 1220 Vp-p. Please pay attention when inspecting or repairing it to prevent an electric shock.

– D board –

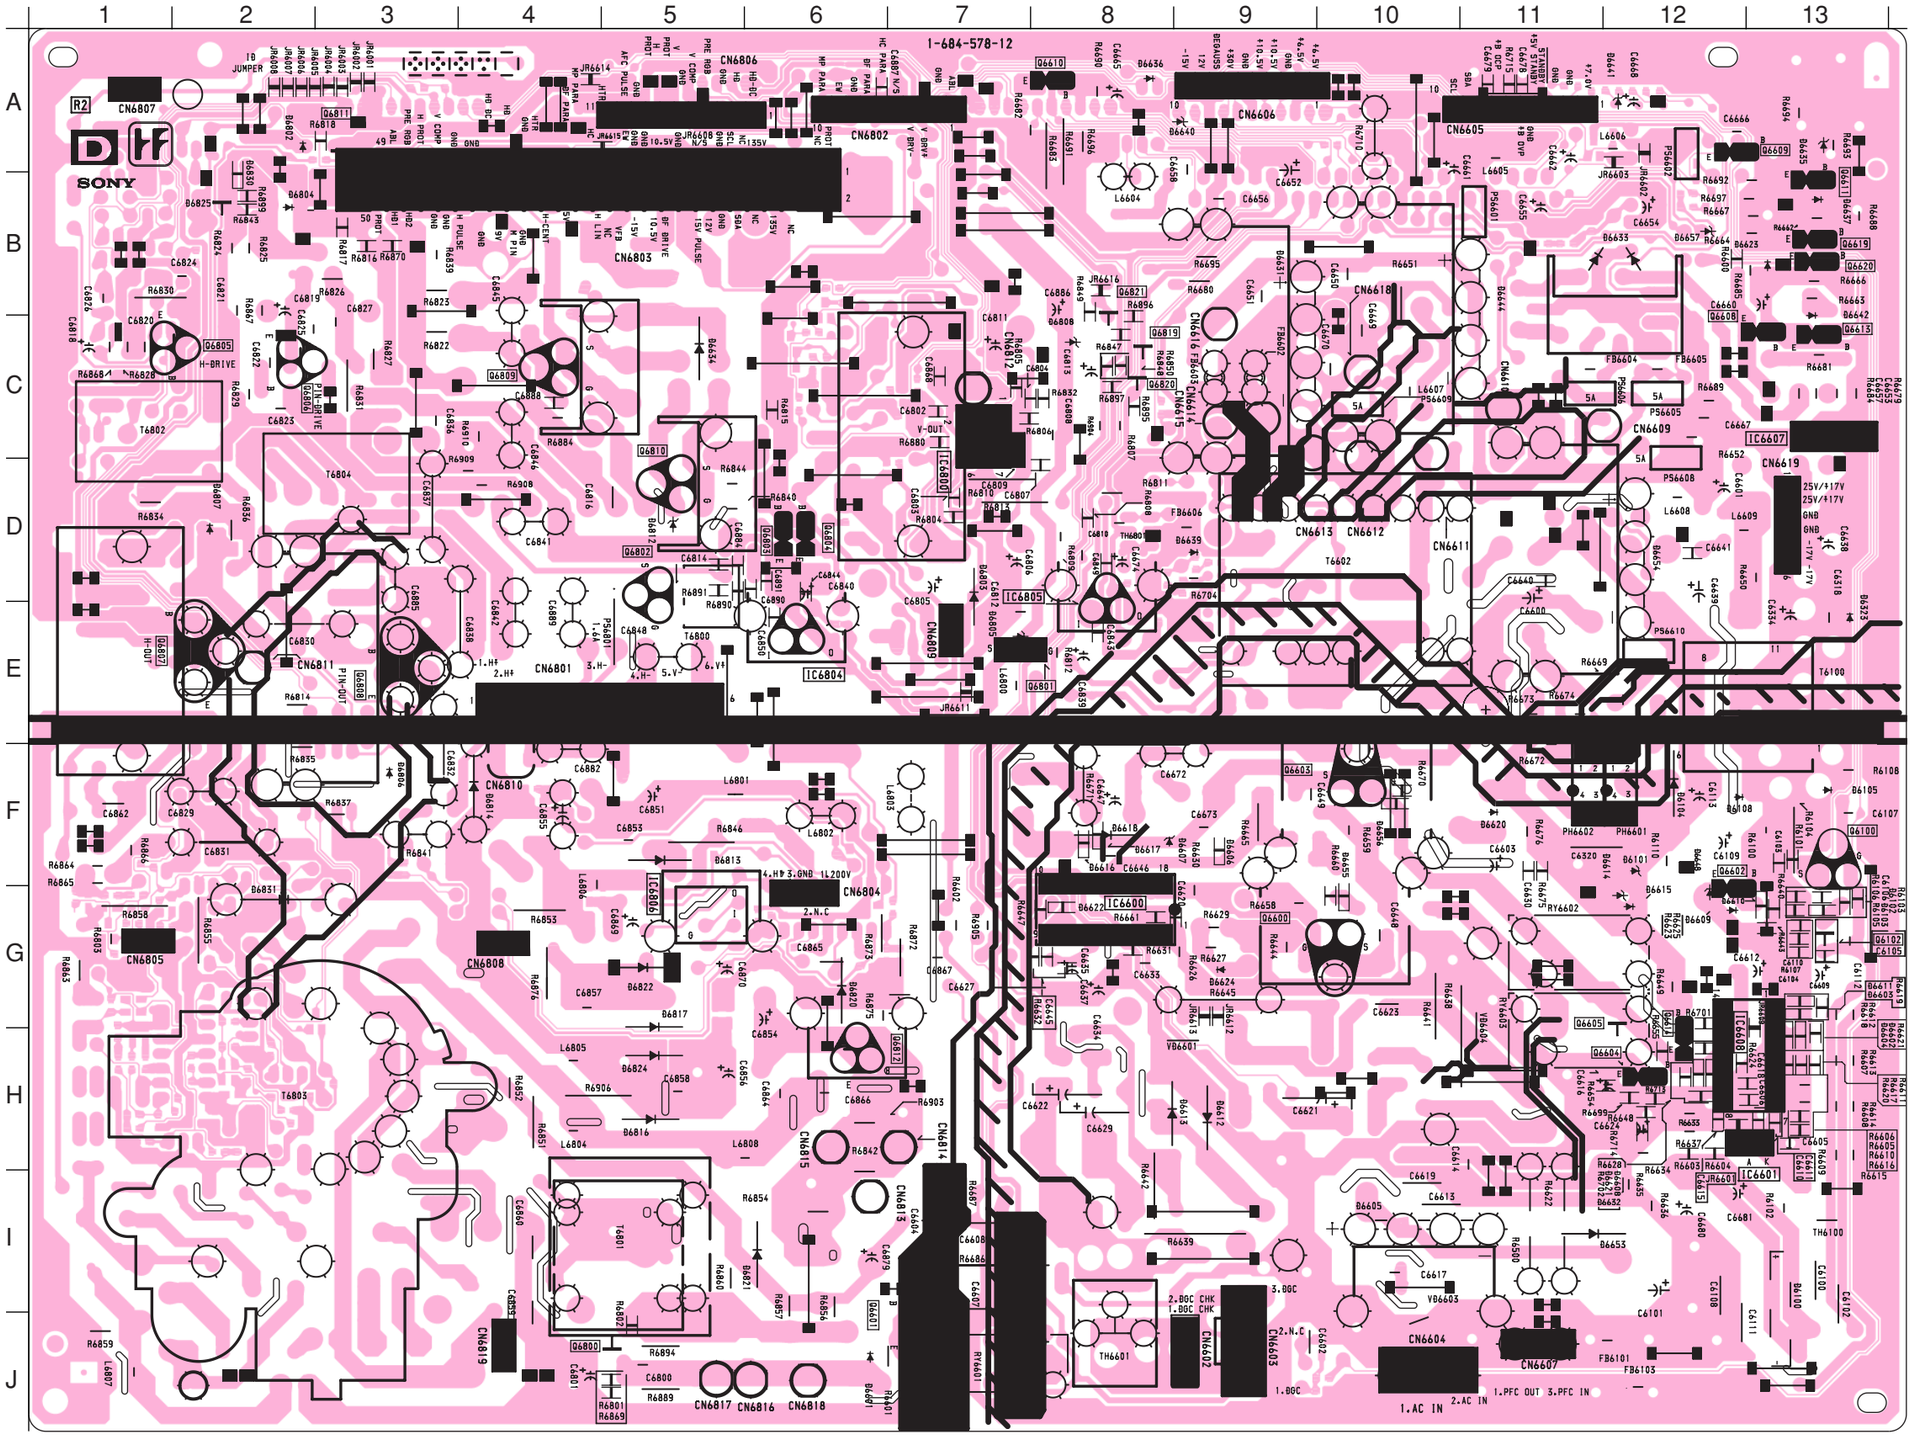

D BOARD

IC		TRANSISTOR		DIODE	
IC6600	G-8	Q6100	F-13	D6100	I-13
IC6601	I-13	Q6102	G-13	D6101	F-12
IC6607	C-13	Q6600	G-9	D6102	G-13
IC6608	H-12	Q6601	H-6	D6103	G-12
IC6800	D-7	Q6602	F-12	D6104	F-12
IC6804	E-6	Q6603	F-9	D6105	F-13
IC6805	D-7	Q6604	H-12	D6108	F-12
IC6806	G-5	Q6605	G-11	D6323	E-13
		Q6608	C-12	D6601	J-6
		Q6609	A-13	D6602	H-13
		Q6610	A-8	D6603	G-12
		Q6611	B-13	D6604	H-12
		Q6613	C-13	D6605	I-10
		Q6614	G-12	D6606	F-9
		Q6619	B-13	D6607	F-9
		Q6620	B-13	D6608	I-12
		Q6800	J-4	D6609	G-12
		Q6801	E-8	D6610	G-12
		Q6802	D-5	D6611	G-12
		Q6803	D-6	D6612	H-9
		Q6804	D-6	D6613	H-9
		Q6805	C-2	D6614	F-12
		Q6806	C-2	D6615	G-12
		Q6807	E-1	D6616	F-8
		Q6808	E-3	D6617	F-8
		Q6809	C-4	D6618	F-8
		Q6810	C-5	D6620	F-11
		Q6811	A-3	D6621	I-12
		Q6812	H-7	D6622	G-8
		Q6819	C-8	D6623	B-12
		Q6820	C-8	D6624	G-9
		Q6821	B-8	D6631	B-9
				D6632	I-12
				D6633	B-12
				D6634	C-5
				D6635	A-13
				D6636	A-8
				D6637	B-13
				D6639	D-9
				D6640	A-9
				D6641	A-12
				D6642	B-13
				D6644	B-11
				D6648	F-12
				D6653	I-12
				D6654	D-12
				D6655	F-10
				D6656	F-10
				D6657	B-12
				D6802	A-2
				D6803	D-7
				D6804	B-2
				D6805	E-7
				D6806	F-3
				D6807	D-2
				D6808	C-8
				D6812	D-5
				D6813	F-5
				D6814	F-4
				D6816	H-5
				D6817	G-5
				D6821	I-6
				D6822	G-5
				D6824	H-5
				D6825	B-2
				D6826	G-6
				D6830	A-2
				D6831	G-2
				D6867	G-7

PRINTED WIRING BOARDS

B3 [DIGITAL REALITY CREATION-MF, 3D NOISE REDUCTION]

– B3 board (Component Side) –

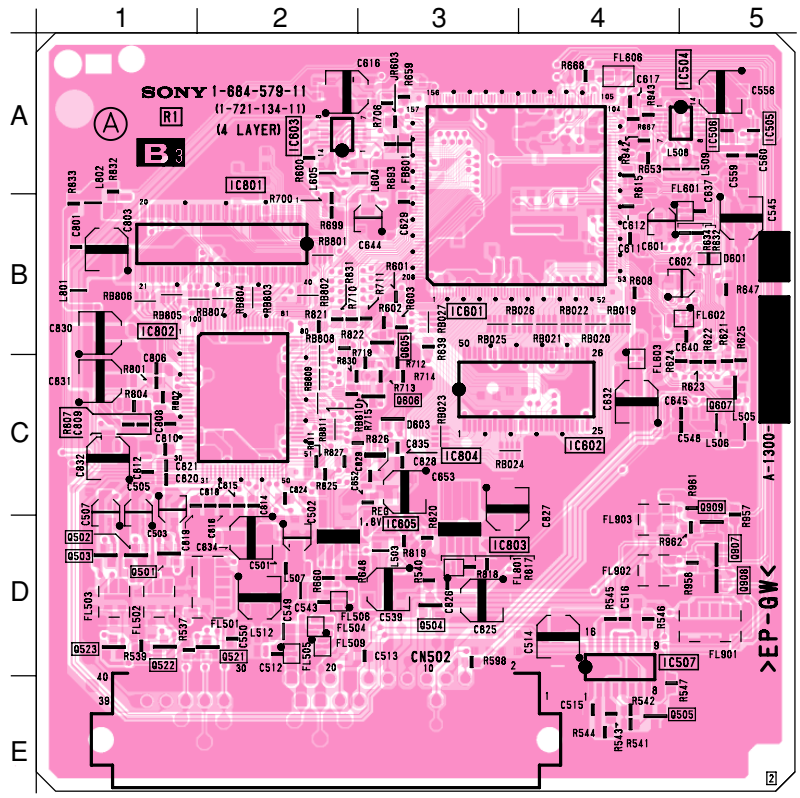

B3 board (Component Side)

IC			
IC504	A-5	Q502	D-1
IC505	A-5	Q503	D-1
IC507	D-5	Q504	D-3
IC508	A-5	Q505	E-5
IC601	B-3	Q521	D-2
IC602	C-4	Q522	D-1
IC603	A-2	Q523	D-1
IC605	D-3	Q605	B-3
IC801	A-2	Q606	C-3
IC802	B-1	Q607	C-5
IC803	D-3	Q907	D-5
IC804	C-3	Q908	D-5
		Q909	D-5
TRANSISTOR		**DIODE**	
Q501	D-1	D601	B-5
		D603	C-3

– B3 board (Conductor Side) –

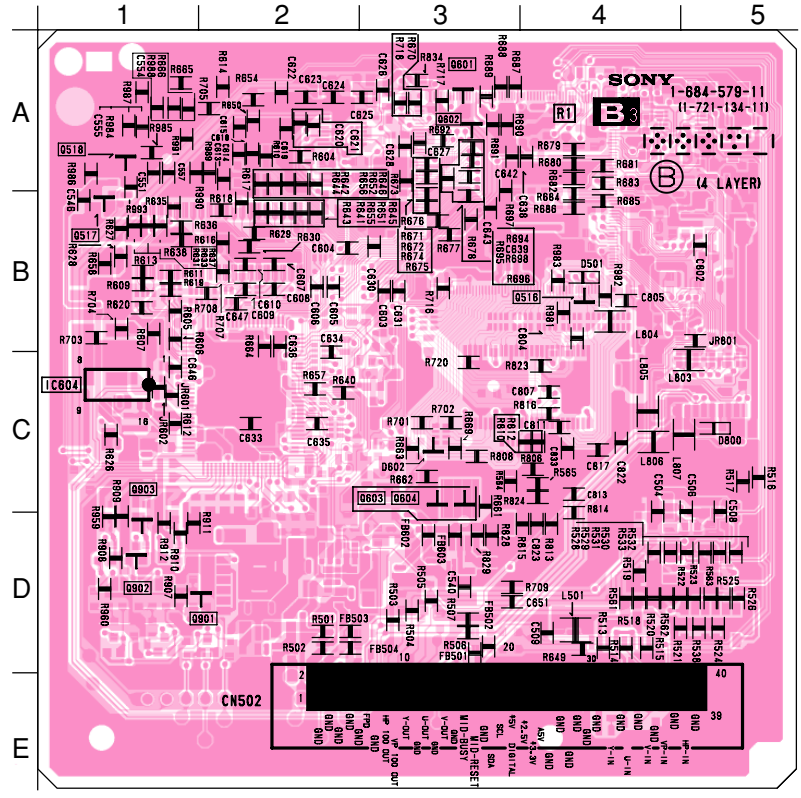

B3 board (Conductor Side)

IC			
IC604	C-1		
TRANSISTOR			
Q516	B-4		
Q517	B-1		
Q518	A-1		
Q601	A-3		
Q602	A-3		
Q603	C-3		
Q604	C-3		
Q901	D-2		
Q902	D-1		
Q903	C-1		
DIODE			
D501	B-4		
D602	C-3		
D800	C-5		

- : Pattern from the side which enables seeing.
- : Pattern from the rear side.

BC1 [2D & 3D DIGITAL COMB]

– BC1 board (Component Side) –

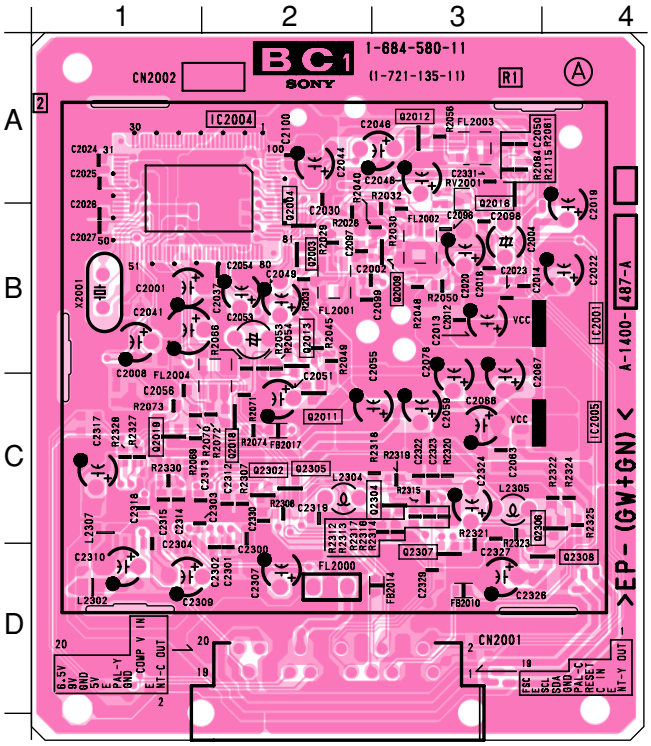

BC1 board (Component Side)

IC	
IC2001	B-4
IC2004	A-2
IC2005	C-4
TRANSISTOR	
Q2003	B-2
Q2004	B-2
Q2009	B-3
Q2011	C-2
Q2012	A-3
Q2013	B-2
Q2016	B-3
Q2018	C-2
Q2019	C-1
Q2302	C-2
Q2304	C-3
Q2305	C-2
Q2306	C-3
Q2307	D-3
Q2308	D-4

– BC1 board (Conductor Side) –

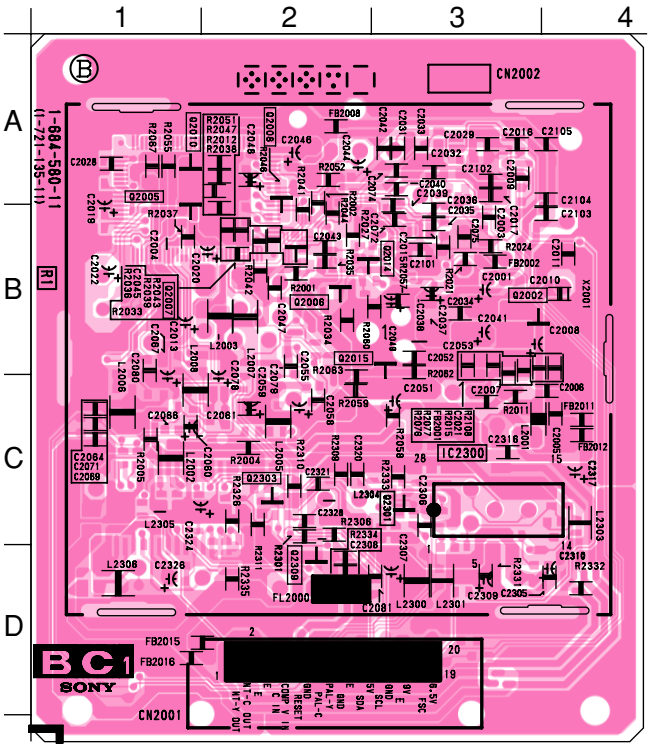

BC1 board (Conductor Side)

IC	
IC2300	C-3
TRANSISTOR	
Q2002	B-3
Q2005	A-1
Q2006	B-2
Q2007	B-1
Q2008	A-2
Q2010	A-1
Q2014	B-3
Q2015	B-2
Q2301	C-3
Q2303	C-2
Q2308	D-2

- : Pattern from the side which enables seeing.
- : Pattern from the rear side.

KV-DR34M69/DR34M89
RM-991

PRINTED WIRING BOARDS

C [VIDEO AMPLIFIER]

D5 [DEFLECTION CONTROL CIRCUIT]

H1 [S-TERMINAL INPUT, AV INPUT, PRESET KEY, PHONE OUT]

DH [MAGNETIC FIELD CORRECTION]

– C board –

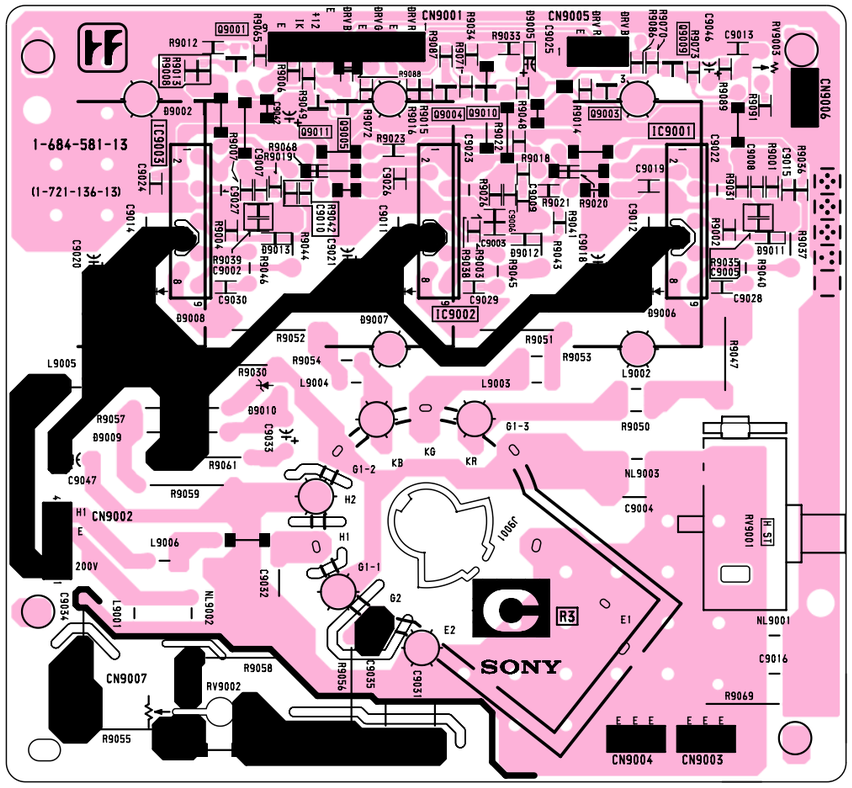

– D5 board –

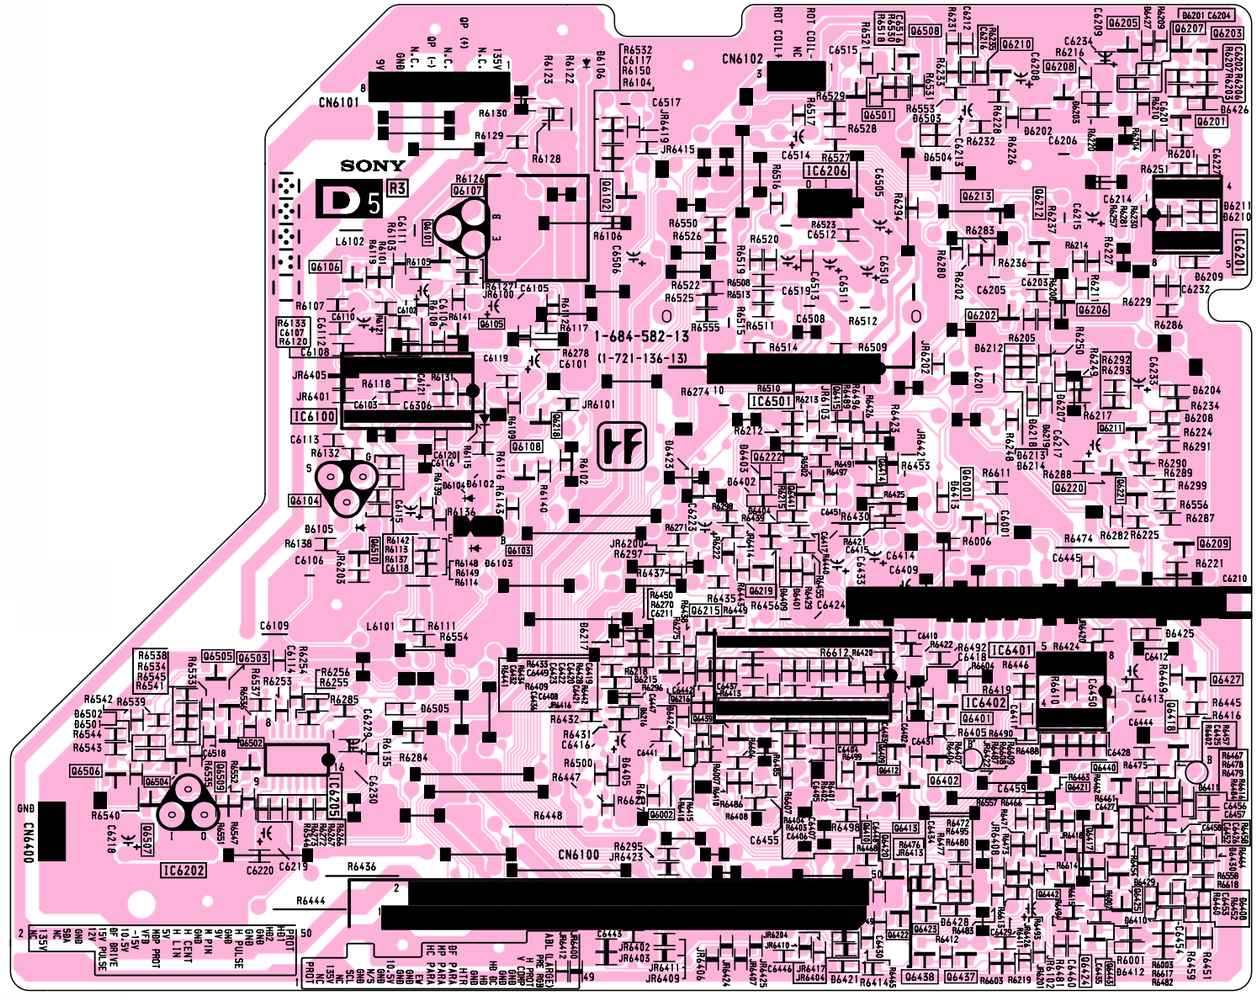

– H1 board –

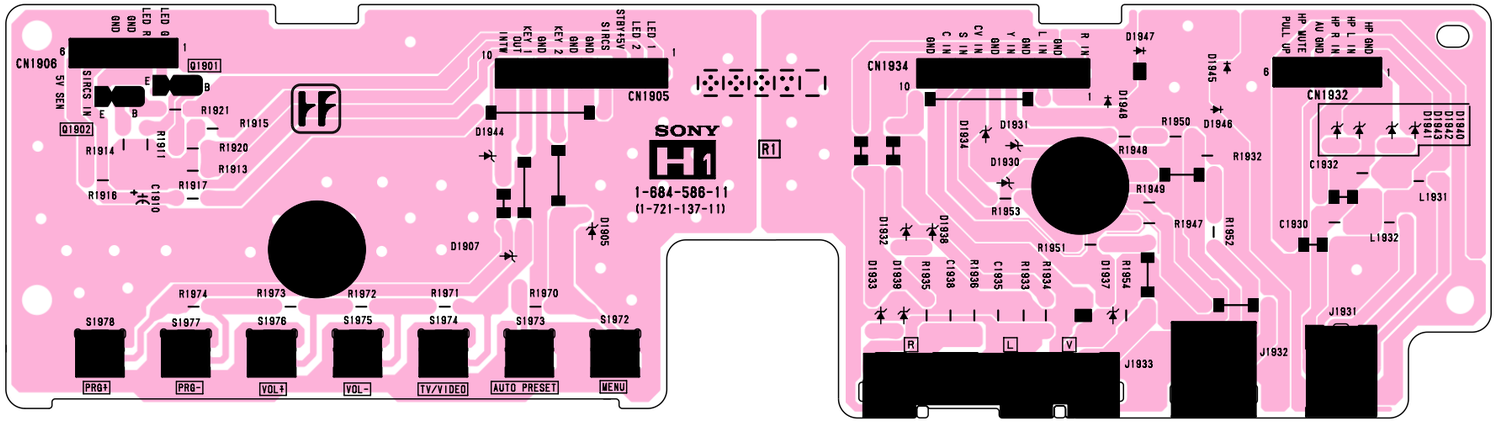

– DH board – (KV-DR34M69(GE/Thailand) only)

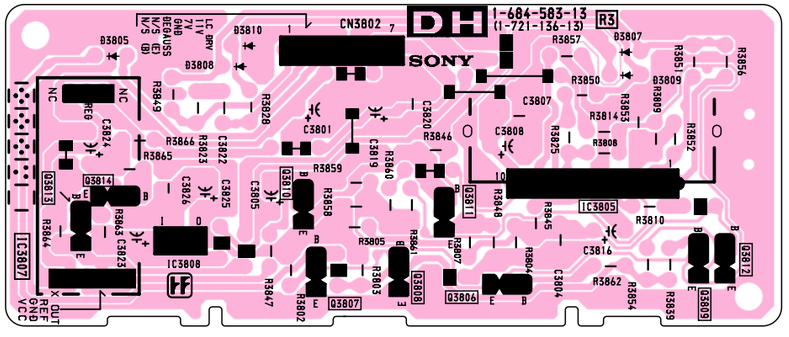

PRINTED WIRING BOARDS

J [COMPONENT IN] **VM** [VELOCITY MODULATION] **V2** [TELETEXT]

– J board –

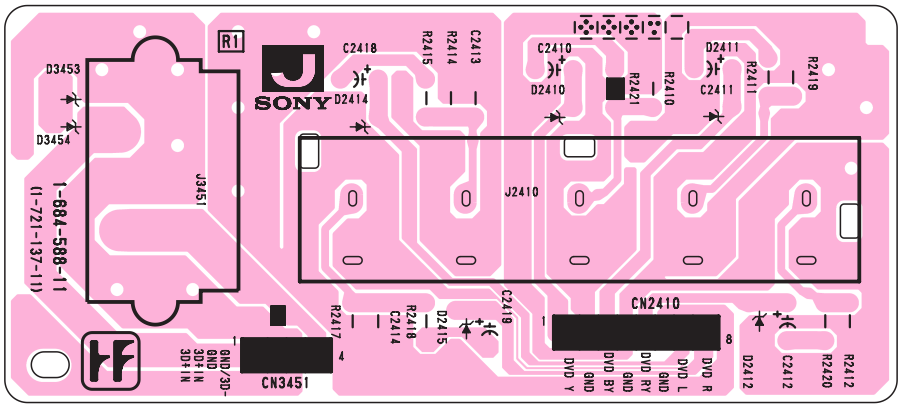

– VM board –

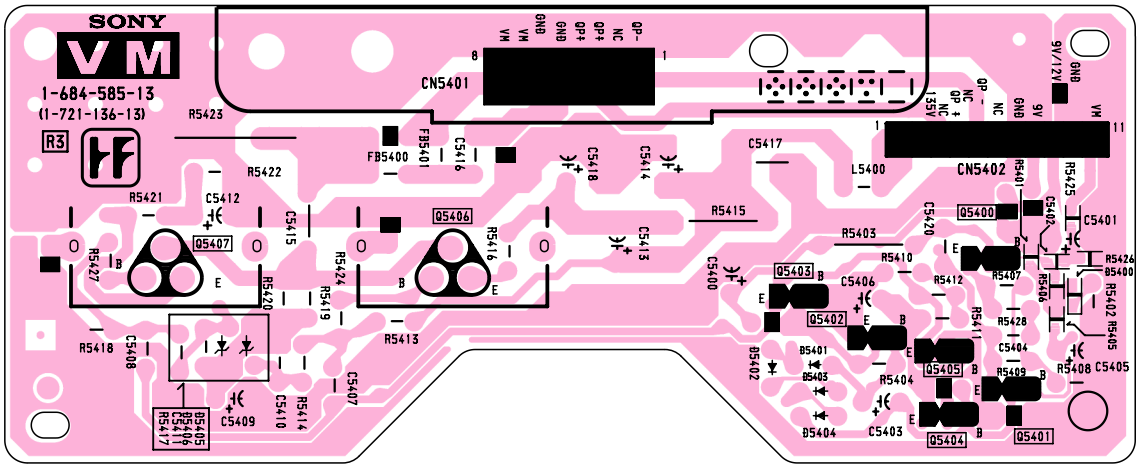

– V2 board –

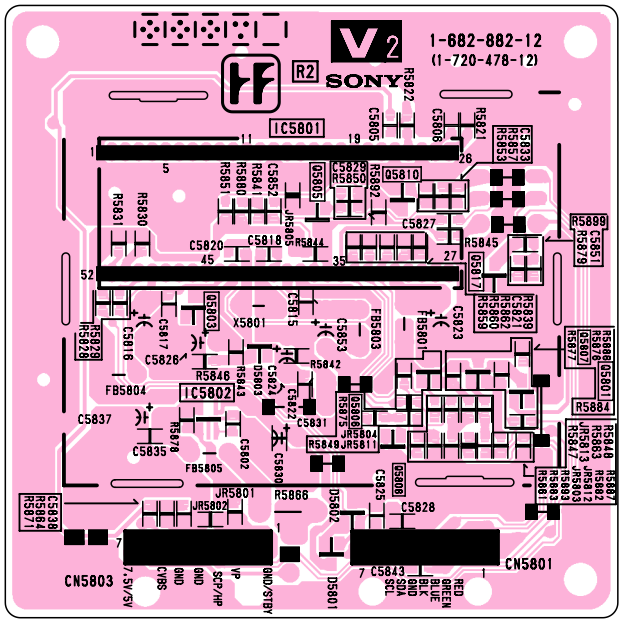

H2 [POWER SW, LED, SIRCS RECEIVER]

P [PICTURE IN PICTURE FEATURE]

F1 [AC LINE FILTER]

– H2 board –

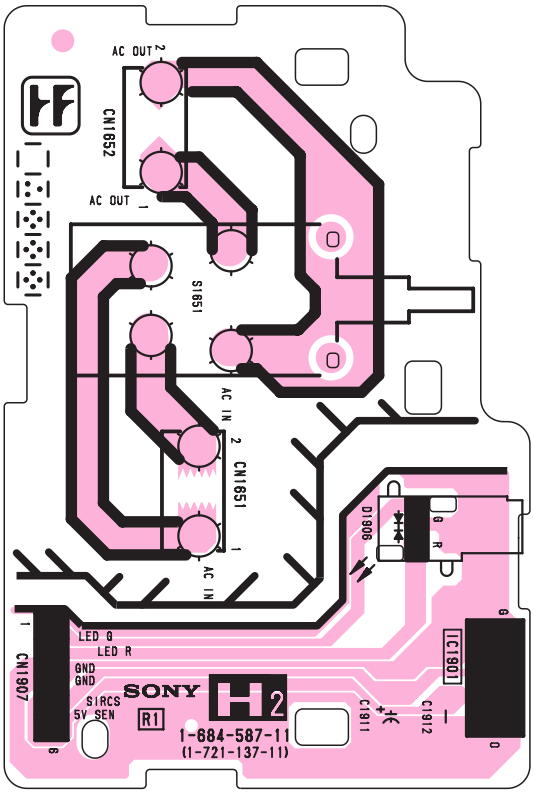

– P board –

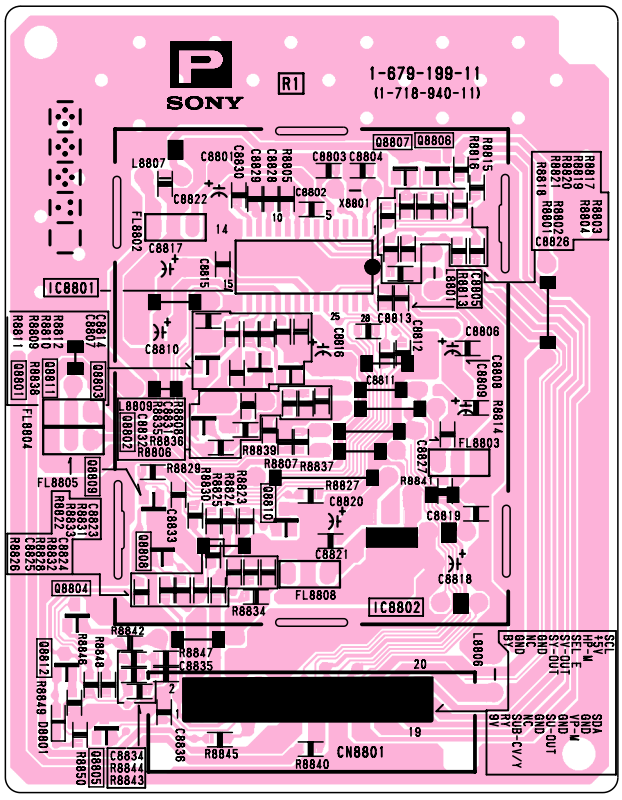

– F1 board –

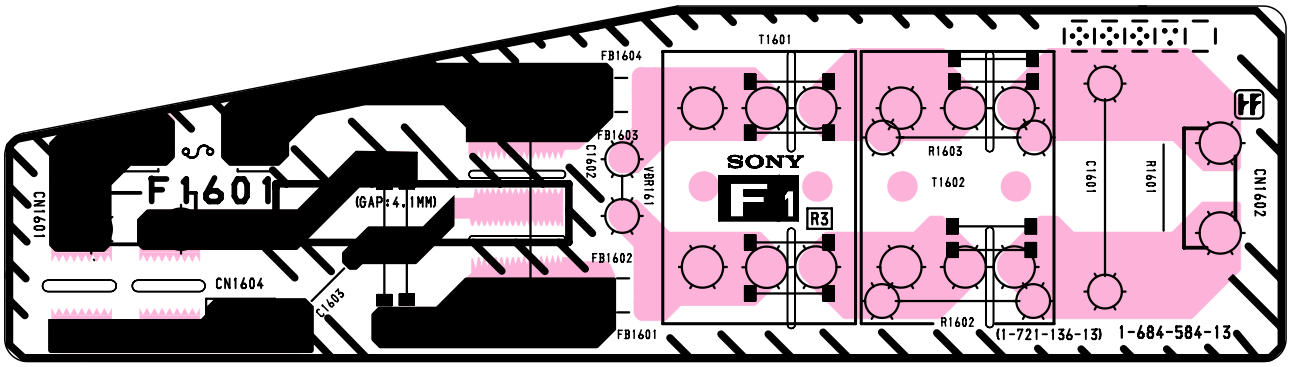

7-5 SEMICONDUCTORS

DIODE

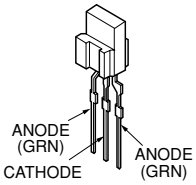	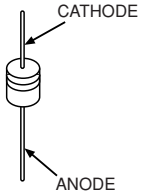		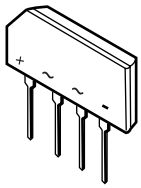		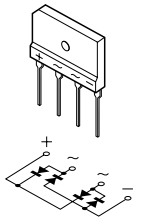
SPB-25MVWF	D1NS4 RD22ES-B1 D1N20R RD12ESB1 RD15ESB1 ERA38-06 RD10ESB2 ERA85-009	RD4.7ESB2 RD18ESB RD30ESB2 RD6.8ESB1 RD7.5ES-B1 RD18ES-B2 ISS119-25	D2SB60A-F04	MM3Z15VT1 MMDL914T1 MM3Z3V9T1	D4SB60L D4SBL20U

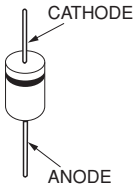					
ERA22-08 D1NS6 D1NL20U-TR S3L20UF4 ELIZ ERC04-06S ISS133T-77	RGP02-20EL-6394 RD2.2M-T1B NNCD9.1A-T1 HZS9.1NB2 HSS83TD GP08D UF4005PKG23	RN4Z	D10SC4M	D10SBS4F	M1MA152WK-T1

IC

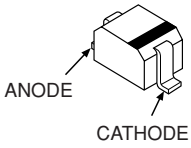	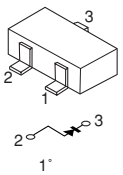	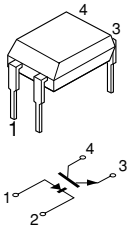	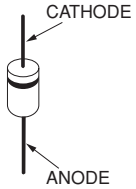	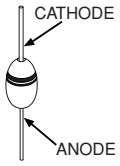	
1SS355TE-17 RD5.6SB3 MA111-(TX) RD9.1SB MA113-TX UDZSTE-179-1B RD7.5SB-T1 DTZ-TT11-16B	MA3091 MA3062M-TX	ON3171-R	ERC06-15SA	U05G	2SB1142-T

		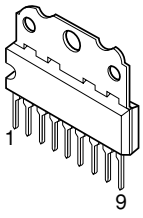	DIP  Dual In-line Package Pin 6~98		
SBX1981-51P	BA09T BA12T TA7805S PQ09RF2	TDA6111Q/N4	MCZ3001D UPC339C NJU4066M UPC358C TDA9178		DM-58

IC

SOP 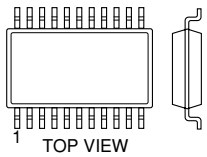 Small outline L-leaded Pin 8~98			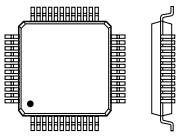	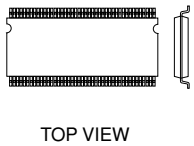	
SDA9588XB23 TLC2933IPWR-12 TC7SET00FU(TE85R) TLC2932IPWR CXA1875AM-T4 NJM4560M MM1115XFBE	M52055FP MSM514265E-60JSDR1 TC90A690F BU4053BCF-E2 UPC4558G2	PQ05RF2	CXA2151Q CXA2150Q CXA2069Q CXA2163AQ	MT48LC1M16A1TG65	PQ07VZ012ZP

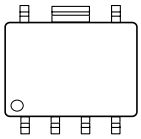	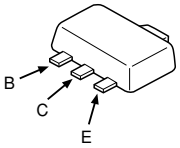	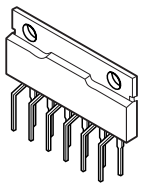		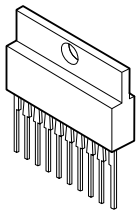	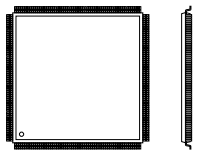
MM1476AF(TP)	S-80743AL-A7-T1	AN7583Z	STV9379A	LA6510	CXD2095AQ UPD64083 CXP750096-044Q

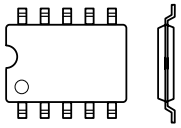				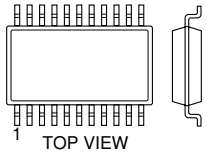 Single In -line Package Pin 8~98	
BR24C16F-E2	BA25BC0FP-E2 BA033FP-E2	NJM78L05A	UPC1093J-1-T NJM79L12A-T1 AN77L05-TA	M24C16-MN6T(A)	

TRANSISTOR

	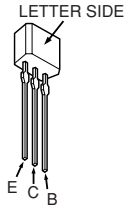		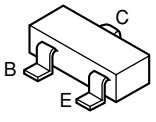		
PQ6RD83B	2SC2785-HFE 2SA1175-HFE DTC114ESA DTA144ESA	IRF1740G	2SD2114K 2SC2712-YG UN2213 2SA1037AK-T146-R 2SA1162-G UN2211 DTC114TKA-T146	2SC2223-F13 2SD601A-Q-TX MSD601-RT1 MSB709-RT1 2SC1623-L5L6 DTC143TKA-T146	2SC5698-SONY-CA 2SC5696-SONY-CA

TRANSISTOR

					
2SA2005 2SC5511 IRF1830G-LF49 2SC3840(3)	IRF1B7N50A-LF31	2SC2500-B	IRF720-LF49	2SD774-34 2SB733-34	2SK246-GR

	
IRF1830G-LF49	2SK2663

SECTION 8
EXPLODED VIEWS

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

8-1. SPEAKER BRACKET

■ : 7-685-663-71 SCREW +BVTP 4 × 16

8-2. 3D SPEAKER

■ : 7-685-663-71 SCREW +BVTP 4 × 16

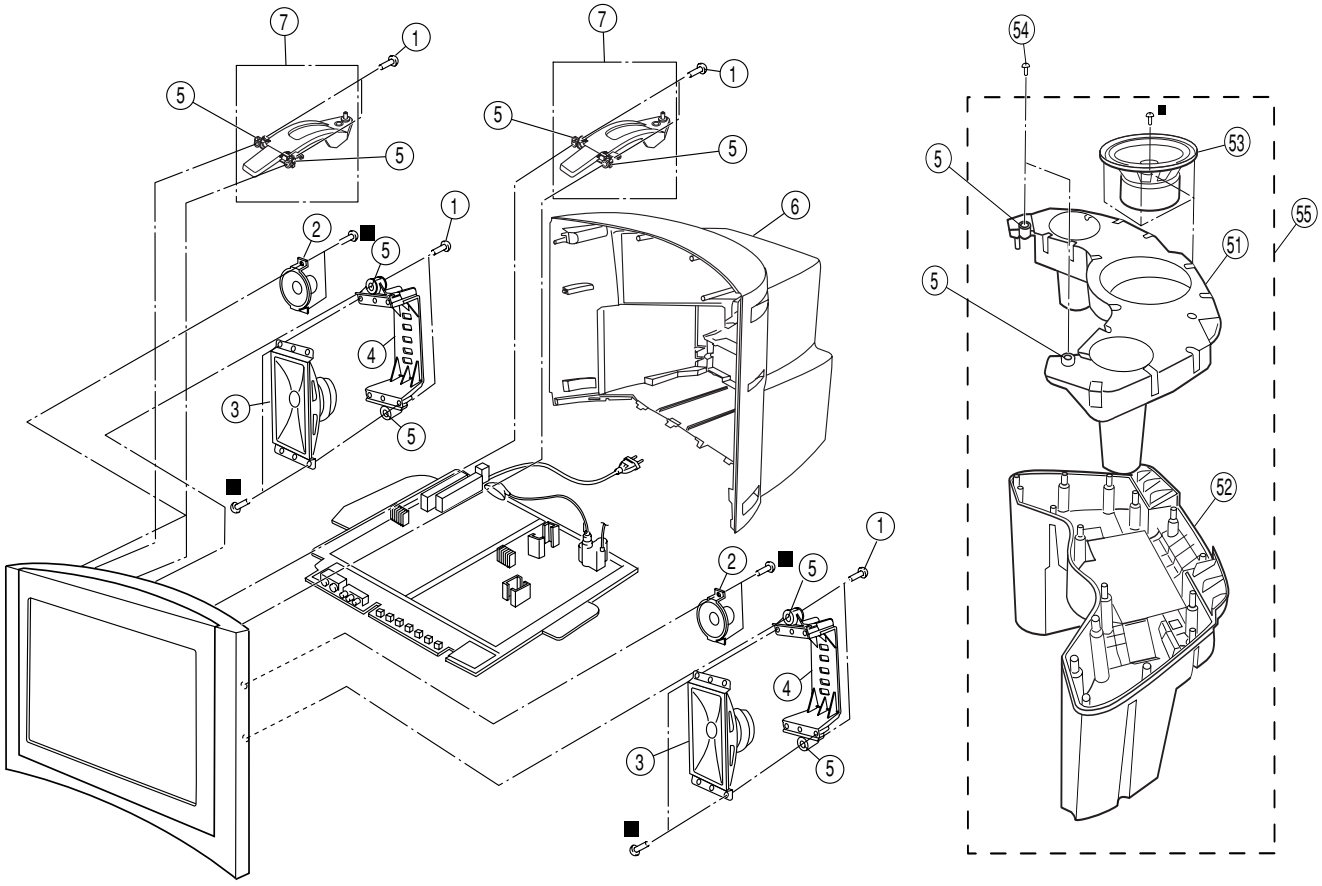

REF. NO.		PART NO.	DESCRIPTION	REMARK
1		4-302-404-03	SCREW (WASHER HEAD)(+P4 x 16)	
2		1-825-163-11	SPEAKER (5 CM)	
3		1-825-164-11	SPEAKER (13 x 6CM)	
4	*	4-086-708-01	BRACKET,SPEAKER	
5		4-374-745-21	CUSHION (A)	
6		X-4040-346-2	REAR COVER ASSY (■ 16 SCREWS)	
7	*	X-4040-051-1	BRACKET ASSY, WOOFER (KV-DR34M69(GE)/KV-DR34M89)	
	*	4-087-034-01	BRACKET, WOOFER (34) (KV-DR34M69(THAILAND))	

REF. NO.		PART NO.	DESCRIPTION	REMARK
51	*	4-087-460-01	3D BOX, TOP (■ 20 SCREWS)	
52	*	4-087-461-01	3D BOX, BOTTOM	
53		1-825-162-11	SPEAKER (16CM)	
54		4-064-929-02	SCREW, TP+TWH 4x25	
55		A-1601-923-A	3D BOX ASSY (KV-DR34M69(GE)/KV-DR34M89)	51-53
		A-1603-446-A	3D BOX ASSY (KV-DR34M69(THAILAND))	

8-3. CHASSIS

● : 7-685-648-79 SCREW +BVTP 3 × 12
■ : 7-685-663-71 SCREW +BVTP 4 × 16
▲ : 7-685-650-79 SCREW +BVTP 3 × 16

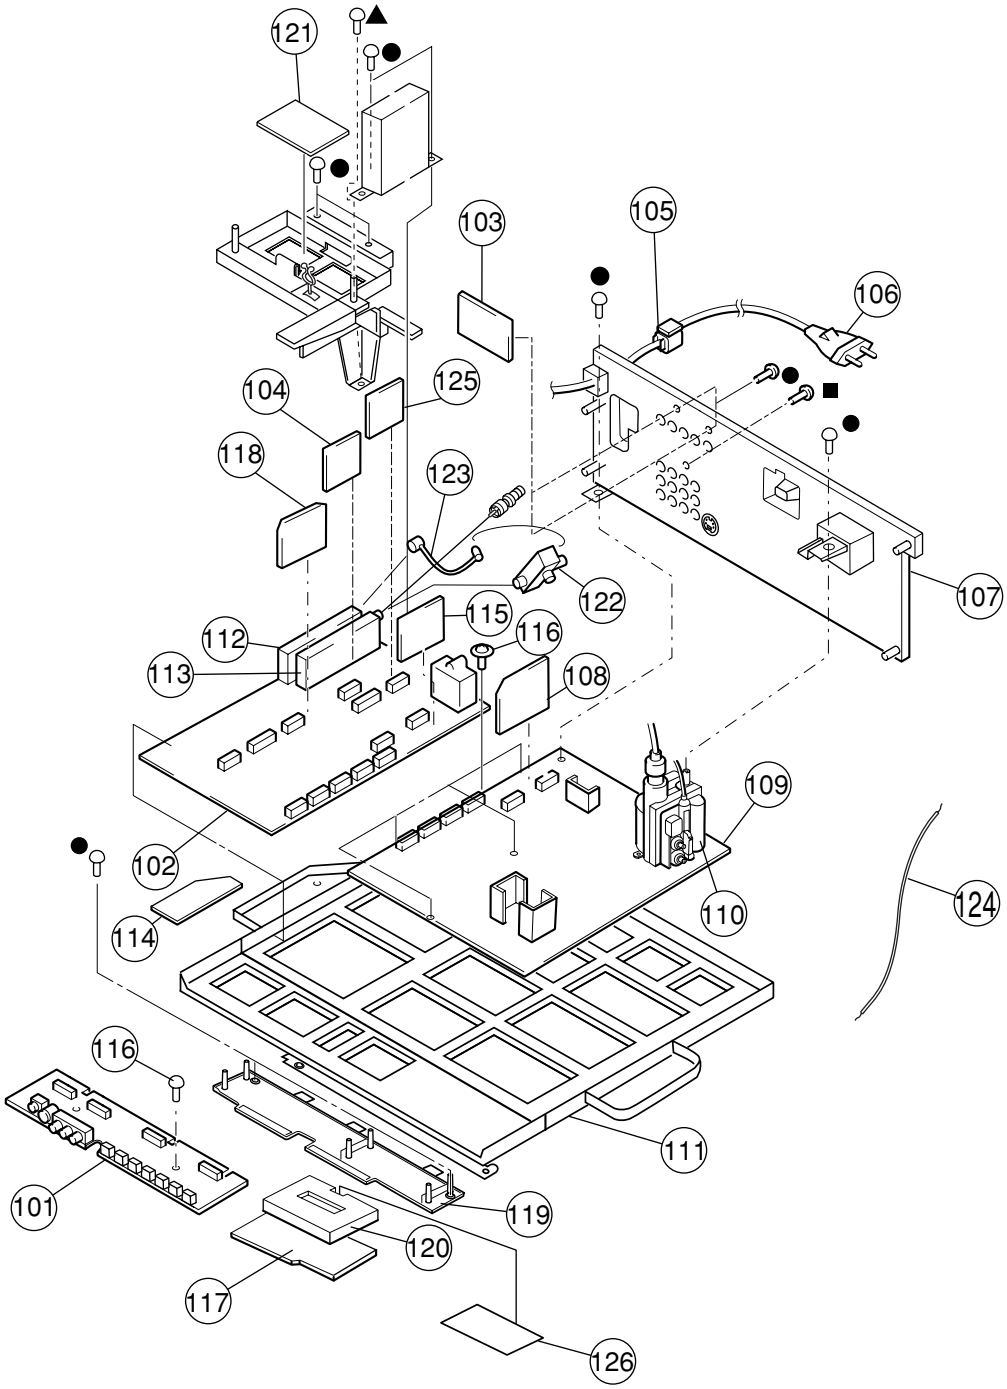

REF. NO.		PART NO.	DESCRIPTION	REMARK
101	*	A-1400-491-A	H1 BOARD, MOUNTED (KV-DR34M69(GE)/DR34M89)	
	*	A-1400-692-A	H1 BOARD, MOUNTED (KV-DR34M69(THAILAND))	
102	*	A-1300-451-A	A BOARD, COMPLETE (KV-DR34M69(THAILAND))	
	*	A-1300-512-A	A BOARD, COMPLETE (KV-DR34M69(GE))	
	*	A-1300-567-A	A BOARD, COMPLETE (KV-DR34M89)	
103	*	A-1400-500-A	J BOARD, MOUNTED (KV-DR34M69(GE)/DR34M89)	
	*	A-1400-695-A	J BOARD, MOUNTED (KV-DR34M69(THAILAND)	
104	*	A-1300-299-A	P BOARD, COMPLETE (KV-DR34M69(GE)/DR34M89)	
	*	A-1300-450-A	P BOARD, COMPLETE (KV-DR34M69(THAILAND)	
105	⚠	4-022-115-12	HOLDER, AC CORD (KV-DR34M69(GE)/DR34M89)	
	⚠	4-022-115-31	HOLDER, AC CORD (KV-DR34M69(THAILAND))	
106	⚠	1-823-485-11	CORD, AC POWER (WITH CONNECTOR) (KV-DR34M69(GE)/DR34M89)	
	⚠	1-575-023-41	CORD POWER (WITH CONNECTOR) (KV-DR34M69(THAILAND))	
107	*	4-086-706-01	BRACKET, TERMINAL (KV-DR34M69(GE)/DR34M89)	
	*	4-086-706-11	BRACKET, TERMINAL (KV-DR34M69(THAILAND)	
108	*	A-1400-586-A	D5 BOARD, MOUNTED (KV-DR34M69(GE)/DR34M89)	
	*	A-1400-844-A	D5 BOARD, MOUNTED (KV-DR34M69(THAILAND)	
109	*	A-1300-534-A	D BOARD, COMPLETE (KV-DR34M69(GE)/DR34M89)	
	*	A-1300-452-A	D BOARD, COMPLETE (KV-DR34M69(THAILAND)	
110	⚠	1-453-326-12	TRANSFORMER ASSY, FLYBACK (NX-4601/M3B4)	

REF. NO.		PART NO.	DESCRIPTION	REMARK
111	*	4-086-321-02	BRACKET, MAIN	
112		8-598-450-10	TUNER, FSS BTF-LG434	
113		8-598-452-20	TUNER, FSS-WG442 (KV-DR34M69(GE/THAILAND))	
		8-598-450-10	TUNER, FSS-LG434(KV-DR34M89)	
114	*	A-1400-490-A	F1 BOARD, MOUNTED (KV-DR34M69(GE)/DR34M89)	
	*	A-1400-691-A	F1 BOARD, MOUNTED (KV-DR34M69 (THAILAND)	
115	*	A-1300-290-A	B3 BOARD, COMPLETE (KV-DR34M69(GE)/DR34M89)	
	*	A-1300-385-A	B3 BOARD, COMPLETE (KV-DR34M69(THAILAND))	
116		4-046-797-01	SCREW (3X12)(+)BVTP (KV-DR34M69(GE)/DR34M89)	
		4-046-797-21	SCREW (3X12)(+)BVTP (KV-DR34M69(THAILAND))	
117	*	A-1400-492-A	H2 BOARD, MOUNTED (KV-DR34M69(GE)/DR34M89)	
	*	A-1400-693-A	H2 BOARD, MOUNTED (KV-DR34M69(THAILAND))	
118	*	A-1300-298-A	BC1 BOARD, COMPLETE (KV-DR34M69(GE)/DR34M89)	
	*	A-1300-388-A	BC1 BOARD, COMPLETE (KV-DR34M69(THAILAND))	
119	*	4-086-449-02	BRACKET, H	
120	*	4-086-450-01	COVER, H	
121	*	A-1400-588-A	DH BOARD, MOUNTED (KV-DR34M69(GE))	
	*	A-1400-846-A	DH BOARD, MOUNTED (KV-DR34M69(THAILAND))	
122		1-251-658-21	SPLITTER RF	
123	*	1-555-110-00	P-P CABLE	
124		1-900-251-82	LEAD ASSY, G2 (CN9007 (AT C BOARD) TO CN6810 (AT D BOARD)	
125	*	A-1400-711-A	V2 BOARD, MOUNTED (KV-DR34M69(GE)/DR34M89)	
	*	A-1400-847-A	V2 BOARD, MOUNTED (KV-DR34M69(THAILAND))	
126		4-069-652-02	CUSHION (HS BAND) (KV-DR34M69(GE)/DR34M89)	
		4-069-652-11	CUSHION (HS BAND) (KV-DR34M69(THAILAND))	

8-4. PICTURE TUBE

●: 7-685-648-79 SCREW +BVTP 3 × 12
■: 7-685-663-71 SCREW +BVTP 4 × 16

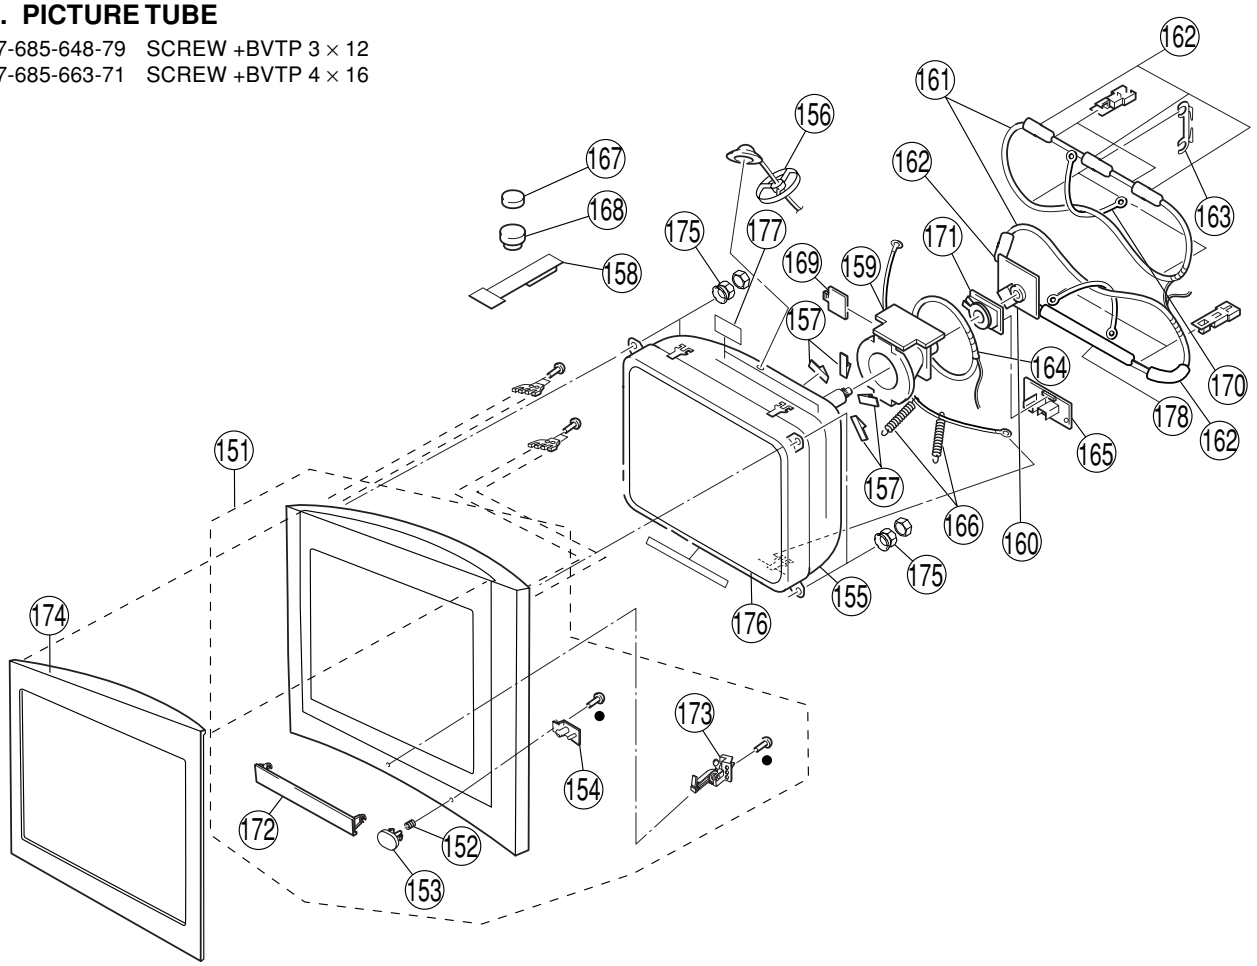

REF. NO.		PART NO.	DESCRIPTION	REMARK
151		X-4040-050-1	CABINET ASSY (KV-DR34M69)	152-154, 172-173
		X-4040-453-1	CABINET ASSY (KV-DR34M89)	
152		4-036-405-11	SPRING, COMPRESSION	
153		4-086-448-01	BUTTON, POWER	
154		4-086-707-01	GUIDE, LIGHT	
155	⚠	8-735-077-01	PICTURE TUBE (A80LPD90X) (KV-DR34M69(THAILAND)	
	⚠	8-735-076-05	PICTURE TUBE (A80LPD90X) (KV-DR34M69(GE))	
	⚠	8-735-076-01	PICTURE TUBE (A80LPD90X) (KV-DR34M89)	
156	*	3-704-372-11	HOLDER, HV CABLE	
157		4-064-818-01	SPACER, DY (KV-DR34M69(THAILAND))	
		4-046-600-11	SPACER, DY (KV-DR34M69(GE)/DR34M89)	
158		4-051-734-42	PIECE B (120), CONV, CORRECT (KV-DR34M69(THAILAND))	
		X-4387-214-3	PERMALOY ASSY, CORRECTION (KV-DR34M69(GE)/DR34M89)	
159	⚠	8-451-500-71	DEFLECTION YOKE (Y34RSC2-Y3)	
160	*	A-1400-587-A	C BOARD, MOUNTED (KV-DR34M69(GE)/DR34M89)	
	*	A-1400-845-A	C BOARD, MOUNTED (KV-DR34M69(THAILAND))	
161	⚠	1-419-293-21	COIL, DEGAUSSING	
162	*	4-074-512-21	CUSHION S, DGC (KV-DR34M69(GE)/DR34M89)	
	*	4-074-512-31	CUSHION S, DGC (KV-DR34M69(THAILAND)	
163		4-061-369-01	HOLDER, DEGAUSE COIL	
164		1-452-896-11	COIL, NA ROTATION (RT200) (KV-DR34M69(GE)/DR34M89))	
		1-452-896-91	COIL, NA ROTATION (KV-DR34M69(THAILAND))	

REF. NO.		PART NO.	DESCRIPTION	REMARK
165	*	A-1400-499-A	VM BOARD, MOUNTED (KV-DR34M69(GE)/DR34M89))	
	*	A-1400-694-A	VM BOARD, MOUNTED (KV-DR34M69(THAILAND))	
166		4-078-766-01	SPRING, EXTENSION (KV-DR34M69(GE)/DR34M89)	
		4-078-766-11	SPRING, EXTENSION (KV-DR34M69(THAILAND))	
167		1-452-032-00	MAGNET, DISC	
168		1-452-094-00	CIRCULAR DISC MAGNET B	
169		4-077-228-02	PIECE, TLH CONVERGENCE	
170		4-067-455-01	BAND, DGC	
171		8-453-007-31	NA324-M3	
172		X-4039-978-1	DOOR ASSY, CONTROL	
173		4-083-848-02	DAMPER DOOR (KV-DR34M69(GE/THAILAND)	
		4-083-848-01	DAMPER DOOR (KV-DR34M89)	
174		X-4040-049-2	BEZEL ASSY	
175		4-387-204-01	NUT, SPECIAL CRT	
176		1-419-295-11	COIL, LANDING CORRECTION	
177		4-069-652-02	CUSHION (HS BAND) (KV-DR34M69(GE)/DR34M89)	
178	*	4-074-513-21	CUSHION (L), DGC (KV-DR34M69(GE)/DR34M89)	
	*	4-074-513-31	CUSHION (L), DGC (KV-DR34M69(THAILAND))	

SECTION 9
ELECTRICAL PARTS LIST

A

NOTE:

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All resistors are in ohms
- F : nonflammable

CAPACITORS
- MF : µF, PF : µµF

COILS
- MMH : mH, UH : µH

REF NO.	PART NO.	DESCRIPTION			REMARK
	* A-1300-512-A	A BOARD COMPLETE (KV-DR34M69(GE))			
	* A-1300-451-A	A BOARD COMPLETE (KV-DR34M69(THAILAND))			
	* A-1300-567-A	A BOARD COMPLETE (KV-DR34M89)			
		**********			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
		<CAPACITOR>			
C001	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C002	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C004	1-163-001-11	CERAMIC CHIP	220PF	10.00%	50V
C005	1-163-001-11	CERAMIC CHIP	220PF	10.00%	50V
C006	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C007	1-126-933-11	ELECT	100UF	20.00%	16V
C009	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C010	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C012	1-163-227-11	CERAMIC CHIP	10PF	0.50PF	50V
C013	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C014	1-126-967-11	ELECT	47UF	20.00%	50V
C015	1-163-227-11	CERAMIC CHIP	10PF	0.50PF	50V
C016	1-163-243-11	CERAMIC CHIP	47PF	5.00%	50V
C017	1-163-247-91	CERAMIC CHIP	68PF	5.00%	50V
C020	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C021	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C022	1-163-809-11	CERAMIC CHIP	0.047UF	10.00%	25V
C024	1-163-227-11	CERAMIC CHIP	10PF	0.50PF	50V
C028	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C030	1-126-947-11	ELECT	47UF	20.00%	25V
C031	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C032	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C033	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C034	1-163-259-91	CERAMIC CHIP	220PF	5.00%	50V
C035	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C036	1-104-665-11	ELECT	100UF	20.00%	25V
C041	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C043	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C044	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C045	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C046	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C047	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C048	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C050	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C052	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C053	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C103	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C104	1-126-933-11	ELECT	100UF	20.00%	16V
C107	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C108	1-126-933-11	ELECT	100UF	20.00%	16V
C109	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C110	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V

REF NO.	PART NO.	DESCRIPTION			REMARK
C111	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C112	1-126-933-11	ELECT	100UF	20.00%	16V
C113	1-126-967-11	ELECT	47UF	20.00%	50V
C114	1-126-967-11	ELECT	47UF	20.00%	50V
C301	1-126-768-11	ELECT	2200UF	20.00%	16V
C326	1-126-963-11	ELECT	4.7UF	20.00%	50V
C1100	1-163-239-11	CERAMIC CHIP	33PF	5.00%	50V
C1101	1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C1102	1-163-007-11	CERAMIC CHIP	680PF	10.00%	50V
C1200	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C1201	1-216-025-11	RES-CHIP	100	5%	1/10W
C1202	1-126-947-11	ELECT	47UF	20.00%	16V
C1203	1-126-947-11	ELECT	47UF	20.00%	16V
C1204	1-163-251-11	CERAMIC CHIP	100PF	5.00%	50V
C1205	1-107-698-11	ELECT	10UF	20.00%	25V
C1206	1-216-025-11	RES-CHIP	100	5%	1/10W
C1207	1-107-698-11	ELECT	10UF	20.00%	25V
C1208	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C1209	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C1210	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C1211	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C1215	1-126-960-11	ELECT	1UF	20.00%	50V
C1216	1-126-964-11	ELECT	10UF	20.00%	50V
C1217	1-104-665-11	ELECT	100UF	20.00%	25V
C1220	1-126-960-11	ELECT	1UF	20.00%	50V
C1222	1-110-501-11	CERAMIC CHIP	0.33UF	10.00%	16V
C1223	1-126-963-11	ELECT	4.7UF	20.00%	50V
C1224	1-126-963-11	ELECT	4.7UF	20.00%	50V
C1225	1-126-963-11	ELECT	4.7UF	20.00%	50V
C1226	1-126-963-11	ELECT	4.7UF	20.00%	50V
C1227	1-126-963-11	ELECT	4.7UF	20.00%	50V
C1228	1-126-963-11	ELECT	4.7UF	20.00%	50V
C1229	1-126-963-11	ELECT	4.7UF	20.00%	50V
C1230	1-126-963-11	ELECT	4.7UF	20.00%	50V
C1232	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C1233	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C1234	1-126-974-11	ELECT	3300UF	20.00%	50V
C1235	1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C1236	1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C1237	1-164-492-11	CERAMIC CHIP (KV-DR34M69(GE)/THAILAND)	0.15UF	10.00%	16V
C1237	1-164-489-11	CERAMIC CHIP (KV-DR34M89)	0.22UF	10.00%	16V
C1238	1-164-492-11	CERAMIC CHIP (KV-DR34M69(GE)/THAILAND)	0.15UF	10.00%	16V
C1238	1-164-489-11	CERAMIC CHIP (KV-DR34M89)	0.22UF	10.00%	16V
C1239	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C1241	1-128-550-11	ELECT	2200UF	20.00%	50V
C1243	1-126-974-11	ELECT	3300UF	20.00%	50V
C1244	1-128-550-11	ELECT	2200UF	20.00%	50V
C1245	1-128-550-11	ELECT	2200UF	20.00%	50V

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
C1247	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C1248	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C1249	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C1250	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C1251	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C1252	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C1253	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C1254	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C1255	1-126-941-11	ELECT	470UF	20.00%	25V
C1256	1-126-964-11	ELECT	10UF	20.00%	50V
C1257	1-126-933-11	ELECT	100UF	20.00%	16V
C1258	1-126-960-11	ELECT	1UF	20.00%	50V
C1259	1-126-964-11	ELECT	10UF	20.00%	50V
C1261	1-126-960-11	ELECT	1UF	20.00%	50V
C1262	1-126-957-11	ELECT	0.22UF	20.00%	50V
C1263	1-126-965-91	ELECT	22UF	20.00%	50V
C1264	1-126-965-91	ELECT	22UF	20.00%	50V
C1265	1-249-429-11	CARBON	10K	5%	1/4W
C1266	1-126-960-11	ELECT	1UF	20.00%	50V
C1267	1-137-374-11	MYLAR	0.047UF	5.00%	50V
C1268	1-163-018-00	CERAMIC CHIP	0.0056UF	10.00%	50V
C1270	1-163-018-00	CERAMIC CHIP	0.0056UF	10.00%	50V
C1271	1-137-374-11	MYLAR	0.047UF	5.00%	50V
C1273	1-126-964-11	ELECT	10UF	20.00%	50V
C1274	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C1275	1-126-948-11	ELECT	100UF	20.00%	35V
C1276	1-104-760-11	CERAMIC CHIP	0.047UF	10.00%	50V
C1277	1-104-760-11	CERAMIC CHIP	0.047UF	10.00%	50V
C1279	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C1280	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C1281	1-164-489-11	CERAMIC CHIP	0.22UF	10.00%	16V
C1282	1-164-489-11	CERAMIC CHIP	0.22UF	10.00%	16V
C1283	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C1284	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C1285	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C1286	1-164-182-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C1287	1-164-182-11	CERAMIC CHIP	0.0033UF	10.00%	50V
C1288	1-163-989-11	CERAMIC CHIP	0.033UF	10.00%	25V
C1289	1-163-989-11	CERAMIC CHIP	0.033UF	10.00%	25V
C1291	1-104-665-11	ELECT	100UF	20.00%	25V
C1292	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C1293	1-163-019-00	CERAMIC CHIP	0.0068UF	10.00%	50V
C1295	1-126-964-11	ELECT	10UF	20.00%	50V
C1296	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C1297	1-137-374-11	MYLAR	0.047UF	5.00%	50V
C1298	1-126-960-11	ELECT	1UF	20.00%	50V
C1301	1-126-933-11	ELECT	100UF	20.00%	16V
C1302	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C1312	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C1322	1-137-374-11	MYLAR	0.047UF	5.00%	50V
C1323	1-136-165-00	FILM	0.1UF	5.00%	50V
C2200	1-126-964-11	ELECT	10UF	20.00%	50V
C2201	1-126-964-11	ELECT	10UF	20.00%	50V
C2202	1-126-964-11	ELECT	10UF	20.00%	50V
C2203	1-126-963-11	ELECT	4.7UF	20.00%	50V
C2204	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C2205	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C2206	1-126-964-11	ELECT	10UF	20.00%	50V
C2207	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C2208	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C2209	1-126-968-11	ELECT	100UF	20.00%	50V
C2600	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C2601	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C2602	1-126-933-11	ELECT	100UF	20.00%	16V
C2603	1-126-933-11	ELECT	100UF	20.00%	16V
C2605	1-104-665-11	ELECT	100UF	20.00%	10V
C2606	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C2607	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C2609	1-104-665-11	ELECT	100UF	20.00%	10V
C2612	1-104-665-11	ELECT	100UF	20.00%	25V
C2613	1-126-936-11	ELECT	3300UF	20.00%	16V
C2615	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C2616	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C3001	1-126-963-11	ELECT	4.7UF	20.00%	50V
C3002	1-109-982-11	CERAMIC CHIP	1UF	10.00%	10V
C3003	1-109-982-11	CERAMIC CHIP	1UF	10.00%	10V
C3005	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C3006	1-126-964-11	ELECT	10UF	20.00%	50V
C3007	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C3008	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C3010	1-126-947-11	ELECT	47UF	20.00%	16V
C3012	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C3013	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C3015	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C3019	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C3020	1-109-982-11	CERAMIC CHIP	1UF	10.00%	10V
C3021	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C3033	1-126-947-11	ELECT	47UF	20.00%	16V
C3034	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C3037	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3038	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3039	1-216-295-91	SHORT CHIP	0		
C3040	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3041	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C3042	1-126-947-11	ELECT	47UF	20.00%	16V
C3043	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3044	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3045	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3046	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C3330	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C3331	1-126-933-11	ELECT	100UF	20.00%	16V
C3336	1-126-933-11	ELECT	100UF	20.00%	16V
C3338	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C3350	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C3351	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C3352	1-163-005-91	CERAMIC CHIP	470PF	10.00%	50V
C3353	1-126-933-11	ELECT	100UF	20.00%	16V
C3354	1-126-967-11	ELECT	47UF	20.00%	50V
C3355	1-126-967-11	ELECT	47UF	20.00%	50V
C4301	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4302	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4303	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4304	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4305	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4306	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4307	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4308	1-164-492-11	CERAMIC CHIP	0.15UF	10.00%	16V
C4309	1-125-838-11	CERAMIC CHIP	2.2UF	10%	6.3V
C4310	1-107-902-11	ELECT	1UF	20.00%	50V
C4311	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4312	1-126-933-11	ELECT	100UF	20.00%	16V
C4313	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4314	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
C4315	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4316	1-126-933-11	ELECT	100UF	20.00%	16V
C4317	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4318	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4319	1-115-340-11	CERAMIC CHIP	0.22UF	10.00%	25V
C4321	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4322	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C4323	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4324	1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C4325	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4326	1-104-760-11	CERAMIC CHIP	0.047UF	10.00%	50V
C4327	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4328	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4330	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4331	1-115-340-11	CERAMIC CHIP	0.22UF	10.00%	25V
C4333	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4334	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4335	1-115-185-11	CERAMIC CHIP	0.033UF	10.00%	50V
C4336	1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C4339	1-136-244-11	FILM	0.1UF	5.00%	50V
C4341	1-130-489-00	MYLAR	0.033UF	5.00%	50V
C4342	1-164-344-11	CERAMIC CHIP	0.068UF	10.00%	25V
C4343	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4344	1-126-933-11	ELECT	100UF	20.00%	16V
C4345	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4346	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C4347	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4348	1-126-947-11	ELECT	47UF	20.00%	25V
C4349	1-127-760-11	CERAMIC CHIP	4.7UF	10%	6.3V
C4352	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4354	1-164-161-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C4355	1-164-489-11	CERAMIC CHIP	0.22UF	10.00%	16V
C4356	1-126-933-11	ELECT	100UF	20.00%	16V
C4357	1-126-947-11	ELECT	47UF	20.00%	25V
C4358	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4359	1-126-947-11	ELECT	47UF	20.00%	25V
C4360	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4361	1-164-161-11	CERAMIC CHIP	0.0022UF	10.00%	50V
C4362	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4367	1-216-295-91	SHORT CHIP	0		
C4368	1-126-947-11	ELECT	47UF	20.00%	25V
C4369	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4370	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4371	1-126-947-11	ELECT	47UF	20.00%	25V
C4373	1-126-934-11	ELECT	220UF	20.00%	16V
C4374	1-126-934-11	ELECT	220UF	20.00%	16V
C4375	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C4376	1-126-933-11	ELECT	100UF	20.00%	16V
C4383	1-126-965-91	ELECT	22UF	20.00%	50V
C4384	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C4390	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C4394	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C8300	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C8301	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C8302	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C8303	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C8304	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C8305	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C8306	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C8307	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C8308	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C8309	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V

REF NO.	PART NO.	DESCRIPTION		REMARK	
C8310	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C8311	1-164-346-11	CERAMIC CHIP	1UF		16V
C8312	1-164-346-11	CERAMIC CHIP	1UF		16V
C8313	1-164-346-11	CERAMIC CHIP	1UF		16V
C8314	1-164-346-11	CERAMIC CHIP	1UF		16V
C8315	1-164-346-11	CERAMIC CHIP	1UF		16V
C8316	1-164-346-11	CERAMIC CHIP	1UF		16V
C8317	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8318	1-164-346-11	CERAMIC CHIP	1UF		16V
C8319	1-164-346-11	CERAMIC CHIP	1UF		16V
C8320	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C8321	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C8322	1-164-346-11	CERAMIC CHIP	1UF		16V
C8323	1-164-346-11	CERAMIC CHIP	1UF		16V
C8324	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C8325	1-126-935-11	ELECT	470UF	20.00%	16V
C8326	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C8329	1-163-249-11	CERAMIC CHIP	82PF	5.00%	50V
C8330	1-164-346-11	CERAMIC CHIP	1UF		16V
C8331	1-164-346-11	CERAMIC CHIP	1UF		16V
C8334	1-126-947-11	ELECT	47UF	20.00%	16V
C8335	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8336	1-126-947-11	ELECT	47UF	20.00%	16V
C8337	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8338	1-164-346-11	CERAMIC CHIP	1UF		16V
C8339	1-164-346-11	CERAMIC CHIP	1UF		16V
C8340	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C8341	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C8342	1-126-964-11	ELECT	10UF	20.00%	50V
C8343	1-126-947-11	ELECT	47UF	20.00%	16V
C8346	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8349	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C8354	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C8355	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C8356	1-164-346-11	CERAMIC CHIP	1UF		16V
C8357	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C8358	1-164-346-11	CERAMIC CHIP	1UF		16V
C8359	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C8360	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C8361	1-126-961-11	ELECT	2.2UF	20.00%	50V
C8366	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C8367	1-126-947-11	ELECT	47UF	20.00%	16V
C8368	1-126-947-11	ELECT	47UF	20.00%	16V
C8369	1-126-947-11	ELECT	47UF	20.00%	16V
C8370	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8371	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8372	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8373	1-163-227-11	CERAMIC CHIP	10PF	0.50PF	50V
C8375	1-126-964-11	ELECT	10UF	20.00%	50V
C8376	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8377	1-164-346-11	CERAMIC CHIP	1UF		16V
C8378	1-164-346-11	CERAMIC CHIP	1UF		16V
C8379	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C8380	1-164-346-11	CERAMIC CHIP	1UF		16V
C8381	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C8382	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8383	1-164-346-11	CERAMIC CHIP	1UF		16V
C8384	1-164-346-11	CERAMIC CHIP	1UF		16V
C8385	1-164-346-11	CERAMIC CHIP	1UF		16V
C8386	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8390	1-126-963-11	ELECT	4.7UF	20.00%	50V
C8391	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
C8392	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8393	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8394	1-216-295-91	SHORT CHIP	0		
C8411	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C8413	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C8430	1-117-720-11	CERAMIC CHIP	4.7UF		10V
C8441	1-164-346-11	CERAMIC CHIP	1UF		16V
C8446	1-126-947-11	ELECT	47UF	20.00%	16V
C8447	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8448	1-164-690-91	CERAMIC CHIP	0.0022UF	5.00%	50V
C8450	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C8451	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C8452	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8453	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8454	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8455	1-126-947-11	ELECT	47UF	20.00%	16V
C8456	1-126-947-11	ELECT	47UF	20.00%	16V
C8457	1-126-947-11	ELECT	47UF	20.00%	16V
C8459	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8462	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8480	1-164-346-11	CERAMIC CHIP	1UF		16V
		<CONNECTOR>			
CN1100 *	1-785-608-11	PIN, CONNECTOR 4P			
CN1108	1-793-494-11	CONNECTOR, BOARD TO BOARD 40P			
CN1114 *	1-564-507-11	PLUG, CONNECTOR 4P			
CN1116	1-695-915-11	TAB (CONTACT)			
CN1118 *	1-774-813-11	CONNECTOR, BOARD TO BOARD 7P			
CN1121 *	1-774-813-11	CONNECTOR, BOARD TO BOARD 7P			
CN1138 *	1-564-508-11	PLUG, CONNECTOR 5P (KV-DR34M69(GE)/THAILAND)			
CN1190 *	1-764-333-11	PLUG, CONNECTOR 10P			
CN1193 *	1-764-333-11	PLUG, CONNECTOR 10P			
CN4301 *	1-564-515-11	PLUG, CONNECTOR 12P			
CN8301 *	1-764-333-11	PLUG, CONNECTOR 10P			
CN8302 *	1-564-511-11	PLUG, CONNECTOR 8P			
CN8401	1-793-493-11	CONNECTOR, BOARD TO BOARD 20P			
CN8402	1-793-493-11	CONNECTOR, BOARD TO BOARD 20P			
		<DIODE>			
D001	8-719-081-97	MMDL914T1			
D002	8-719-081-97	MMDL914T1			
D003	8-719-081-97	MMDL914T1			
D004	8-719-081-97	MMDL914T1			
D005	8-719-081-97	MMDL914T1			
D006	8-719-081-97	MMDL914T1			
D007	8-719-158-18	RD5.6SB3			
D013	8-719-158-18	RD5.6SB3			
D100	8-719-081-97	MMDL914T1			
D300	1-216-295-91	SHORT CHIP	0		
D301	8-719-081-97	MMDL914T1			
D302	8-719-081-97	MMDL914T1			
D303	8-719-081-97	MMDL914T1			
D317	8-719-081-97	MMDL914T1			
D1200	8-719-978-69	DTZ-TT11-16B (KV-DR34M69(GE)/DR34M89)			
D1200	8-719-083-52	UDZS-TE17-16B (KV-DR34M69(THAILAND))			
D1201	8-719-081-97	MMDL914T1			
D1202	8-719-081-97	MMDL914T1			
D1203	8-719-081-97	MMDL914T1			
D1204	8-719-081-97	MMDL914T1			

REF NO.	PART NO.	DESCRIPTION	REMARK
D1211	8-719-041-97	MA113-(TX)	
D1214	8-719-041-97	MA113-(TX)	
D1216	8-719-081-97	MMDL914T1	
D1217	8-719-081-97	MMDL914T1	
D1218	8-719-081-97	MMDL914T1	
D2200	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D2200	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D2201	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D2201	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D4301	8-719-081-97	MMDL914T1	
D4302	1-216-295-91	SHORT CHIP 0	
D4303	8-719-037-05	RD7.5SB-T1	
D4305	8-719-109-81	RD4.7ESB2	
D4308	8-719-081-97	MMDL914T1	
D4312	8-719-401-63	MA3062M-TX	
D4313	8-719-050-38	DIODE M1MA152WK-T1	
D4314	8-719-050-38	DIODE M1MA152WK-T1	
D4315	8-719-069-60	UDZSTE-179.1B	
D4317	8-719-081-97	MMDL914T1	
D4318	8-719-081-97	MMDL914T1	
D4319	8-719-081-97	MMDL914T1	
D4322	1-216-295-91	SHORT CHIP 0	
D4323	8-719-081-97	MMDL914T1	
D4324	8-719-081-97	MMDL914T1	
D8301	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8301	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8302	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8302	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8303	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8303	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8304	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8304	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8305	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8305	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8306	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8306	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8307	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8307	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8308	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8308	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8309	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8309	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8310	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8310	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8311	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8311	8-719-069-60	UDZSTE-179.1B(KV-DR34M69(THAILAND))	
D8312	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8312	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8313	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8313	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8314	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8314	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8315	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8315	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8316	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8316	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8320	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8320	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8321	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8321	8-719-069-60	UDZSTE-179.1B(KV-DR34M69(THAILAND))	

A

REF NO.	PART NO.	DESCRIPTION	REMARK
D8322	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8322	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8323	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8323	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8324	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8324	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8325	8-719-158-35	RD9.1S-B (KV-DR34M69(GE)/DR34M89)	
D8325	8-719-069-60	UDZSTE-179.1B (KV-DR34M69(THAILAND))	
D8331	8-719-041-97	MA113-(TX)	
		<FERRITE BEAD>	
FB002	1-414-233-22	FERRITE 0UH	
FB003	1-414-233-22	FERRITE 0UH	
FB004	1-414-233-22	FERRITE 0UH	
FB005	1-414-233-22	FERRITE 0UH	
FB006	1-414-233-22	FERRITE 0UH	
FB008	1-414-233-22	FERRITE 0UH	
FB1300	1-216-295-91	SHORT CHIP 0	
FB4301	1-216-295-91	SHORT CHIP 0	
FB4302	1-216-295-91	SHORT CHIP 0	
FB4303	1-216-295-91	SHORT CHIP 0	
		<FILTER>	
FL001	1-236-071-11	ENCAPSULATED COMPONENT	
FL8301	1-236-071-11	ENCAPSULATED COMPONENT	
FL8303	1-236-071-11	ENCAPSULATED COMPONENT	
FL8304	1-236-071-11	ENCAPSULATED COMPONENT	
FL8305	1-236-071-11	ENCAPSULATED COMPONENT	
FL8311	1-236-071-11	ENCAPSULATED COMPONENT	
FL8312	1-236-071-11	ENCAPSULATED COMPONENT	
		<IC>	
IC001	8-752-932-01	IC CXP750096-046Q	
IC002	8-759-663-29	MM1476AF(TP)	
IC003	8-759-641-86	BR24C16F-E2 (KV-DR34M69GE)/DR34M89)	
IC003	8-759-699-33	M24C16-MN6T(A) (KV-DR34M69(THAILAND))	
IC100	8-759-042-02	S-80743AL-A7-S	
IC1200	8-759-100-96	UPC4558G2	
IC1203	8-759-100-96	UPC4558G2	
IC1204	8-759-690-61	AN7583Z	
IC1205	8-759-711-10	NJU4066BM	
IC1207	6-702-145-01	IC NJW1139GK1-TE2	
IC2200	8-759-745-64	NJM4560M	
IC2600	8-759-095-63	PQ09RF2	
IC2601	8-759-065-07	PQ05RF2	
IC2603	8-759-460-72	BA033FP-E2	
IC3001	8-752-093-84	CXA2151Q	
IC3002	8-759-677-02	BU4053BCF-E2	
IC3003	8-759-548-56	M52055FP	
IC4301	8-752-100-25	CXA2150AQ	
IC4302	8-759-708-05	NJM78L05A	
IC4304	8-759-135-80	UPC358C	
IC8302	8-752-080-04	CXA2069Q	
IC8306	8-752-099-05	IC CXA2163AQ-T6	
IC8309	8-759-337-26	MM1115XFBE	
IC8310	8-759-542-15	TDA9178	
IC8312	8-759-485-79	TC7SET08FU(TE85L	

REF NO.	PART NO.	DESCRIPTION	REMARK
		<JACK>	
J8301	1-784-646-11	TERMINAL, S	
J8302	1-778-387-11	JACK BLOCK, PIN 12P	
		<CHIP CONDUCTOR>	
JR001	1-216-295-91	SHORT CHIP 0	
JR102	1-216-295-91	SHORT CHIP 0	
JR107	1-216-295-91	SHORT CHIP 0	
JR109	1-216-295-91	SHORT CHIP 0 (KV-DR34M89)	
JR1214	1-216-295-91	SHORT CHIP 0	
JR1219	1-216-295-91	SHORT CHIP 0	
JR1301	1-216-295-91	SHORT CHIP 0	
JR1303	1-216-295-91	SHORT CHIP 0	
JR4301	1-216-295-91	SHORT CHIP 0	
JR8301	1-216-295-91	SHORT CHIP 0	
JR8302	1-216-295-91	SHORT CHIP 0	
		<COIL>	
L001	1-414-856-11	INDUCTOR 10UH	
L002	1-414-856-11	INDUCTOR 10UH	
L003	1-414-751-11	INDUCTOR 1UH	
L005	1-414-856-11	INDUCTOR 10UH	
L006	1-414-856-11	INDUCTOR 10UH	
L101	1-414-856-11	INDUCTOR 10UH	
L102	1-414-856-11	INDUCTOR 10UH	
L103	1-414-856-11	INDUCTOR 10UH	
L104	1-414-856-11	INDUCTOR 10UH	
L105	1-414-856-11	INDUCTOR 10UH	
L1200	1-414-856-11	INDUCTOR 10UH	
L1201	1-414-856-11	INDUCTOR 10UH	
L1300	1-414-856-11	INDUCTOR 10UH	
L3001	1-469-555-21	INDUCTOR 10UH	
L3002	1-412-029-11	INDUCTOR 10UH	
L3003	1-412-029-11	INDUCTOR 10UH	
L3302	1-414-856-11	INDUCTOR 10UH	
L3303	1-414-856-11	INDUCTOR 10UH	
L3304	1-414-856-11	INDUCTOR 10UH	
L3305	1-414-856-11	INDUCTOR 10UH	
L3306	1-414-856-11	INDUCTOR 10UH	
L4301	1-412-029-11	INDUCTOR 10UH	
L4302	1-412-029-11	INDUCTOR 10UH	
L4303	1-412-029-11	INDUCTOR 10UH	
L4304	1-412-029-11	INDUCTOR 10UH	
L4305	1-412-029-11	INDUCTOR 10UH	
L4306	1-412-029-11	INDUCTOR 10UH	
L4307	1-412-029-11	INDUCTOR 10UH	
		<IC LINK>	
PS1201	1-533-597-41	LINK, IC	
		<TRANSISTOR>	
Q001	8-729-010-05	MSB709-RT1	
Q002	8-729-010-25	MSD601-RT1	
Q003	8-729-010-25	MSD601-RT1	
Q004	8-729-010-25	MSD601-RT1	
Q101	8-729-010-05	MSB709-RT1	

A

REF NO.	PART NO.	DESCRIPTION	REMARK
Q301	8-729-010-05	MSB709-RT1	
Q302	8-729-010-05	MSB709-RT1	
Q313	8-729-010-25	MSD601-RT1	
Q1203	8-729-027-44	DTC114TKA-T146	
Q1204	8-729-224-62	2SK246-GR	
Q1205	8-729-230-49	2SC2712-YG	
Q1206	8-729-230-49	2SC2712-YG	
Q1207	8-729-010-05	MSB709-RT1	
Q1208	8-729-027-44	DTC114TKA-T146	
Q1209	8-729-027-44	DTC114TKA-T146	
Q1210	8-729-027-44	DTC114TKA-T146	
Q2200	8-729-027-56	DTC143TKA-T146	
Q2201	8-729-027-56	DTC143TKA-T146	
Q3001	8-729-102-07	2SC2223-F13	
Q3002	8-729-102-07	2SC2223-F13	
Q3003	8-729-102-07	2SC2223-F13	
Q3014	8-729-010-05	MSB709-RT1	
Q3015	8-729-102-07	2SC2223-F13	
Q3018	8-729-102-07	2SC2223-F13	
Q3023	8-729-102-07	2SC2223-F13	
Q3300	8-729-010-05	MSB709-RT1	
Q4301	8-729-010-25	MSD601-RT1	
Q4305	8-729-010-25	MSD601-RT1	
Q4306	8-729-216-22	2SA1162-G	
Q4307	8-729-010-25	MSD601-RT1	
Q4308	8-729-216-22	2SA1162-G	
Q4309	8-729-216-22	2SA1162-G	
Q4310	8-729-010-25	MSD601-RT1	
Q4314	8-729-421-19	UN2213	
Q4315	8-729-010-25	MSD601-RT1	
Q4316	8-729-216-22	2SA1162-G	
Q4317	8-729-216-22	2SA1162-G	
Q4318	8-729-216-22	2SA1162-G	
Q4319	8-729-216-22	2SA1162-G	
Q4320	8-729-010-25	MSD601-RT1	
Q4321	8-729-216-22	2SA1162-G	
Q4330	8-729-216-22	2SA1162-G	
Q4335	8-729-216-22	2SA1162-G	
Q4336	8-729-216-22	2SA1162-G	
Q4337	8-729-216-22	2SA1162-G	
Q4340	8-729-010-25	MSD601-RT1	
Q4341	8-729-010-25	MSD601-RT1	
Q8301	8-729-010-05	MSB709-RT1	
Q8302	8-729-010-25	MSD601-RT1	
Q8303	8-729-010-25	MSD601-RT1	
Q8304	8-729-010-25	MSD601-RT1	
Q8305	8-729-010-05	MSB709-RT1	
Q8306	8-729-010-25	MSD601-RT1	
Q8307	8-729-010-25	MSD601-RT1	
Q8310	8-729-010-25	MSD601-RT1	
Q8319	8-729-010-05	MSB709-RT1	
Q8320	8-729-010-05	MSB709-RT1	
Q8321	8-729-010-05	MSB709-RT1	
Q8326	8-729-010-25	MSD601-RT1	
Q8327	8-729-421-19	UN2213	
Q8328	8-729-421-19	UN2213	
Q8329	8-729-010-25	MSD601-RT1	
Q8330	8-729-010-25	MSD601-RT1	
Q8331	8-729-010-25	MSD601-RT1	
Q8332	8-729-010-25	MSD601-RT1	
Q8333	8-729-010-25	MSD601-RT1	
Q8334	8-729-010-25	MSD601-RT1	
Q8335	8-729-010-25	MSD601-RT1	
Q8336	8-729-010-25	MSD601-RT1	
Q8351	8-729-010-25	MSD601-RT1	
Q8352	8-729-010-05	MSB709-RT1	
Q8361	8-729-010-25	MSD601-RT1	
Q8362	8-729-010-25	MSD601-RT1	
Q8363	8-729-010-25	MSD601-RT1	
Q8364	8-729-010-05	MSB709-RT1	
Q8365	8-729-010-25	MSD601-RT1	

<RESISTOR>

REF NO.	PART NO.	DESCRIPTION			REMARK
R001	1-216-033-00	RES-CHIP	220	5%	1/10W
R002	1-216-033-00	RES-CHIP	220	5%	1/10W
R003	1-216-049-11	RES-CHIP	1K	5%	1/10W
R004	1-216-295-91	SHORT CHIP	0		
R005	1-216-295-91	SHORT CHIP	0		
R006	1-216-029-00	RES-CHIP	150	5%	1/10W
R010	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R011	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R012	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R013	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R014	1-216-025-11	RES-CHIP	100	5%	1/10W
R015	1-216-025-11	RES-CHIP	100	5%	1/10W
R016	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R017	1-216-049-11	RES-CHIP	1K	5%	1/10W
R018	1-216-045-00	RES-CHIP	680	5%	1/10W
R019	1-216-049-11	RES-CHIP	1K	5%	1/10W
R020	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R022	1-216-033-00	RES-CHIP	220	5%	1/10W
R023	1-216-025-11	RES-CHIP	100	5%	1/10W
R024	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R025	1-216-049-11	RES-CHIP	1K	5%	1/10W
R026	1-216-049-11	RES-CHIP	1K	5%	1/10W
R027	1-216-049-11	RES-CHIP	1K	5%	1/10W
R028	1-216-049-11	RES-CHIP	1K	5%	1/10W
R029	1-216-049-11	RES-CHIP	1K	5%	1/10W
R031	1-216-033-00	RES-CHIP	220	5%	1/10W
R032	1-216-049-11	RES-CHIP	1K	5%	1/10W
R033	1-216-033-00	RES-CHIP	220	5%	1/10W
R035	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R036	1-216-033-00	RES-CHIP	220	5%	1/10W
R037	1-216-033-00	RES-CHIP	220	5%	1/10W
R038	1-216-045-00	RES-CHIP	680	5%	1/10W
R039	1-216-025-11	RES-CHIP	100	5%	1/10W
R040	1-216-033-00	RES-CHIP	220	5%	1/10W
R041	1-216-025-11	RES-CHIP	100	5%	1/10W
R042	1-216-295-91	SHORT CHIP	0		
R043	1-216-025-11	RES-CHIP	100	5%	1/10W
R044	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R045	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R046	1-216-033-00	RES-CHIP	220	5%	1/10W
R047	1-216-033-00	RES-CHIP	220	5%	1/10W
R048	1-216-073-91	RES-CHIP	10K	5%	1/10W
R051	1-216-049-11	RES-CHIP	1K	5%	1/10W
R052	1-216-049-11	RES-CHIP	1K	5%	1/10W
R053	1-216-049-11	RES-CHIP	1K	5%	1/10W
R054	1-216-049-11	RES-CHIP	1K	5%	1/10W
R057	1-216-025-11	RES-CHIP	100	5%	1/10W
R059	1-216-073-91	RES-CHIP	10K	5%	1/10W
R061	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R065	1-216-045-00	RES-CHIP	680	5%	1/10W

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
R067	1-216-049-11	RES-CHIP	1K	5%	1/10W
R068	1-216-073-91	RES-CHIP	10K	5%	1/10W
R070	1-216-033-00	RES-CHIP	220	5%	1/10W
R071	1-216-025-11	RES-CHIP	100	5%	1/10W
R072	1-216-025-11	RES-CHIP	100	5%	1/10W
R073	1-216-055-00	RES-CHIP	1.8K	5%	1/10W
R074	1-216-055-00	RES-CHIP	1.8K	5%	1/10W
R075	1-216-055-00	RES-CHIP	1.8K	5%	1/10W
R076	1-216-295-91	SHORT CHIP	0		
R077	1-216-025-11	RES-CHIP	100	5%	1/10W
R078	1-216-295-91	SHORT CHIP	0		
R079	1-216-025-11	RES-CHIP	100	5%	1/10W
R080	1-216-063-91	RES-CHIP	3.9K	5%	1/10W
R081	1-216-025-11	RES-CHIP	100	5%	1/10W
R082	1-216-041-00	RES-CHIP	470	5%	1/10W
R083	1-216-049-11	RES-CHIP	1K	5%	1/10W
R084	1-216-049-11	RES-CHIP	1K	5%	1/10W
R085	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R086	1-216-073-91	RES-CHIP	10K	5%	1/10W
R087	1-216-033-00	RES-CHIP	220	5%	1/10W
R101	1-216-025-11	RES-CHIP	100	5%	1/10W
R102	1-216-025-11	RES-CHIP	100	5%	1/10W
R105	1-216-295-91	SHORT CHIP	0		
R109	1-216-041-00	RES-CHIP	470	5%	1/10W
R110	1-216-043-91	RES-CHIP	560	5%	1/10W
R111	1-216-025-11	RES-CHIP	100	5%	1/10W
R112	1-216-025-11	RES-CHIP	100	5%	1/10W
R123	1-216-025-11	RES-CHIP	100	5%	1/10W
R124	1-216-025-11	RES-CHIP	100	5%	1/10W
R301	1-216-113-00	RES-CHIP	470K	5%	1/10W
R302	1-216-089-91	RES-CHIP	47K	5%	1/10W
R303	1-216-089-91	RES-CHIP	47K	5%	1/10W
R304	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1200	1-216-060-00	RES-CHIP	3K	5%	1/10W
R1201	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R1202	1-216-060-00	RES-CHIP	3K	5%	1/10W
R1203	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1204	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1205	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1206	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1207	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R1217	1-216-077-91	RES-CHIP	15K	5%	1/10W
R1218	1-216-077-91	RES-CHIP	15K	5%	1/10W
R1219	1-216-081-00	RES-CHIP	22K	5%	1/10W
R1220	1-216-081-00	RES-CHIP	22K	5%	1/10W
R1221	1-216-079-00	RES-CHIP	18K	5%	1/10W
R1222	1-216-079-00	RES-CHIP	18K	5%	1/10W
R1223	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1224	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1225	1-216-071-00	RES-CHIP	8.2K	5%	1/10W
R1227	1-216-071-00	RES-CHIP	8.2K	5%	1/10W
R1228	1-249-405-11	CARBON	100	5%	1/4W
R1229	1-249-405-11	CARBON	100	5%	1/4W
R1230	1-249-405-11	CARBON	100	5%	1/4W
R1231	1-216-295-91	SHORT CHIP	0		
R1232	1-216-081-00	RES-CHIP	22K	5%	1/10W
R1233	1-216-093-91	RES-CHIP	68K	5%	1/10W
R1234	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1235	1-216-093-91	RES-CHIP	68K	5%	1/10W
R1236	1-216-081-00	RES-CHIP	22K	5%	1/10W
R1237	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1238	1-216-049-11	RES-CHIP	1K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION		REMARK	
R1239	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1240	1-216-041-00	RES-CHIP	470	5%	1/10W
R1241	1-216-295-91	SHORT CHIP	0		
R1242	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R1243	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1244	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1245	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1246	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R1247	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1248	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R1249	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R1250	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R1251	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R1252	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1253	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R1254	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R1256	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R1257	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R1258	1-216-081-00	RES-CHIP	22K	5%	1/10W
R1259	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1260	1-216-041-00	RES-CHIP	470	5%	1/10W
R1262	1-249-389-11	CARBON	4.7	5%	1/4W
R1263	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1265	1-249-397-11	CARBON	22	5%	1/4W
R1268	1-249-397-11	CARBON	22	5%	1/4W
R1269	1-216-025-11	RES-CHIP	100	5%	1/10W
R1270	1-216-025-11	RES-CHIP	100	5%	1/10W
R1271	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1272	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1273	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1274	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1275	1-216-073-91	RES-CHIP	10K	5%	1/10W
R1276	1-216-073-91	RES-CHIP	10K	5%	1/10W
R2200	1-216-021-00	RES-CHIP	68	5%	1/10W
R2201	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R2202	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R2203	1-216-021-00	RES-CHIP	68	5%	1/10W
R2204	1-216-073-91	RES-CHIP	10K	5%	1/10W
R2205	1-216-097-11	RES-CHIP	100K	5%	1/10W
R2206	1-216-117-00	RES-CHIP	680K	5%	1/10W
R2207	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R2208	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R2209	1-216-117-00	RES-CHIP	680K	5%	1/10W
R2210	1-216-089-91	RES-CHIP	47K	5%	1/10W
R2211	1-216-097-11	RES-CHIP	100K	5%	1/10W
R2212	1-216-073-91	RES-CHIP	10K	5%	1/10W
R2213	1-216-089-91	RES-CHIP	47K	5%	1/10W
R2214	1-216-089-91	RES-CHIP	47K	5%	1/10W
R2215	1-216-089-91	RES-CHIP	47K	5%	1/10W
R2602	1-215-882-00	METAL OXIDE	22	5%	2W
R2603	1-215-882-00	METAL OXIDE	22	5%	2W
R3001	1-216-017-91	RES-CHIP	47	5%	1/10W
R3002	1-216-017-91	RES-CHIP	47	5%	1/10W
R3003	1-216-017-91	RES-CHIP	47	5%	1/10W
R3004	1-216-017-91	RES-CHIP	47	5%	1/10W
R3005	1-216-017-91	RES-CHIP	47	5%	1/10W
R3006	1-216-025-11	RES-CHIP	100	5%	1/10W
R3007	1-216-089-91	RES-CHIP	47K	5%	1/10W
R3008	1-216-025-11	RES-CHIP	100	5%	1/10W
R3009	1-216-097-11	RES-CHIP	100K	5%	1/10W
R3010	1-208-806-11	METAL CHIP	10K	0.5%	1/10W

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
R3011	1-216-089-91	RES-CHIP	47K	5%	1/10W
R3012	1-216-097-11	RES-CHIP	100K	5%	1/10W
R3013	1-216-295-91	SHORT CHIP	0		
R3014	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3015	1-216-295-91	SHORT CHIP	0		
R3016	1-216-097-11	RES-CHIP	100K	5%	1/10W
R3017	1-216-025-11	RES-CHIP	100	5%	1/10W
R3018	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3019	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3020	1-216-089-91	RES-CHIP	47K	5%	1/10W
R3021	1-216-025-11	RES-CHIP	100	5%	1/10W
R3022	1-216-025-11	RES-CHIP	100	5%	1/10W
R3023	1-216-295-91	SHORT CHIP	0		
R3024	1-216-295-91	SHORT CHIP	0		
R3027	1-216-129-00	RES-CHIP	2.2M	5%	1/10W
R3031	1-216-025-11	RES-CHIP	100	5%	1/10W
R3033	1-216-041-00	RES-CHIP	470	5%	1/10W
R3034	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3035	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3036	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3044	1-216-041-00	RES-CHIP	470	5%	1/10W
R3047	1-216-017-91	RES-CHIP	47	5%	1/10W
R3048	1-216-017-91	RES-CHIP	47	5%	1/10W
R3053	1-216-041-00	RES-CHIP	470	5%	1/10W
R3076	1-216-049-11	RES-CHIP	1K	5%	1/10W
R3300	1-216-043-91	RES-CHIP	560	5%	1/10W
R3304	1-216-041-00	RES-CHIP	470	5%	1/10W
R3320	1-216-073-91	RES-CHIP	10K	5%	1/10W
R3323	1-216-025-11	RES-CHIP	100	5%	1/10W
R3334	1-216-025-11	RES-CHIP	100	5%	1/10W
R3362	1-216-025-11	RES-CHIP	100	5%	1/10W
R3374	1-216-295-91	SHORT CHIP	0		
R4301	1-216-025-11	RES-CHIP	100	5%	1/10W
R4302	1-216-025-11	RES-CHIP	100	5%	1/10W
R4303	1-216-133-91	RES-CHIP	3.3M	5%	1/10W
R4304	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R4305	1-216-025-11	RES-CHIP	100	5%	1/10W
R4306	1-216-025-11	RES-CHIP	100	5%	1/10W
R4307	1-216-025-11	RES-CHIP	100	5%	1/10W
R4308	1-216-025-11	RES-CHIP	100	5%	1/10W
R4309	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R4310	1-216-077-91	RES-CHIP	15K	5%	1/10W
R4311	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4314	1-216-113-00	RES-CHIP	470K	5%	1/10W
R4315	1-216-025-11	RES-CHIP	100	5%	1/10W
R4316	1-216-097-11	RES-CHIP	100K	5%	1/10W
R4317	1-216-025-11	RES-CHIP	100	5%	1/10W
R4318	1-216-121-11	RES-CHIP	1M	5%	1/10W
R4319	1-216-113-00	RES-CHIP	470K	5%	1/10W
R4320	1-216-025-11	RES-CHIP	100	5%	1/10W
R4321	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R4322	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R4323	1-216-085-91	RES-CHIP	33K	5%	1/10W
R4324	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4325	1-216-025-11	RES-CHIP	100	5%	1/10W
R4326	1-216-025-11	RES-CHIP	100	5%	1/10W
R4327	1-216-025-11	RES-CHIP	100	5%	1/10W
R4328	1-216-025-11	RES-CHIP	100	5%	1/10W
R4329	1-216-025-11	RES-CHIP	100	5%	1/10W
R4330	1-216-025-11	RES-CHIP	100	5%	1/10W
R4332	1-216-295-91	SHORT CHIP	0		
R4339	1-208-822-11	METAL CHIP	47K	0.5%	1/10W
R4343	1-208-842-11	METAL CHIP	330K	0.5%	1/10W
R4344	1-216-129-00	RES-CHIP	2.2M	5%	1/10W
R4345	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R4346	1-216-097-11	RES-CHIP	100K	5%	1/10W
R4347	1-208-822-11	METAL CHIP	47K	0.5%	1/10W
R4349	1-216-081-00	RES-CHIP	22K	5%	1/10W
R4350	1-216-295-91	SHORT CHIP	0		
R4351	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4352	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R4353	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R4354	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4355	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R4356	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R4357	1-216-045-00	RES-CHIP	680	5%	1/10W
R4359	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4361	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4362	1-216-025-11	RES-CHIP	100	5%	1/10W
R4363	1-216-295-91	SHORT CHIP	0		
R4365	1-216-085-91	RES-CHIP	33K	5%	1/10W
R4375	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4376	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R4379	1-216-025-11	RES-CHIP	100	5%	1/10W
R4380	1-216-025-11	RES-CHIP	100	5%	1/10W
R4381	1-208-774-11	METAL CHIP	470	0.5%	1/10W
R4382	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4383	1-216-025-11	RES-CHIP	100	5%	1/10W
R4384	1-216-017-91	RES-CHIP	47	5%	1/10W
R4385	1-216-017-91	RES-CHIP	47	5%	1/10W
R4386	1-216-017-91	RES-CHIP	47	5%	1/10W
R4387	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4388	1-216-295-91	SHORT CHIP	0		
R4391	1-216-017-91	RES-CHIP	47	5%	1/10W
R4392	1-216-017-91	RES-CHIP	47	5%	1/10W
R4393	1-216-017-91	RES-CHIP	47	5%	1/10W
R4394	1-216-025-11	RES-CHIP	100	5%	1/10W
R4395	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4396	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R4397	1-216-033-00	RES-CHIP	220	5%	1/10W
R4398	1-216-033-00	RES-CHIP	220	5%	1/10W
R4399	1-216-033-00	RES-CHIP	220	5%	1/10W
R4400	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R4401	1-208-789-11	METAL CHIP	2K	0.5%	1/10W
R4402	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R4403	1-216-025-11	RES-CHIP	100	5%	1/10W
R4404	1-216-049-11	RES-CHIP	1K	5%	1/10W
R4405	1-216-025-11	RES-CHIP	100	5%	1/10W
R4410	1-216-295-91	SHORT CHIP	0		
R4418	1-216-295-91	SHORT CHIP	0		
R4419	1-216-295-91	SHORT CHIP	0		
R4420	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R4421	1-216-025-11	RES-CHIP	100	5%	1/10W
R4425	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4426	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4429	1-216-295-91	SHORT CHIP	0		
R4431	1-216-295-91	SHORT CHIP	0		
R4433	1-216-295-91	SHORT CHIP	0		
R4442	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R4443	1-216-081-00	RES-CHIP	22K	5%	1/10W
R4444	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4445	1-216-073-91	RES-CHIP	10K	5%	1/10W
R4450	1-216-025-11	RES-CHIP	100	5%	1/10W
R4452	1-216-025-11	RES-CHIP	100	5%	1/10W

A

REF NO.	PART NO.	DESCRIPTION		REMARK	
R4453	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4454	1-216-295-91	SHORT CHIP	0		
R4472	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R4473	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R4481	1-216-133-91	RES-CHIP	3.3M	5%	1/10W
R4482	1-164-161-11	CERAMIC CHIP	0.0022UF	10.00%	50V
R4483	1-216-105-91	RES-CHIP	220K	5%	1/10W
R4484	1-216-295-91	SHORT CHIP	0		
R4487	1-216-081-00	RES-CHIP	22K	5%	1/10W
R4488	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R4489	1-216-113-00	RES-CHIP	470K	5%	1/10W
R4490	1-208-828-11	METAL CHIP	82K	0.5%	1/10W
R4492	1-216-115-00	RES-CHIP	560K	5%	1/10W
R8301	1-216-041-00	RES-CHIP	470	5%	1/10W
R8302	1-216-041-00	RES-CHIP	470	5%	1/10W
R8303	1-216-022-00	RES-CHIP	75	5%	1/10W
R8304	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R8305	1-216-113-00	RES-CHIP	470K	5%	1/10W
R8306	1-216-022-00	RES-CHIP	75	5%	1/10W
R8307	1-216-022-00	RES-CHIP	75	5%	1/10W
R8308	1-216-105-91	RES-CHIP	220K	5%	1/10W
R8309	1-216-105-91	RES-CHIP	220K	5%	1/10W
R8310	1-216-022-00	RES-CHIP	75	5%	1/10W
R8311	1-216-105-91	RES-CHIP	220K	5%	1/10W
R8312	1-216-105-91	RES-CHIP	220K	5%	1/10W
R8313	1-216-022-00	RES-CHIP	75	5%	1/10W
R8314	1-216-105-91	RES-CHIP	220K	5%	1/10W
R8315	1-216-105-91	RES-CHIP	220K	5%	1/10W
R8316	1-216-113-00	RES-CHIP	470K	5%	1/10W
R8317	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R8318	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R8319	1-216-041-00	RES-CHIP	470	5%	1/10W
R8320	1-216-037-00	RES-CHIP	330	5%	1/10W
R8322	1-216-022-00	RES-CHIP	75	5%	1/10W
R8323	1-216-295-91	SHORT CHIP	0		
R8324	1-216-295-91	SHORT CHIP	0		
R8325	1-216-295-91	SHORT CHIP	0		
R8326	1-216-113-00	RES-CHIP	470K	5%	1/10W
R8327	1-216-295-91	SHORT CHIP	0		
R8328	1-216-113-00	RES-CHIP	470K	5%	1/10W
R8329	1-216-113-00	RES-CHIP	470K	5%	1/10W
R8330	1-216-022-00	RES-CHIP	75	5%	1/10W
R8334	1-216-295-91	SHORT CHIP	0		
R8336	1-216-295-91	SHORT CHIP	0		
R8337	1-216-022-00	RES-CHIP	75	5%	1/10W
R8338	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R8339	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R8340	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R8341	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R8342	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R8343	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R8344	1-216-022-00	RES-CHIP	75	5%	1/10W
R8345	1-216-033-00	RES-CHIP	220	5%	1/10W
R8346	1-216-031-00	RES-CHIP	180	5%	1/10W
R8347	1-216-025-11	RES-CHIP	100	5%	1/10W
R8348	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R8349	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8350	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8351	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R8352	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R8353	1-216-065-91	RES-CHIP	4.7K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION		REMARK	
R8354	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R8357	1-216-017-91	RES-CHIP	47	5%	1/10W
R8358	1-216-017-91	RES-CHIP	47	5%	1/10W
R8361	1-216-017-91	RES-CHIP	47	5%	1/10W
R8362	1-216-037-00	RES-CHIP	330	5%	1/10W
R8363	1-216-642-11	METAL CHIP	430	0.5%	1/10W
R8364	1-216-041-00	RES-CHIP	470	5%	1/10W
R8365	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R8366	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R8367	1-216-041-00	RES-CHIP	470	5%	1/10W
R8368	1-216-037-00	RES-CHIP	330	5%	1/10W
R8369	1-216-041-00	RES-CHIP	470	5%	1/10W
R8370	1-216-025-11	RES-CHIP	100	5%	1/10W
R8372	1-216-295-91	SHORT CHIP	0		
R8373	1-216-295-91	SHORT CHIP	0		
R8374	1-216-039-00	RES-CHIP	390	5%	1/10W
R8375	1-216-041-00	RES-CHIP	470	5%	1/10W
R8376	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8377	1-216-025-11	RES-CHIP	100	5%	1/10W
R8378	1-216-033-00	RES-CHIP	220	5%	1/10W
R8379	1-216-033-00	RES-CHIP	220	5%	1/10W
R8380	1-216-025-11	RES-CHIP	100	5%	1/10W
R8381	1-216-025-11	RES-CHIP	100	5%	1/10W
R8382	1-216-033-00	RES-CHIP	220	5%	1/10W
R8383	1-216-033-00	RES-CHIP	220	5%	1/10W
R8384	1-216-025-11	RES-CHIP	100	5%	1/10W
R8388	1-216-033-00	RES-CHIP	220	5%	1/10W
R8390	1-216-037-00	RES-CHIP	330	5%	1/10W
R8391	1-216-041-00	RES-CHIP	470	5%	1/10W
R8395	1-216-033-00	RES-CHIP	220	5%	1/10W
R8396	1-216-033-00	RES-CHIP	220	5%	1/10W
R8399	1-216-025-11	RES-CHIP	100	5%	1/10W
R8400	1-216-025-11	RES-CHIP	100	5%	1/10W
R8411	1-216-083-00	RES-CHIP	27K	5%	1/10W
R8414	1-216-665-11	METAL CHIP	3.9K	0.5%	1/10W
R8415	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8417	1-216-025-11	RES-CHIP	100	5%	1/10W
R8418	1-216-025-11	RES-CHIP	100	5%	1/10W
R8419	1-216-017-91	RES-CHIP	47	5%	1/10W
R8420	1-216-017-91	RES-CHIP	47	5%	1/10W
R8435	1-216-295-91	SHORT CHIP	0		
R8441	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8442	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8446	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8447	1-216-025-11	RES-CHIP	100	5%	1/10W
R8448	1-216-025-11	RES-CHIP	100	5%	1/10W
R8449	1-216-025-11	RES-CHIP	100	5%	1/10W
R8450	1-216-089-91	RES-CHIP	47K	5%	1/10W
R8451	1-216-097-11	RES-CHIP	100K	5%	1/10W
R8452	1-216-089-91	RES-CHIP	47K	5%	1/10W
R8453	1-216-097-11	RES-CHIP	100K	5%	1/10W
R8454	1-216-089-91	RES-CHIP	47K	5%	1/10W
R8455	1-216-097-11	RES-CHIP	100K	5%	1/10W
R8464	1-216-025-11	RES-CHIP	100	5%	1/10W
R8465	1-216-025-11	RES-CHIP	100	5%	1/10W
R8466	1-216-025-11	RES-CHIP	100	5%	1/10W
R8467	1-216-041-00	RES-CHIP	470	5%	1/10W
R8468	1-216-041-00	RES-CHIP	470	5%	1/10W
R8469	1-216-041-00	RES-CHIP	470	5%	1/10W
R8470	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R8471	1-216-025-11	RES-CHIP	100	5%	1/10W
R8478	1-216-089-91	RES-CHIP	47K	5%	1/10W

A B3

REF NO.	PART NO.	DESCRIPTION			REMARK
R8479	1-216-097-11	RES-CHIP	100K	5%	1/10W
R8480	1-216-073-91	RES-CHIP	10K	5%	1/10W
R8481	1-216-095-00	RES-CHIP	82K	5%	1/10W
R8482	1-216-089-91	RES-CHIP	47K	5%	1/10W
R8484	1-216-045-00	RES-CHIP	680	5%	1/10W
R8485	1-216-037-00	RES-CHIP	330	5%	1/10W
R8486	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8487	1-216-045-00	RES-CHIP	680	5%	1/10W
R8488	1-216-041-00	RES-CHIP	470	5%	1/10W
R8489	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8490	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8491	1-216-025-11	RES-CHIP	100	5%	1/10W
R8492	1-216-041-00	RES-CHIP	470	5%	1/10W
R8493	1-216-081-00	RES-CHIP	22K	5%	1/10W
R8494	1-216-041-00	RES-CHIP	470	5%	1/10W
R8495	1-216-081-00	RES-CHIP	22K	5%	1/10W
R8496	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8497	1-216-025-11	RES-CHIP	100	5%	1/10W
R8498	1-216-043-91	RES-CHIP	560	5%	1/10W
R8499	1-216-081-00	RES-CHIP	22K	5%	1/10W
R8500	1-216-033-00	RES-CHIP	220	5%	1/10W
R8501	1-216-081-00	RES-CHIP	22K	5%	1/10W
R8502	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8507	1-216-025-11	RES-CHIP	100	5%	1/10W
R8508	1-216-025-11	RES-CHIP	100	5%	1/10W
R8512	1-216-017-91	RES-CHIP	47	5%	1/10W
R8536	1-216-025-11	RES-CHIP	100	5%	1/10W
R8538	1-216-041-00	RES-CHIP	470	5%	1/10W
R8540	1-216-041-00	RES-CHIP	470	5%	1/10W
R8541	1-216-039-00	RES-CHIP	390	5%	1/10W
R8576	1-216-013-00	RES-CHIP	33	5%	1/10W
R8577	1-216-295-91	SHORT CHIP	0		
R8578	1-216-033-00	RES-CHIP	220	5%	1/10W
R8579	1-216-295-91	SHORT CHIP	0		
R8582	1-208-291-11	RES-CHIP	4.7M	5%	1/10W
R8583	1-208-291-11	RES-CHIP	4.7M	5%	1/10W
R8584	1-208-291-11	RES-CHIP	4.7M	5%	1/10W
R8587	1-216-295-91	SHORT CHIP	0		
R8588	1-216-041-00	RES-CHIP	470	5%	1/10W
R8589	1-216-041-00	RES-CHIP	470	5%	1/10W
R8590	1-216-041-00	RES-CHIP	470	5%	1/10W
		<TUNER>			
TU101	8-598-452-20	TUNER, FSS BTF-WG442 (KV-DR34M69(GE)/THAILAND)			
TU101	8-598-450-10	TUNER, FSS BTF-LG434 (KV-DR34M89)			
TU3301	8-598-450-10	TUNER, FSS BTF-LG434			
		<CRYSTAL>			
X001	1-567-928-11	VIBLATOR, CERAMIC			
X3001	1-781-922-21	VIBRATOR, CERAMIC			
X4301	1-760-895-21	VIBRATOR, CERAMIC			
X8301	1-781-612-11	VIBRATOR, CRYSTAL			

****

REF NO.	PART NO.	DESCRIPTION			REMARK
*	A-1300-290-A	B3 BOARD COMPLETE (KV-DR34M69(GE)/DR34M89)			
*	A-1300-385-A	B3 BOARD COMPLETE (KV-DR34M69(THAILAND))			
		**********			
		<CAPACITOR>			
C501	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C502	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C503	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C505	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C507	1-124-779-00	ELECT CHIP	10UF	20.00%	16V
C512	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C539	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C540	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C543	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C545	1-126-396-11	ELECT CHIP	47UF	20.00%	16V
C546	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C548	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C549	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C550	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C551	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C554	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C555	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C556	1-126-396-11	ELECT CHIP	47UF	20.00%	16V
C557	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C559	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C560	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C601	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C602	1-126-394-11	ELECT CHIP	10UF	20.00%	16V
C603	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C604	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C605	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C606	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C607	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C608	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C609	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C610	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C611	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C612	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C613	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C614	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C615	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C616	1-126-396-11	ELECT CHIP	47UF	20.00%	16V
C617	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C618	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C619	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C620	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C621	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C622	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C623	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C624	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C625	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C626	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C627	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C628	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C629	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C630	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C631	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C632	1-126-206-11	ELECT CHIP	100UF	20.00%	6.3V

B3

REF NO.	PART NO.	DESCRIPTION		REMARK	
C633	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C634	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C635	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C636	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C637	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C638	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C639	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C640	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C642	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C643	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C644	1-126-398-11	ELECT CHIP	4.7UF	20.00%	35V
C645	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C652	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C653	1-126-206-11	ELECT CHIP	100UF	20.00%	6.3V
C801	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C802	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C803	1-126-206-11	ELECT CHIP	100UF	20.00%	6.3V
C804	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C805	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C806	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C807	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C808	1-109-982-11	CERAMIC CHIP	1UF	10.00%	10V
C809	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C810	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C811	1-163-023-00	CERAMIC CHIP	0.015UF	10.00%	50V
C812	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C813	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C814	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C815	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C816	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C817	1-109-982-11	CERAMIC CHIP	1UF	10.00%	10V
C818	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C819	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C820	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C821	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C822	1-109-982-11	CERAMIC CHIP	1UF	10.00%	10V
C823	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C824	1-109-982-11	CERAMIC CHIP	1UF	10.00%	10V
C825	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C826	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C831	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
C833	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C834	1-126-204-11	ELECT CHIP	47UF	20.00%	16V
		<CONNECTOR>			
CN502	1-793-497-11	CONNECTOR, BOARD TO BOARD 40P			
		<DIODE>			
D501	8-719-082-02	DIODE MM3Z3V9T1			
D601	8-719-081-97	MMDL914T1			
D800	8-719-081-97	MMDL914T1			
		<FERRITE BEAD>			
FB501	1-414-813-11	FERRITE	0UH		
FB502	1-414-813-11	FERRITE	0UH		
FB503	1-414-813-11	FERRITE	0UH		
FB504	1-414-813-11	FERRITE	0UH		
FB601	1-414-553-11	FERRITE	0UH		
		<FILTER>			
FL501	1-233-877-11	FILTER, LOW PASS			
FL502	1-233-504-21	FILTER, LOW PASS			
FL503	1-233-504-21	FILTER, LOW PASS			
FL504	1-234-177-21	FERRITE	0UH		
FL505	1-234-177-21	FERRITE	0UH		
FL506	1-234-177-21	FERRITE	0UH		
FL601	1-234-177-21	FERRITE	0UH		
FL602	1-234-177-21	FERRITE	0UH		
FL603	1-234-177-21	FERRITE	0UH		
FL801	1-234-177-21	FERRITE	0UH		
FL901	1-234-113-21	FILTER, LOW PASS			
FL902	1-234-112-21	FILTER, LOW PASS			
FL903	1-234-112-21	FILTER, LOW PASS			
		<IC>			
IC504	8-759-669-78	TLC2933IPWR-12			
IC505	8-759-547-54	TC7SET00FU(TE85			
IC506	8-759-547-54	TC7SET00FU(TE85			
IC601	8-752-409-78	IC CXD2095AQ			
IC602	8-759-836-37	IC MT48LC1M16A1TG-6S			
IC603	8-759-669-75	TLC2932IPWR			
IC604	8-752-072-94	CXA1875AM-T4			
IC605	8-749-015-18	PQ07VZ012ZP			
IC801	6-700-188-01	IC IS41C16256-35K			
IC802	6-701-892-01	IC TC90A90F(BH,DRY)			
IC803	8-749-015-18	PQ07VZ012ZP			
		<CHIP CONDUCTOR>			
JR601	1-216-295-91	SHORT CHIP	0		
JR801	1-216-295-91	SHORT CHIP	0		
		<COIL>			
L503	1-412-026-11	INDUCTOR	1UH		
L505	1-412-029-11	INDUCTOR	10UH		
L506	1-412-026-11	INDUCTOR	1UH		
L508	1-412-029-11	INDUCTOR	10UH		
L509	1-412-029-11	INDUCTOR	10UH		
L512	1-412-026-11	INDUCTOR	1UH		
L604	1-412-029-11	INDUCTOR	10UH		
L605	1-412-029-11	INDUCTOR	10UH		
L801	1-412-026-11	INDUCTOR	1UH		
L802	1-412-026-11	INDUCTOR	1UH		
L804	1-412-026-11	INDUCTOR	1UH		
L805	1-412-026-11	INDUCTOR	1UH		
L806	1-412-026-11	INDUCTOR	1UH		
L807	1-412-026-11	INDUCTOR	1UH		
		<TRANSISTOR>			
Q501	8-729-010-05	MSB709-RT1			
Q502	8-729-120-28	2SC1623-L5L6			
Q503	8-729-120-28	2SC1623-L5L6			

B3

REF NO.	PART NO.	DESCRIPTION			REMARK
Q504	8-729-421-19	UN2213			
Q516	8-729-010-25	MSD601-RT1			
Q517	8-729-010-25	MSD601-RT1			
Q518	8-729-010-05	MSB709-RT1			
Q521	8-729-010-25	MSD601-RT1			
Q522	8-729-010-25	MSD601-RT1			
Q523	8-729-010-25	MSD601-RT1			
Q602	8-729-010-25	MSD601-RT1			
Q605	8-729-010-25	MSD601-RT1			
Q606	8-729-010-25	MSD601-RT1			
Q607	8-729-421-22	UN2211			
Q901	8-729-010-05	MSB709-RT1			
Q902	8-729-010-05	MSB709-RT1			
Q903	8-729-010-05	MSB709-RT1			
Q907	8-729-010-05	MSB709-RT1			
Q908	8-729-010-05	MSB709-RT1			
Q909	8-729-010-05	MSB709-RT1			
		<RESISTOR>			
R501	1-216-025-11	RES-CHIP	100	5%	1/10W
R502	1-216-025-11	RES-CHIP	100	5%	1/10W
R503	1-216-295-91	SHORT CHIP	0		
R504	1-216-295-91	SHORT CHIP	0		
R505	1-216-295-91	SHORT CHIP	0		
R506	1-216-025-11	RES-CHIP	100	5%	1/10W
R507	1-216-025-11	RES-CHIP	100	5%	1/10W
R513	1-216-639-11	METAL CHIP	330	0.5%	1/10W
R514	1-216-639-11	METAL CHIP	330	0.5%	1/10W
R515	1-216-639-11	METAL CHIP	330	0.5%	1/10W
R517	1-216-049-11	RES-CHIP	1K	5%	1/10W
R518	1-216-295-91	SHORT CHIP	0		
R520	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R521	1-216-295-91	SHORT CHIP	0		
R523	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R524	1-216-295-91	SHORT CHIP	0		
R526	1-208-776-11	METAL CHIP	560	0.5%	1/10W
R528	1-216-037-00	RES-CHIP	330	5%	1/10W
R529	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R530	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R531	1-216-031-00	RES-CHIP	180	5%	1/10W
R532	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R533	1-216-031-00	RES-CHIP	180	5%	1/10W
R537	1-216-643-11	METAL CHIP	470	0.5%	1/10W
R538	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R539	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W
R561	1-216-043-91	RES-CHIP	560	5%	1/10W
R562	1-216-043-91	RES-CHIP	560	5%	1/10W
R563	1-216-043-91	RES-CHIP	560	5%	1/10W
R564	1-216-049-11	RES-CHIP	1K	5%	1/10W
R598	1-216-025-11	RES-CHIP	100	5%	1/10W
R600	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R604	1-216-033-00	RES-CHIP	220	5%	1/10W
R605	1-216-295-91	SHORT CHIP	0		
R608	1-216-295-91	SHORT CHIP	0		
R609	1-216-073-91	RES-CHIP	10K	5%	1/10W
R610	1-216-033-00	RES-CHIP	220	5%	1/10W
R611	1-216-073-91	RES-CHIP	10K	5%	1/10W
R612	1-216-073-91	RES-CHIP	10K	5%	1/10W
R613	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R614	1-216-295-91	SHORT CHIP	0		
R615	1-216-089-91	RES-CHIP	47K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION			REMARK
R616	1-216-073-91	RES-CHIP	10K	5%	1/10W
R617	1-216-295-91	SHORT CHIP	0		
R619	1-216-073-91	RES-CHIP	10K	5%	1/10W
R622	1-216-295-91	SHORT CHIP	0		
R623	1-216-295-91	SHORT CHIP	0		
R624	1-216-295-91	SHORT CHIP	0		
R626	1-216-073-91	RES-CHIP	10K	5%	1/10W
R628	1-216-295-91	SHORT CHIP	0		
R629	1-216-073-91	RES-CHIP	10K	5%	1/10W
R631	1-216-295-91	SHORT CHIP	0		
R634	1-216-295-91	SHORT CHIP	0		
R635	1-216-295-91	SHORT CHIP	0		
R638	1-216-295-91	SHORT CHIP	0		
R639	1-216-017-91	RES-CHIP	47	5%	1/10W
R640	1-216-009-91	RES-CHIP	22	5%	1/10W
R642	1-216-295-91	SHORT CHIP	0		
R643	1-216-295-91	SHORT CHIP	0		
R645	1-216-295-91	SHORT CHIP	0		
R647	1-216-295-91	SHORT CHIP	0		
R648	1-208-782-11	METAL CHIP	1K	0.5%	1/10W
R650	1-211-960-11	METAL CHIP	22	0.5%	1/10W
R651	1-216-295-91	SHORT CHIP	0		
R653	1-216-025-11	RES-CHIP	100	5%	1/10W
R654	1-216-033-00	RES-CHIP	220	5%	1/10W
R655	1-216-295-91	SHORT CHIP	0		
R657	1-216-009-91	RES-CHIP	22	5%	1/10W
R658	1-216-295-91	SHORT CHIP	0		
R660	1-208-774-11	METAL CHIP	470	0.5%	1/10W
R664	1-216-295-91	SHORT CHIP	0		
R665	1-216-035-00	RES-CHIP	270	5%	1/10W
R666	1-216-646-11	METAL CHIP	620	0.5%	1/10W
R667	1-208-794-11	METAL CHIP	3.3K	0.5%	1/10W
R668	1-216-017-91	RES-CHIP	47	5%	1/10W
R671	1-216-073-91	RES-CHIP	10K	5%	1/10W
R672	1-216-073-91	RES-CHIP	10K	5%	1/10W
R673	1-216-073-91	RES-CHIP	10K	5%	1/10W
R674	1-216-073-91	RES-CHIP	10K	5%	1/10W
R675	1-216-073-91	RES-CHIP	10K	5%	1/10W
R676	1-216-073-91	RES-CHIP	10K	5%	1/10W
R677	1-216-073-91	RES-CHIP	10K	5%	1/10W
R678	1-216-073-91	RES-CHIP	10K	5%	1/10W
R679	1-216-073-91	RES-CHIP	10K	5%	1/10W
R680	1-216-073-91	RES-CHIP	10K	5%	1/10W
R681	1-216-073-91	RES-CHIP	10K	5%	1/10W
R682	1-216-073-91	RES-CHIP	10K	5%	1/10W
R683	1-216-073-91	RES-CHIP	10K	5%	1/10W
R684	1-216-073-91	RES-CHIP	10K	5%	1/10W
R685	1-216-073-91	RES-CHIP	10K	5%	1/10W
R686	1-216-073-91	RES-CHIP	10K	5%	1/10W
R690	1-216-295-91	SHORT CHIP	0		
R691	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R692	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R693	1-216-009-91	RES-CHIP	22	5%	1/10W
R694	1-216-295-91	SHORT CHIP	0		
R695	1-216-047-91	RES-CHIP	820	5%	1/10W
R696	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R697	1-216-117-00	RES-CHIP	680K	5%	1/10W
R698	1-216-117-00	RES-CHIP	680K	5%	1/10W
R699	1-216-295-91	SHORT CHIP	0		
R701	1-216-295-91	SHORT CHIP	0		
R702	1-216-295-91	SHORT CHIP	0		

B3 **BC1**

REF NO.	PART NO.	DESCRIPTION		REMARK	
R708	1-216-295-91	SHORT CHIP	0		
R709	1-216-295-91	SHORT CHIP	0		
R710	1-216-295-91	SHORT CHIP	0		
R711	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R712	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R713	1-216-295-91	SHORT CHIP	0		
R714	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R715	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R716	1-216-295-91	SHORT CHIP	0		
R717	1-216-073-91	RES-CHIP	10K	5%	1/10W
R718	1-216-073-91	RES-CHIP	10K	5%	1/10W
R801	1-216-025-11	RES-CHIP	100	5%	1/10W
R802	1-216-025-11	RES-CHIP	100	5%	1/10W
R804	1-216-025-11	RES-CHIP	100	5%	1/10W
R806	1-216-025-11	RES-CHIP	100	5%	1/10W
R807	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R808	1-216-295-91	SHORT CHIP	0		
R810	1-216-295-91	SHORT CHIP	0		
R812	1-216-125-00	RES-CHIP	1.5M	5%	1/10W
R813	1-216-295-91	SHORT CHIP	0		
R814	1-216-025-11	RES-CHIP	100	5%	1/10W
R815	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R817	1-208-788-11	METAL CHIP	1.8K	0.5%	1/10W
R818	1-208-782-11	METAL CHIP	1K	0.5%	1/10W
R820	1-216-295-91	SHORT CHIP	0		
R822	1-216-025-11	RES-CHIP	100	5%	1/10W
R825	1-216-295-91	SHORT CHIP	0		
R830	1-216-049-11	RES-CHIP	1K	5%	1/10W
R832	1-216-295-91	SHORT CHIP	0		
R834	1-216-025-11	RES-CHIP	100	5%	1/10W
R907	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R908	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R909	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R910	1-216-049-11	RES-CHIP	1K	5%	1/10W
R911	1-216-049-11	RES-CHIP	1K	5%	1/10W
R912	1-216-049-11	RES-CHIP	1K	5%	1/10W
R942	1-216-037-00	RES-CHIP	330	5%	1/10W
R943	1-216-033-00	RES-CHIP	220	5%	1/10W
R957	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R958	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R959	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R960	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R961	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R962	1-216-635-11	METAL CHIP	220	0.5%	1/10W
R981	1-216-037-00	RES-CHIP	330	5%	1/10W
R982	1-216-037-00	RES-CHIP	330	5%	1/10W
R983	1-216-089-91	RES-CHIP	47K	5%	1/10W
R984	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R985	1-216-113-00	RES-CHIP	470K	5%	1/10W
R986	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R987	1-216-049-11	RES-CHIP	1K	5%	1/10W
R988	1-216-033-00	RES-CHIP	220	5%	1/10W
R989	1-216-081-00	RES-CHIP	22K	5%	1/10W
R990	1-216-113-00	RES-CHIP	470K	5%	1/10W
R991	1-216-295-91	SHORT CHIP	0		
R993	1-216-089-91	RES-CHIP	47K	5%	1/10W
RB019	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB020	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB021	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB022	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB023	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB024	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB025	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB026	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB027	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB801	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB802	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB803	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB804	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB805	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB806	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB807	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB808	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB809	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB810	1-239-409-11	NETWORK RESISTOR (CHIP) 47			
RB811	1-239-409-11	NETWORK RESISTOR (CHIP) 47			

****

* A-1300-298-A BC1 BOARD COMPLETE
(KV-DR34M69(GE)/DR34M89)

* A-1300-388-A BC1 BOARD COMPLETE
(KV-DR34M69(THAILAND))

****

<CAPACITOR>

C2001	1-126-947-11	ELECT	47UF	20.00%	16V
C2002	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C2003	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2004	1-107-698-11	ELECT	10UF	20.00%	25V
C2005	1-163-131-00	CERAMIC CHIP	390PF	5.00%	50V
C2006	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2007	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2008	1-104-665-11	ELECT	100UF	20.00%	10V
C2009	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2010	1-163-102-00	CERAMIC CHIP	24PF	5.00%	50V
C2011	1-163-102-00	CERAMIC CHIP	24PF	5.00%	50V
C2012	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2013	1-126-947-11	ELECT	47UF	20.00%	16V
C2014	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2016	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2018	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2019	1-126-947-11	ELECT	47UF	20.00%	16V
C2021	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2022	1-126-947-11	ELECT	47UF	20.00%	16V
C2023	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2024	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2025	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2026	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2027	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2028	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2029	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2030	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2032	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2033	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2034	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2035	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2036	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2037	1-126-947-11	ELECT	47UF	20.00%	16V

BC1

REF NO.	PART NO.	DESCRIPTION		REMARK	
C2038	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2039	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2040	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2041	1-126-947-11	ELECT	47UF	20.00%	16V
C2044	1-104-665-11	ELECT	100UF	20.00%	10V
C2045	1-163-106-00	CERAMIC CHIP	36PF	5.00%	50V
C2046	1-126-964-11	ELECT	10UF	20.00%	50V
C2047	1-164-505-11	CERAMIC CHIP	2.2UF		16V
C2048	1-126-964-11	ELECT	10UF	20.00%	50V
C2049	1-126-960-11	ELECT	1UF	20.00%	50V
C2050	1-163-231-11	CERAMIC CHIP	15PF	5.00%	50V
C2051	1-126-964-11	ELECT	10UF	20.00%	50V
C2052	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C2053	1-109-889-11	ELECT	1UF	20.00%	50V
C2054	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2055	1-126-947-11	ELECT	47UF	20.00%	16V
C2056	1-163-231-11	CERAMIC CHIP	15PF	5.00%	50V
C2058	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2063	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2064	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2066	1-126-947-11	ELECT	47UF	20.00%	16V
C2072	1-163-237-11	CERAMIC CHIP	27PF	5.00%	50V
C2074	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2075	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2078	1-126-947-11	ELECT	47UF	20.00%	16V
C2079	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2081	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2096	1-163-231-11	CERAMIC CHIP	15PF	5.00%	50V
C2097	1-163-231-11	CERAMIC CHIP	15PF	5.00%	50V
C2100	1-163-038-91	CERAMIC CHIP	0.1UF		25V
C2101	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2103	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2104	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2105	1-163-031-91	CERAMIC CHIP	0.01UF		50V
C2300	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2301	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2302	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2303	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2304	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2305	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2306	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C2307	1-126-933-11	ELECT	100UF	20.00%	16V
C2308	1-107-823-11	CERAMIC CHIP	0.47UF	10.00%	16V
C2309	1-126-947-11	ELECT	47UF	20.00%	16V
C2310	1-126-947-11	ELECT	47UF	20.00%	16V
C2312	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2313	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2314	1-163-007-11	CERAMIC CHIP	680PF	10.00%	50V
C2315	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C2316	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C2317	1-126-933-11	ELECT	100UF	20.00%	16V
C2318	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2319	1-163-235-11	CERAMIC CHIP	22PF	5.00%	50V
C2320	1-163-229-11	CERAMIC CHIP	12PF	5.00%	50V
C2321	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2322	1-163-235-11	CERAMIC CHIP	22PF	5.00%	50V
C2323	1-163-229-11	CERAMIC CHIP	12PF	5.00%	50V
C2324	1-126-947-11	ELECT	47UF	20.00%	16V
C2326	1-126-947-11	ELECT	47UF	20.00%	16V
C2327	1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C2330	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V
C2331	1-163-021-91	CERAMIC CHIP	0.01UF	10.00%	50V

REF NO.	PART NO.	DESCRIPTION	REMARK
		<CONNECTOR>	
CN2001	1-793-496-11	CONNECTOR, BOARD TO BOARD 20P	
		<FERRITE BEAD>	
FB2001	1-414-234-22	FERRITE	0UH
FB2002	1-414-234-22	FERRITE	0UH
FB2008	1-414-234-22	FERRITE	0UH
FB2010	1-414-234-22	FERRITE	0UH
FB2011	1-414-234-22	FERRITE	0UH
FB2012	1-414-234-22	FERRITE	0UH
FB2014	1-414-234-22	FERRITE	0UH
FB2015	1-414-234-22	FERRITE	0UH
FB2016	1-216-295-91	SHORT CHIP	0
FB2017	1-216-295-91	SHORT CHIP	0
		<FILTER>	
FL2000	1-236-071-11	ENCAPSULATED COMPONENT	
FL2001	1-239-848-11	FILTER, LOW PASS	
FL2002	1-239-848-11	FILTER, LOW PASS	
FL2003	1-239-848-11	FILTER, LOW PASS	
FL2004	1-239-848-11	FILTER, LOW PASS	
		<IC>	
IC2001	6-700-394-01	IC BA25BC0FP-E2	
IC2004	6-700-960-01	IC UPD64083GF-3BA	
IC2005	8-759-460-72	BA033FP-E2	
IC2300	6-701-972-01	IC TC90A69F (ELP)	
		<COIL>	
L2001	1-410-200-31	INDUCTOR	4.7UH
L2002	1-412-058-11	INDUCTOR	10UH
L2003	1-412-058-11	INDUCTOR	10UH
L2005	1-412-058-11	INDUCTOR	10UH
L2006	1-412-058-11	INDUCTOR	10UH
L2007	1-412-058-11	INDUCTOR	10UH
L2008	1-412-058-11	INDUCTOR	10UH
L2300	1-412-058-11	INDUCTOR	10UH
L2301	1-412-031-11	INDUCTOR	47UH
L2302	1-412-031-11	INDUCTOR	47UH
L2303	1-412-031-11	INDUCTOR	47UH
L2304	1-410-514-11	INDUCTOR	27UH
L2305	1-410-514-11	INDUCTOR	27UH
L2306	1-412-058-11	INDUCTOR	10UH
L2307	1-412-026-11	INDUCTOR	1UH
		<TRANSISTOR>	
Q2002	8-729-026-49	2SA1037AK-T146-R	
Q2003	8-729-026-49	2SA1037AK-T146-R	
Q2004	8-729-026-49	2SA1037AK-T146-R	
Q2005	8-729-010-25	MSD601-RT1	
Q2006	8-729-010-25	MSD601-RT1	
Q2007	8-729-010-25	MSD601-RT1	
Q2008	8-729-010-25	MSD601-RT1	
Q2009	8-729-010-25	MSD601-RT1	
Q2010	8-729-010-25	MSD601-RT1	
Q2011	8-729-010-25	MSD601-RT1	
Q2012	8-729-026-49	2SA1037AK-T146-R	
Q2013	8-729-026-49	2SA1037AK-T146-R	

BC1 C

REF NO.	PART NO.	DESCRIPTION			REMARK
Q2014	8-729-010-25	MSD601-RT1			
Q2015	8-729-010-25	MSD601-RT1			
Q2016	8-729-010-25	MSD601-RT1			
Q2018	8-729-026-49	2SA1037AK-T146-R			
Q2019	8-729-010-25	MSD601-RT1			
Q2301	8-729-026-49	2SA1037AK-T146-R			
Q2302	8-729-010-25	MSD601-RT1			
Q2303	8-729-010-25	MSD601-RT1			
Q2304	8-729-026-49	2SA1037AK-T146-R			
Q2305	8-729-010-25	MSD601-RT1			
Q2306	8-729-010-25	MSD601-RT1			
Q2307	8-729-010-25	MSD601-RT1			
Q2308	8-729-026-49	2SA1037AK-T146-R			
Q2309	8-729-010-25	MSD601-RT1			
		<RESISTOR>			
R2001	1-216-073-91	RES-CHIP	10K	5%	1/10W
R2002	1-216-295-91	SHORT CHIP	0		
R2004	1-216-295-91	SHORT CHIP	0		
R2005	1-216-295-91	SHORT CHIP	0		
R2011	1-216-041-00	RES-CHIP	470	5%	1/10W
R2012	1-216-073-91	RES-CHIP	10K	5%	1/10W
R2015	1-216-041-00	RES-CHIP	470	5%	1/10W
R2021	1-216-025-11	RES-CHIP	100	5%	1/10W
R2027	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2028	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2029	1-216-043-91	RES-CHIP	560	5%	1/10W
R2030	1-216-043-91	RES-CHIP	560	5%	1/10W
R2031	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R2032	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R2033	1-216-037-00	RES-CHIP	330	5%	1/10W
R2034	1-216-037-00	RES-CHIP	330	5%	1/10W
R2035	1-216-043-91	RES-CHIP	560	5%	1/10W
R2036	1-216-644-11	METAL CHIP	510	0.5%	1/10W
R2037	1-216-045-00	RES-CHIP	680	5%	1/10W
R2039	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R2040	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R2041	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R2042	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R2043	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R2044	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R2046	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R2047	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R2048	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2049	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R2050	1-216-017-91	RES-CHIP	47	5%	1/10W
R2051	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2052	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2053	1-216-041-00	RES-CHIP	470	5%	1/10W
R2054	1-216-041-00	RES-CHIP	470	5%	1/10W
R2055	1-216-017-91	RES-CHIP	47	5%	1/10W
R2056	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R2057	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2058	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R2059	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2060	1-216-025-11	RES-CHIP	100	5%	1/10W
R2061	1-216-043-91	RES-CHIP	560	5%	1/10W
R2062	1-216-105-91	RES-CHIP	220K	5%	1/10W
R2063	1-216-089-91	RES-CHIP	47K	5%	1/10W
R2064	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2066	1-216-033-00	RES-CHIP	220	5%	1/10W

REF NO.	PART NO.	DESCRIPTION			REMARK
R2067	1-216-043-91	RES-CHIP	560	5%	1/10W
R2069	1-216-639-11	METAL CHIP	330	0.5%	1/10W
R2070	1-216-641-11	METAL CHIP	390	0.5%	1/10W
R2071	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R2072	1-216-043-91	RES-CHIP	560	5%	1/10W
R2073	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2074	1-216-025-11	RES-CHIP	100	5%	1/10W
R2076	1-216-025-11	RES-CHIP	100	5%	1/10W
R2077	1-216-025-11	RES-CHIP	100	5%	1/10W
R2108	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2115	1-216-041-00	RES-CHIP	470	5%	1/10W
R2301	1-216-041-00	RES-CHIP	470	5%	1/10W
R2306	1-216-039-00	RES-CHIP	390	5%	1/10W
R2307	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2308	1-216-047-91	RES-CHIP	820	5%	1/10W
R2309	1-216-051-00	RES-CHIP	1.2K	5%	1/10W
R2310	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R2311	1-216-075-00	RES-CHIP	12K	5%	1/10W
R2312	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2313	1-216-295-91	SHORT CHIP	0		
R2314	1-216-039-00	RES-CHIP	390	5%	1/10W
R2315	1-216-041-00	RES-CHIP	470	5%	1/10W
R2317	1-216-025-11	RES-CHIP	100	5%	1/10W
R2318	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2319	1-216-047-91	RES-CHIP	820	5%	1/10W
R2320	1-216-051-00	RES-CHIP	1.2K	5%	1/10W
R2321	1-216-075-00	RES-CHIP	12K	5%	1/10W
R2322	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R2323	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2324	1-216-041-00	RES-CHIP	470	5%	1/10W
R2325	1-216-041-00	RES-CHIP	470	5%	1/10W
R2326	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2327	1-216-017-91	RES-CHIP	47	5%	1/10W
R2328	1-216-017-91	RES-CHIP	47	5%	1/10W
R2330	1-216-037-00	RES-CHIP	330	5%	1/10W
R2331	1-216-295-91	SHORT CHIP	0		
R2333	1-216-025-11	RES-CHIP	100	5%	1/10W
R2334	1-216-049-11	RES-CHIP	1K	5%	1/10W
R2335	1-414-234-22	FERRITE	0UH		
		<VARIABLE RESISTOR>			
RV2001	1-223-271-21	RES, ADJ, CERMET 220			
		<CRYSTAL>			
X2001	1-767-606-11	VIBRATOR, CRYSTAL			
**********					
*	A-1400-587-A	C BOARD MOUNTED (KV-DR34M69(GE)/DR34M89)			
*	A-1400-845-A	C BOARD MOUNTED (KV-DR34M69(THAILAND))			
		**********			
	4-382-854-01	SCREW (M3X8), P, SW (+)			
		<CAPACITOR>			
C9002	1-163-087-00	CERAMIC CHIP	4PF	0.25PF 50V	
C9003	1-163-087-00	CERAMIC CHIP	4PF	0.25PF 50V	

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

C

REF NO.	PART NO.	DESCRIPTION			REMARK
C9004	1-115-350-51	CERAMIC	0.0047UF		2KV
C9005	1-163-087-00	CERAMIC CHIP	4PF	0.25PF	50V
C9006	1-163-091-00	CERAMIC CHIP	8PF	0.25PF	50V
C9007	1-163-091-00	CERAMIC CHIP	8PF	0.25PF	50V
C9008	1-163-091-00	CERAMIC CHIP	8PF	0.25PF	50V
C9009	1-163-087-00	CERAMIC CHIP	4PF	0.25PF	50V
C9010	1-163-087-00	CERAMIC CHIP	4PF	0.25PF	50V
C9011	1-136-207-11	MYLAR	0.047UF	10.00%	250V
C9012	1-136-207-11	MYLAR	0.047UF	10.00%	250V
C9014	1-136-207-11	MYLAR	0.047UF	10.00%	250V
C9015	1-163-087-00	CERAMIC CHIP	4PF	0.25PF	50V
C9016	1-102-110-00	CERAMIC	220PF	10.00%	50V
C9018	1-107-961-91	ELECT	10UF	20.00%	250V
C9019	1-163-035-00	CERAMIC CHIP	0.047UF		50V
C9020	1-107-961-91	ELECT	10UF	20.00%	250V
C9021	1-107-961-91	ELECT	10UF	20.00%	250V
C9022	1-101-004-00	CERAMIC	0.01UF		50V
C9023	1-101-004-00	CERAMIC	0.01UF		50V
C9024	1-163-035-00	CERAMIC CHIP	0.047UF		50V
C9025	1-126-934-11	ELECT	220UF	20.00%	16V
C9026	1-163-035-00	CERAMIC CHIP	0.047UF		50V
C9027	1-101-004-00	CERAMIC	0.01UF		50V
C9028	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C9029	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C9030	1-163-017-00	CERAMIC CHIP	0.0047UF	10.00%	50V
C9031	1-115-350-51	CERAMIC	0.0047UF		2KV
C9032	1-162-116-00	CERAMIC	680PF	10.00%	2KV
C9033	1-107-662-11	ELECT	22UF	20.00%	250V
C9035	1-115-350-51	CERAMIC	0.0047UF		2KV
C9042	1-126-940-11	ELECT	330UF	20.00%	25V
C9047	1-107-651-11	ELECT	4.7UF	20.00%	250V
		<CONNECTOR>			
CN9001 *	1-564-512-11	PLUG, CONNECTOR 9P			
CN9002	1-691-765-11	PLUG (MICRO CONNECTOR) 3P (KV-DR34M69(GE)/DR34M89)			
CN9002 *	1-564-507-11	PLUG, CONNECTOR 4P (KV-DR34M69(THAILAND))			
CN9003	1-695-915-11	TAB (CONTACT)			
CN9004	1-695-915-11	TAB (CONTACT)			
CN9007	1-785-879-11	CONNECTOR, ONE TOUCH			
		<DIODE>			
D9002	8-719-400-75	MA3091			
D9005	8-719-081-97	MMDL914T1			
D9006	8-719-051-85	HSS83TD			
D9007	8-719-051-85	HSS83TD			
D9008	8-719-051-85	HSS83TD			
D9009	8-719-908-03	GP08D			
D9010	8-719-110-17	RD10ESB2			
D9011	1-216-295-91	SHORT CHIP	0		
D9012	1-216-295-91	SHORT CHIP	0		
D9013	8-719-081-97	MMDL914T1			
		<IC>			
IC9001	8-759-360-83	TDA6111Q/N4			
IC9002	8-759-360-83	TDA6111Q/N4			
IC9003	8-759-360-83	TDA6111Q/N4			

REF NO.	PART NO.	DESCRIPTION			REMARK
		<JACK>			
J9001	⚠ 1-540-071-22	SOCKET, CRT			
		<COIL>			
L9001	1-414-158-11	INDUCTOR	2.2UH		
L9002	1-408-591-11	INDUCTOR	1UH		
L9003	1-408-591-11	INDUCTOR	1UH		
L9004	1-408-591-11	INDUCTOR	1UH		
L9005	1-406-666-21	INDUCTOR	150UH		
L9006	1-412-526-11	INDUCTOR	12UH		
		<FILTER>			
LP9001 *	4-042-408-01	PIN, COATING LEAD			
LP9002 *	4-042-408-01	PIN, COATING LEAD			
LP9003 *	4-042-408-01	PIN, COATING LEAD			
LP9004 *	4-042-408-01	PIN, COATING LEAD			
		<NEON LAMP>			
NL9001	1-517-778-21	LAMP, NEON			
NL9003	1-517-778-21	LAMP, NEON			
		<TRANSISTOR>			
Q9001	8-729-026-49	2SA1037AK-T146-R (KV-DR34M69(GE)/DR34M89)			
Q9001	8-729-010-05	MSB709-RT1 (KV-DR34M69(THAILAND))			
Q9009	8-729-026-49	2SA1037AK-T146-R (KV-DR34M69(GE)/DR34M89)			
Q9009	8-729-010-05	MSB709-RT1 (KV-DR34M69(THAILAND))			
Q9010	8-729-026-49	2SA1037AK-T146-R (KV-DR34M69(GE)/DR34M89)			
Q9010	8-729-010-05	MSB709-RT1 (KV-DR34M69(THAILAND))			
Q9011	8-729-026-49	2SA1037AK-T146-R (KV-DR34M69(GE)/DR34M89)			
Q9011	8-729-010-05	MSB709-RT1 (KV-DR34M69(THAILAND))			
		<RESISTOR>			
R9001	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R9004	1-216-117-00	RES-CHIP	680K	5%	1/10W
R9006	1-216-073-91	RES-CHIP	10K	5%	1/10W
R9007	1-208-789-11	METAL CHIP	2K	0.5%	1/10W
R9008	1-216-085-91	RES-CHIP	33K	5%	1/10W
R9012	1-216-049-11	RES-CHIP	1K	5%	1/10W
R9013	1-216-049-11	RES-CHIP	1K	5%	1/10W
R9018	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R9019	1-216-059-00	RES-CHIP	2.7K	5%	1/10W
R9021	1-216-295-91	SHORT CHIP	0		
R9023	1-216-295-91	SHORT CHIP	0		
R9026	1-208-789-11	METAL CHIP	2K	0.5%	1/10W
R9031	1-208-789-11	METAL CHIP	2K	0.5%	1/10W
R9033	1-208-808-11	METAL CHIP	12K	0.5%	1/10W
R9034	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R9035	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R9036	1-216-049-11	RES-CHIP	1K	5%	1/10W
R9037	1-240-233-71	METAL OXIDE	100	5%	3W
R9038	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R9039	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

C D

REF NO.	PART NO.	DESCRIPTION			REMARK
R9041	1-216-049-11	RES-CHIP	1K	5%	1/10W
R9042	1-216-049-11	RES-CHIP	1K	5%	1/10W
R9043	1-240-233-71	METAL OXIDE	100	5%	3W
R9044	1-240-233-71	METAL OXIDE	100	5%	3W
R9047	1-219-744-11	CARBON	220	5%	1/2W
R9048	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R9049	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R9050	1-249-424-11	CARBON	3.9K	5%	1/4W
R9051	1-219-744-11	CARBON	220	5%	1/2W
R9052	1-219-744-11	CARBON	220	5%	1/2W
R9053	1-249-424-11	CARBON	3.9K	5%	1/4W
R9054	1-249-424-11	CARBON	3.9K	5%	1/4W
R9055	1-243-994-91	CEMENTED	820K	5%	0.5W
R9056	1-219-750-91	CARBON	22K	5%	1/2W
R9057	1-220-827-91	RESISTOR	560K	5%	1/2W
R9058	1-243-994-91	CEMENTED	820K	5%	0.5W
R9059	1-219-746-11	CARBON	1K	5%	1/2W
R9061	1-219-743-11	CARBON	100	5%	1/2W
R9065	1-216-069-00	RES-CHIP	6.8K	5%	1/10W
R9068	1-216-101-00	RES-CHIP	150K	5%	1/10W
R9069	1-219-743-11	CARBON	100	5%	1/2W
R9070	1-216-037-00	RES-CHIP	330	5%	1/10W
R9071	1-216-037-00	RES-CHIP	330	5%	1/10W
R9072	1-216-037-00	RES-CHIP	330	5%	1/10W
R9073	1-216-057-00	RES-CHIP	2.2K	5%	1/10W

<VARIABLE RESISTOR>

RV9001	1-241-656-11	RES, ADJ, METAL FILM 110M
RV9002	1-230-641-11	RES, ADJ, METAL GLAZE 2.2M

****

*	A-1300-534-A	D BOARD COMPLETE (KV-DR34M69(GE)/DR34M89)
*	A-1300-452-A	D BOARD COMPLETE (KV-DR34M69(THAILAND))
		**********
*	4-363-146-00	HEAT SINK, V.OUT (KV-DR34M69(GE)/DR34M89)
*	4-374-846-01	COVER, CAPACITOR, CAP TYPE (KV-DR34M69(GE)/DR34M89)
	4-382-854-11	SCREW (M3X10), P, SW (+)
	4-382-854-21	SCREW (M3X14), P, SW (+)

<CAPACITOR>

C6100	1-161-830-00	CERAMIC	0.0047UF	99%	500V
C6101	1-107-680-91	ELECT	22UF	20.00%	450V
C6102	1-161-830-00	CERAMIC	0.0047UF	99%	500V
C6103	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C6104	1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C6105	1-115-339-11	CERAMIC CHIP	0.1UF	10.00%	50V
C6106	1-162-962-11	CERAMIC CHIP	470PF	10.00%	50V
C6107	1-137-605-11	MYLAR	0.01UF	10.00%	250V
C6108	1-161-830-00	CERAMIC	0.0047UF	99%	500V
C6109	1-126-971-11	ELECT	470UF	20.00%	50V
C6110	1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C6111	1-161-830-00	CERAMIC	0.0047UF	99%	500V
C6113	1-126-965-91	ELECT	22UF	20.00%	50V
C6334	1-126-940-11	ELECT	330UF	20.00%	25V
C6600	1-128-550-11	ELECT	2200UF	20.00%	50V

REF NO.		PART NO.	DESCRIPTION			REMARK
C6601		1-126-967-11	ELECT	47UF	20.00%	50V
C6602		1-129-720-00	FILM	0.033UF	5.00%	630V
C6603		1-126-949-11	ELECT	220UF	20.00%	35V
C6604		1-126-934-11	ELECT	220UF	20.00%	16V
C6606		1-162-927-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	100PF	5.00%	50V
C6607	⚠	1-119-892-51	CERAMIC	470PF	10.00%	250V
C6608	⚠	1-119-892-51	CERAMIC	470PF	10.00%	250V
C6609		1-126-960-11	ELECT (KV-DR34M69(GE)/DR34M89)	1UF	20.00%	50V
C6610		1-162-927-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	100PF	5.00%	50V
C6611		1-115-416-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.001UF	5.00%	25V
C6612		1-126-964-11	ELECT	10UF	20.00%	50V
C6613		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C6614		1-161-830-00	CERAMIC	0.0047UF		500V
C6615		1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C6616		1-126-961-11	ELECT	2.2UF	20.00%	50V
C6617		1-161-830-00	CERAMIC	0.0047UF		500V
C6618		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	16V
C6619		1-161-830-00	CERAMIC	0.0047UF	99%	500V
C6620		1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	16V
C6621		1-131-940-11	ELECT (KV-DR34M69(GE)/DR34M89)	1200UF	20%	250V
C6622		1-131-940-11	ELECT (KV-DR34M69(GE)/DR34M89)	1200UF	20%	250V
C6624		1-126-966-11	ELECT	33UF	20.00%	50V
C6629		1-125-906-11	ELECT (KV-DR34M69(THAILAND)	560UF	20.00%	450V
C6633		1-136-479-11	FILM	0.001UF	2.00%	50V
C6634		1-126-964-11	ELECT	10UF	20.00%	50V
C6635		1-126-963-11	ELECT	4.7UF	20.00%	50V
C6637		1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6645		1-163-009-91	CERAMIC CHIP	0.001UF	10.00%	50V
C6647		1-126-964-11	ELECT	10UF	20.00%	50V
C6648		1-125-969-91	CERAMIC	680PF	10.00%	1KV
C6649		1-125-969-91	CERAMIC	680PF	10.00%	1KV
C6650		1-125-969-91	CERAMIC	680PF	10.00%	1KV
C6651		1-125-969-91	CERAMIC	680PF	10.00%	1KV
C6652		1-110-626-11	ELECT	330UF	20.00%	160V
C6653		1-136-287-11	MYLAR	0.0047UF	5.00%	50V
C6654		1-126-936-11	ELECT	3300UF	20.00%	16V
C6655		1-126-936-11	ELECT	3300UF	20.00%	16V
C6656		1-136-165-00	FILM	0.1UF	5.00%	50V
C6658		1-104-330-91	CERAMIC	470PF	10.00%	1KV
C6660		1-126-960-11	ELECT	1UF	20.00%	50V
C6661		1-126-947-11	ELECT	47UF	20.00%	16V
C6662		1-126-947-11	ELECT	47UF	20.00%	16V
C6665		1-126-964-11	ELECT	10UF	20.00%	50V
C6666		1-137-150-11	MYLAR	0.01UF	5.00%	50V
C6668		1-126-947-11	ELECT	47UF	20.00%	25V
C6669		1-125-969-91	CERAMIC	680PF	10.00%	1KV
C6670		1-125-969-91	CERAMIC	680PF	10.00%	1KV
C6672		1-135-946-21	FILM	47000PF	3%	800V
C6673		1-136-189-00	MYLAR	0.1UF	10.00%	250V
C6674		1-128-527-11	ELECT	330UF	20.00%	25V
C6679		1-107-823-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.47UF	10.00%	16V
C6679		1-113-619-11	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.47UF		10V
C6800		1-102-129-00	CERAMIC	0.01UF	10.00%	50V
C6801		1-126-947-11	ELECT	47UF	20.00%	16V
C6802		1-162-974-11	CERAMIC CHIP	0.01UF		50V

D

REF NO.	PART NO.	DESCRIPTION		REMARK	
C6805	1-111-087-11	ELECT	330UF	20.00%	25V
C6806	1-107-933-11	ELECT	100UF	20.00%	100V
C6808	1-137-401-11	MYLAR	0.22UF	10.00%	100V
C6809	1-102-074-00	CERAMIC	0.001UF	10.00%	50V
C6810	1-106-220-00	MYLAR	0.1UF	10.00%	100V
C6811	1-111-087-11	ELECT	330UF	20.00%	25V
C6813	1-126-935-11	ELECT	470UF	20.00%	16V
C6814	1-125-889-91	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	2.2UF	10%	10V
C6814	1-135-834-91	CERAMIC CHIP (KV-DR34M69(THAILAND))	2.2E+06PF	6.3V	
C6816	1-137-577-11	FILM	0.068UF	5.00%	400V
C6818	1-126-960-11	ELECT	1UF	20.00%	50V
C6819	1-126-960-11	ELECT	1UF	20.00%	50V
C6820	1-102-114-00	CERAMIC	470PF	10.00%	50V
C6821	1-106-383-00	MYLAR	0.047UF	10.00%	200V
C6822	1-102-114-00	CERAMIC	470PF	10.00%	50V
C6823	1-106-383-00	MYLAR	0.047UF	10.00%	200V
C6826	1-102-030-00	CERAMIC	330PF	10.00%	500V
C6827	1-102-030-00	CERAMIC	330PF	10.00%	500V
C6829	1-104-332-11	CERAMIC	470PF	10.00%	2KV
C6830	1-117-619-11	FILM	1000PF	3.00%	1.2KV
C6831	1-117-838-11	FILM	8200PF	3.00%	1.5KV
C6832	1-117-842-11	FILM	12000PF	3.00%	1.5KV
C6836	1-127-681-11	FILM	10000PF	2%	100V
C6837	1-125-893-11	FILM	680PF	3.00%	1.5KV
C6838	1-125-893-11	FILM	680PF	3.00%	1.5KV
C6839	1-126-933-11	ELECT	100UF	20.00%	16V
C6840	1-126-933-11	ELECT	100UF	20.00%	16V
C6841	1-115-511-11	FILM	0.12UF	5.00%	250V
C6842	1-115-521-11	FILM	0.82UF	5.00%	250V
C6843	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6844	1-115-339-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.1UF	10.00%	50V
C6844	1-164-156-11	CERAMIC CHIP (KV-DR34M69(THAILAND)	0.1UF		25V
C6845	1-117-664-11	FILM	0.27UF	5.00%	250V
C6846	1-115-514-11	FILM	0.22UF	5.00%	250V
C6848	1-113-979-51	FILM	0.047UF	5%	250V
C6849	1-115-339-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.1UF	10.00%	50V
C6849	1-164-156-11	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.1UF		25V
C6850	1-115-339-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.1UF	10.00%	50V
C6850	1-164-156-11	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.1UF		25V
C6851	1-107-639-11	ELECT	47UF	20.00%	160V
C6853	1-102-228-00	CERAMIC	470PF	10.00%	500V
C6854	1-126-941-11	ELECT	470UF	20.00%	25V
C6855	1-123-024-21	ELECT	33UF		160V
C6856	1-126-971-11	ELECT	470UF	20.00%	50V
C6857	1-102-228-00	CERAMIC	470PF	10.00%	500V
C6858	1-102-228-00	CERAMIC	470PF	10.00%	500V
C6859	1-162-129-00	CERAMIC	150PF	10.00%	2KV
C6860	1-162-129-00	CERAMIC	150PF	10.00%	2KV
C6862	1-130-202-00	FILM	0.022UF	5.00%	200V
C6864	1-129-898-00	FILM	0.0022UF	5.00%	630V
C6865	1-130-202-00	FILM	0.022UF	5.00%	400V
C6866	1-102-030-00	CERAMIC	330PF	10.00%	500V
C6867	1-130-785-11	MYLAR	0.47UF	10.00%	100V
C6868	1-162-974-11	CERAMIC CHIP	0.01UF		50V
C6869	1-107-882-91	ELECT	100UF	20.00%	16V

REF NO.	PART NO.	DESCRIPTION		REMARK	
C6870	1-128-528-11	ELECT	470UF	20.00%	25V
C6879	1-107-960-11	ELECT	4.7UF	20.00%	160V
C6882	1-115-350-51	CERAMIC	0.0047UF		2KV
C6884	1-125-889-91	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	2.2UF	10%	10V
C6884	1-135-834-91	CERAMIC CHIP (KV-DR34M69(THAILAND))	2.2E+06PF	6.3V	
C6886	1-126-964-11	ELECT	10UF	20.00%	50V
C6888	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6889	1-109-844-11	FILM	0.68UF	5.00%	250V

<CONNECTOR>

CN6602	*	1-508-786-00	PIN, CONNECTOR (5MM PITCH) 2P (KV-DR34M69(GE)/DR34M89)
CN6603	*	1-573-963-11	PIN, CONNECTOR (PC BOARD) 3P
CN6604		1-580-843-11	PIN, CONNECTOR (POWER)
CN6605	*	1-764-333-11	PLUG, CONNECTOR 10P
CN6606	*	1-764-333-11	PLUG, CONNECTOR 10P
CN6609	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN6610	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN6611	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN6612	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN6613	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN6614	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN6615	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN6616	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN6618	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN6619		1-564-507-41	PLUG, CONNECTOR 4P
CN6801	*	1-785-270-12	PIN, DY CONNECTOR (PC BOARD)
CN6802	*	1-764-333-11	PLUG, CONNECTOR 10P
CN6803		1-793-495-11	CONNECTOR, BOARD TO BOARD 50P
CN6805		1-695-915-11	TAB (CONTACT)
CN6806		1-764-334-11	PLUG, CONNECTOR 11P
CN6809		1-695-915-11	TAB (CONTACT)
CN6810		1-785-879-11	CONNECTOR, ONE TOUCH
CN6811	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P
CN6812	*	1-508-784-21	PIN, CONNECTOR (5MM PITCH) 1P

<DIODE>

D6100	8-719-077-76	D2SB60A-F04
D6101	8-719-110-49	RD18ES-B2
D6102	8-719-082-03	DIODE MM3Z15VT1
D6103	8-719-081-97	MMDL914T1
D6104	8-719-510-48	D1N20R
D6105	8-719-948-45	ERA22-08
D6108	8-719-063-73	DIODE D1NL20U-TR
D6323	8-719-032-12	D1NS6
D6601	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND)
D6601	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)
D6602	8-719-081-97	MMDL914T1 (KV-DR34M69(GE)/DR34M89)
D6603	8-719-081-97	MMDL914T1 (KV-DR34M69(GE)/DR34M89)
D6604	8-719-081-97	MMDL914T1 (KV-DR34M69(GE)/DR34M89)
D6605	8-719-510-53	D4SB60L
D6608	8-719-081-97	MMDL914T1
D6609	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)
D6610	8-719-081-97	MMDL914T1 (KV-DR34M69(GE)/DR34M89)
D6611	8-719-081-97	MMDL914T1 (KV-DR34M69(GE)/DR34M89)
D6612	8-719-911-55	U05G (KV-DR34M69(GE)/DR34M89)
D6613	8-719-911-55	U05G (KV-DR34M69(GE)/DR34M89)
D6614	8-719-110-30	RD12ES-B1
D6615	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

D

REF NO.	PART NO.	DESCRIPTION	REMARK
D6615	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND)	
D6618	8-719-979-64	UF4005PKG23	
D6620	8-719-063-73	DIODE D1NL20U-TR	
D6623	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)	
D6623	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND)	
D6631	8-719-050-18	D4SBL20U	
D6632	8-719-081-97	MMDL914T1	
D6633	8-719-510-12	D10SC4M	
D6635	8-719-110-47	RD18ESB	
D6636	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)	
D6636	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND)	
D6639	8-719-063-73	DIODE D1NL20U-TR	
D6640	8-719-110-72	RD30ESB2	
D6641	8-719-109-96	RD6.8ES-B1	
D6642	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)	
D6642	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND)	
D6644	8-719-052-92	D10SBS4F	
D6648	8-719-110-30	RD12ES-B1 (KV-DR34M69(GE)/DR34M89)	
D6654	8-719-052-92	D10SBS4F	
D6802	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)	
D6802	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND)	
D6803	8-719-510-73	S3L20UF4	
D6804	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)	
D6804	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND)	
D6806	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)	
D6806	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND)	
D6808	8-719-110-02	RD7.5ES-B1	
D6812	8-719-110-39	RD15ES-B1	
D6813	8-719-302-43	EL1Z	
D6814	8-719-018-82	RGP02-20EL-6394	
D6816	8-719-510-73	S3L20UF4	
D6817	8-719-510-73	S3L20UF4	
D6820	8-719-970-87	ERA38-06	
D6821	8-719-970-87	ERA38-06	
D6822	8-719-067-18	RN4Z (KV-DR34M69(THAILAND)	
D6824	8-719-510-73	S3L20UF4	
D6825	8-719-050-38	DIODE M1MA152WK-T1	
D6830	8-719-988-61	1SS355TE-17	
D6831	8-719-945-81	ERC06-15SA	
		<FERRITE BEAD>	
FB6602	1-239-358-21	FILTER, NOISE	
FB6603	1-239-358-21	FILTER, NOISE	
FB6604	1-410-396-41	FERRITE 0.45UH	
FB6605	1-410-396-41	FERRITE 0.45UH	
FB6606	1-410-397-21	FERRITE 1.1UH	
FB6607	1-410-396-41	FERRITE 0.45UH	
FB6608	1-410-396-41	FERRITE 0.45UH	
		<IC>	
IC6600	8-759-670-30	MCZ3001D	
IC6601	8-759-198-31	UPC1093J-1-T (KV-DR34M69(THAILAND)	
IC6607	8-749-012-13	DM-58	
IC6608	8-759-133-90	UPC339C (KV-DR34M69(THAILAND)	
IC6800	8-759-696-71	STV9379A	
IC6804	8-759-394-36	BA09T	
IC6805	8-759-394-35	BA12T	
IC6806	8-749-013-76	PQ6RD83B	

REF NO.	PART NO.	DESCRIPTION	REMARK
		<CHIP CONDUCTOR>	
JR6601	1-216-295-91	SHORT CHIP 0	
JR6603	1-216-295-91	SHORT CHIP 0	
JR6608	1-216-295-91	SHORT CHIP 0	
JR6609	1-216-295-91	SHORT CHIP 0	
JR6614	1-216-295-91	SHORT CHIP 0	
JR6615	1-216-295-91	SHORT CHIP 0	
JR6616	1-216-295-91	SHORT CHIP 0	
		<COIL>	
L6604	1-412-525-31	INDUCTOR 10UH	
L6605	1-412-525-31	INDUCTOR 10UH	
L6606	1-412-525-31	INDUCTOR 10UH	
L6607	1-412-519-11	INDUCTOR 3.3UH	
L6608	1-412-525-31	INDUCTOR 10UH	
L6800	1-412-525-31	INDUCTOR 10UH	
L6801	1-406-986-21	INDUCTOR 3.3UH	
L6802	1-416-775-21	INDUCTOR 1MH	
L6803	1-406-982-11	INDUCTOR 680UH	
L6804	1-412-519-11	INDUCTOR 3.3UH	
L6805	1-412-519-11	INDUCTOR 3.3UH	
L6806	1-412-519-11	INDUCTOR 3.3UH	
L6807	1-412-552-11	INDUCTOR 2.2MH	
L6808	1-406-674-11	INDUCTOR 3.3MH	
		<PHOTO COUPLER>	
PH6601 ⚠	8-749-924-35	ON3171-R	
PH6602 ⚠	8-749-924-35	ON3171-R	
		<IC LINK>	
PS6605	1-533-597-41	LINK, IC	
PS6606	1-533-597-41	LINK, IC	
PS6609	1-533-597-41	LINK, IC	
PS6801	1-532-841-21	LINK, IC	
		<TRANSISTOR>	
Q6100	8-729-046-40	2SK2663	
Q6102	8-729-023-22	2SD2114K	
Q6600	8-729-052-32	IRFIB7N50A	
Q6601	8-729-119-78	2SC2785-HFE	
Q6602	8-729-119-78	2SC2785-HFE (KV-DR34M69(GE)/DR34M89)	
Q6603	8-729-052-32	IRFIB7N50A	
Q6604	8-729-119-76	2SA1175-HFE	
Q6605	8-729-230-49	2SC2712-YG (KV-DR34M69(THAILAND))	
Q6608	8-729-200-21	2SC2500-B	
Q6609	8-729-029-56	DTA144ESA	
Q6610	8-729-119-78	2SC2785-HFE	
Q6611	8-729-029-66	DTC114ESA	
Q6613	8-729-030-02	DTC144ESA	
Q6614	8-729-119-76	2SA1175-HFE	
Q6619	8-729-119-78	2SC2785-HFE	
Q6620	8-729-119-78	2SC2785-HFE	
Q6800	8-729-421-19	UN2213	
Q6802	8-729-025-19	IRFI740G	
Q6803	8-729-119-76	2SA1175-HFE	
Q6804	8-729-119-78	2SC2785-HFE	
Q6805	8-729-140-96	2SD774-34	
Q6806	8-729-140-96	2SD774-34	

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

D

REF NO.	PART NO.	DESCRIPTION			REMARK
Q6807	8-729-056-17	TRANSISTOR 2SC5696-SONY-CA			
Q6808	8-729-056-16	TRANSISTOR 2SC5698-SONY-CA			
Q6809	8-729-046-33	IRF720-LF49			
Q6810	8-729-047-60	IRFI830G-LF49			
Q6811	8-729-010-25	MSD601-RT1			
Q6812	8-729-043-95	2SC3840(3)			
Q6819	8-729-010-25	MSD601-RT1			
Q6820	8-729-010-25	MSD601-RT1			
Q6821	8-729-010-25	MSD601-RT1			
		<RESISTOR>			
R6100	1-260-298-51	CARBON	3.3	5%	1/2W
R6101	1-216-045-00	RES-CHIP	680	5%	1/10W
R6102	1-249-389-11	CARBON	4.7	5%	1/4W
R6103	1-216-009-91	RES-CHIP	22	5%	1/10W
R6104	1-240-205-91	CARBON	22M	5%	1/2W
R6105	1-216-097-11	RES-CHIP	100K	5%	1/10W
R6106	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6107	1-216-089-91	RES-CHIP	47K	5%	1/10W
R6108	1-215-493-00	METAL	1M	1%	1/4W
R6110	1-249-413-11	CARBON	470	5%	1/4W
R6500	1-220-797-11	CEMENTED	0.47	5%	10W
R6600	1-216-295-91	SHORT CHIP	0		
R6602	1-249-417-11	CARBON	1K	5%	1/4W
R6603	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6604	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R6605	1-215-471-00	METAL (KV-DR34M69(GE)/DR34M89)	120K	1%	1/4W
R6606	1-215-466-00	METAL (KV-DR34M69(GE)/DR34M89)	75K	1%	1/4W
R6607	1-215-489-00	METAL (KV-DR34M69(GE)/DR34M89)	680K	1%	1/4W
R6608	1-215-489-00	METAL (KV-DR34M69(GE)/DR34M89)	680K	1%	1/4W
R6609	1-215-489-00	METAL (KV-DR34M69(GE)/DR34M89)	680K	1%	1/4W
R6609	1-218-863-11	METAL CHIP (KV-DR34M69(THAILAND))	4.7K	0.5%	1/10W
R6610	1-208-830-11	METAL CHIP (KV-DR34M69(GE)/DR34M89)	100K	0.5%	1/10W
R6610	1-216-833-11	RES-CHIP (KV-DR34M69(THAILAND))	10K	5%	1/10W
R6611	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R6612	1-215-471-00	METAL (KV-DR34M69(GE)/DR34M89)	120K	1%	1/4W
R6612	1-216-864-11	SHORT CHIP (KV-DR34M69(THAILAND))	0		
R6613	1-215-489-00	METAL (KV-DR34M69(GE)/DR34M89)	680K	1%	1/4W
R6614	1-215-489-00	METAL (KV-DR34M69(GE)/DR34M89)	680K	1%	1/4W
R6615	1-215-489-00	METAL (KV-DR34M69(GE)/DR34M89)	680K	1%	1/4W
R6616	1-208-830-11	METAL CHIP (KV-DR34M69(GE)/DR34M89)	100K	0.5%	1/10W
R6617	1-218-909-11	METAL CHIP (KV-DR34M69(GE)/DR34M89)	390K	0.5%	1/10W
R6618	1-215-466-00	METAL (KV-DR34M69(GE)/DR34M89)	75K	1%	1/4W
R6619	1-216-853-11	RES-CHIP (KV-DR34M69(GE)/DR34M89)	470K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION			REMARK
R6620	1-218-911-11	METAL CHIP (KV-DR34M69(GE)/DR34M89)	470K	0.5%	1/10W
R6621	1-216-073-91	RES-CHIP (KV-DR34M69(GE)/DR34M89)	10K	5%	1/10W
R6622	1-220-797-11	CEMENTED	0.47	5%	10W
R6623	1-215-864-00	METAL OXIDE (KV-DR34M69(GE)/DR34M89)	150	5%	1W
R6624	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R6625	1-215-864-00	METAL OXIDE	150	5%	1W
R6626	1-215-444-00	METAL	9.1K	1%	1/4W
R6627	1-215-481-00	METAL	330K	1%	1/4W
R6628	1-216-833-11	RES-CHIP (KV-DR34M69(THAILAND))	10K	5%	1/10W
R6629	1-215-481-00	METAL	330K	1%	1/4W
R6630	1-215-481-00	METAL	330K	1%	1/4W
R6631	1-208-808-11	METAL CHIP	12K	0.5%	1/10W
R6632	1-208-758-11	METAL CHIP	100	0.5%	1/10W
R6633	1-215-458-00	METAL	36K	1%	1/4W
R6634	1-215-489-00	METAL	680K	1%	1/4W
R6635	1-215-489-00	METAL	680K	1%	1/4W
R6636	1-215-489-00	METAL	680K	1%	1/4W
R6637	1-215-463-00	METAL	56K	1%	1/4W
R6638	1-240-876-11	CEMENTED (KV-DR34M69(GE)/DR34M89)	1	5%	15W
R6638	1-245-291-11	RES, CEMENT-COATED 2.2 (KV-DR34M69(THAILAND))			
R6639	1-240-876-11	CEMENTED (KV-DR34M69(GE)/DR34M89)	1	5%	15W
R6640	1-216-081-00	RES-CHIP (KV-DR34M69(GE)/DR34M89)	22K	5%	1/10W
R6641	1-260-131-11	CARBON (KV-DR34M69(GE)/DR34M89)	470K	5%	1/2W
R6642	1-260-131-11	CARBON (KV-DR34M69(GE)/DR34M89)	470K	5%	1/2W
R6643	1-216-081-00	RES-CHIP (KV-DR34M69(GE)/DR34M89)	22K	5%	1/10W
R6644	1-249-417-11	CARBON	1K	5%	1/4W
R6645	1-220-886-11	FUSIBLE	0.1	10%	1W
R6647	1-216-639-11	METAL CHIP	330	0.5%	1/10W
R6648	1-216-829-11	RES-CHIP (KV-DR34M69(THAILAND))	4.7K	5%	1/10W
R6649	1-249-425-11	CARBON	4.7K	5%	1/4W
R6654	1-216-841-11	RES-CHIP (KV-DR34M69(THAILAND))	47K	5%	1/10W
R6655	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6658	1-249-393-11	CARBON	10	5%	1/4W
R6659	1-249-393-11	CARBON	10	5%	1/4W
R6660	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6662	1-249-429-11	CARBON	10K	5%	1/4W
R6663	1-249-429-11	CARBON	10K	5%	1/4W
R6664	1-249-421-11	CARBON	2.2K	5%	1/4W
R6666	1-249-429-11	CARBON	10K	5%	1/4W
R6667	1-249-425-11	CARBON	4.7K	5%	1/4W
R6669	1-249-417-11	CARBON	1K	5%	1/4W
R6670	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6671	1-217-611-00	METAL	0.1	10%	2W
R6672	1-249-421-11	CARBON	2.2K	5%	1/4W
R6674	1-249-418-11	CARBON	1.2K	5%	1/4W
R6675	1-208-774-11	METAL CHIP	470	0.5%	1/10W
R6679	1-249-437-11	CARBON	47K	5%	1/4W
R6680	1-216-362-11	METAL OXIDE	0.27	5%	2W
R6681	1-249-429-11	CARBON	10K	5%	1/4W
R6682	1-249-416-11	CARBON	820	5%	1/4W

The components identified by shading and mark ⚠ are critical for safety.
Replace only with part number specified.

D

REF NO.		PART NO.	DESCRIPTION		REMARK	
R6683		1-260-127-11	CARBON	220K	5%	1/2W
R6685		1-249-421-11	CARBON	2.2K	5%	1/4W
R6686	⚠	1-247-289-11	CARBON	8.2M	5%	1W
			(KV-DR34M69(GE)/DR34M89)			
R6686	⚠	1-240-917-91	RES(SURGE RESISTANT)		8.2M	
			(KV-DR34M69(THAILAND))			
R6688		1-249-417-11	CARBON	1K	5%	1/4W
R6689		1-249-389-11	CARBON	4.7	5%	1/4W
R6690		1-249-429-11	CARBON	10K	5%	1/4W
R6691		1-260-131-11	CARBON	470K	5%	1/2W
R6692		1-249-410-11	CARBON	270	5%	1/4W
R6693		1-215-451-00	METAL	18K	1%	1/4W
R6694		1-215-471-00	METAL	120K	1%	1/4W
R6696		1-215-925-11	METAL OXIDE	22K	5%	3W
R6699		1-216-833-11	RES-CHIP	10K	5%	1/10W
			(KV-DR34M69(THAILAND))			
R6701		1-216-833-11	RES-CHIP	10K	5%	1/10W
			(KV-DR34M69(THAILAND))			
R6702		1-216-840-11	RES-CHIP	39K	5%	1/10W
			(KV-DR34M69(THAILAND))			
R6704		1-249-377-11	CARBON	0.47	5%	1/4W
R6710		1-217-158-00	METAL	0.47	10%	5W
R6713		1-218-887-11	METAL CHIP	47K	0.5%	1/10W
R6715		1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6801		1-216-081-00	RES-CHIP	22K	5%	1/10W
R6802		1-216-073-91	RES-CHIP	10K	5%	1/10W
R6803		1-215-409-00	METAL	330	1%	1/4W
R6804		1-208-795-11	METAL CHIP	3.6K	0.5%	1/10W
R6805		1-208-802-11	METAL CHIP	6.8K	0.5%	1/10W
R6806		1-208-795-11	METAL CHIP	3.6K	0.5%	1/10W
R6807		1-249-383-11	CARBON	1.5	5%	1/4W
R6808		1-216-603-11	METAL CHIP	10	0.5%	1/10W
R6810		1-214-798-21	METAL	1.8	1%	1/2W
R6811		1-215-913-11	METAL OXIDE	220	5%	3W
R6813		1-214-798-21	METAL	1.8	1%	1/2W
R6815		1-216-025-11	RES-CHIP	100	5%	1/10W
R6816		1-216-085-91	RES-CHIP	33K	5%	1/10W
R6817		1-216-073-91	RES-CHIP	10K	5%	1/10W
R6818		1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6822		1-215-896-00	METAL OXIDE	4.7K	5%	2W
R6823		1-215-894-11	METAL OXIDE	2.2K	5%	2W
R6824		1-249-411-11	CARBON	330	5%	1/4W
R6825		1-249-411-11	CARBON	330	5%	1/4W
R6826		1-215-895-11	METAL OXIDE	3.3K	5%	2W
R6827		1-215-895-11	METAL OXIDE	3.3K	5%	2W
R6828		1-249-419-11	CARBON	1.5K	5%	1/4W
R6829		1-249-419-11	CARBON	1.5K	5%	1/4W
R6830		1-247-764-11	CARBON	10K	5%	1/2W
R6831		1-247-764-11	CARBON	10K	5%	1/2W
R6832		1-216-073-91	RES-CHIP	10K	5%	1/10W
R6834		1-216-361-00	METAL OXIDE	0.22	5%	2W
R6835		1-216-361-00	METAL OXIDE	0.22	5%	2W
R6836		1-215-880-00	METAL OXIDE	10	5%	2W
R6837		1-215-880-00	METAL OXIDE	10	5%	2W
R6839		1-249-405-11	CARBON	100	5%	1/4W
R6841		1-216-434-11	METAL OXIDE	1.8K	5%	1W
R6842		1-215-923-00	METAL OXIDE	10K	5%	3W
R6843		1-216-073-91	RES-CHIP	10K	5%	1/10W
R6844		1-247-807-31	CARBON	100	5%	1/4W
R6846		1-260-127-11	CARBON	220K	5%	1/2W
R6847		1-216-295-91	SHORT CHIP	0		
R6848		1-216-089-91	RES-CHIP	47K	5%	1/10W
R6849		1-216-097-11	RES-CHIP	100K	5%	1/10W

REF NO.		PART NO.	DESCRIPTION		REMARK	
R6850		1-216-073-91	RES-CHIP	10K	5%	1/10W
R6851		1-260-288-11	CARBON	0.47	5%	1/2W
R6852		1-216-345-11	METAL OXIDE	0.47	5%	1W
R6853		1-260-288-11	CARBON	0.47	5%	1/2W
R6854		1-215-923-00	METAL OXIDE	10K	5%	3W
R6855		1-214-897-00	METAL	22K	1%	1/2W
R6856		1-215-923-00	METAL OXIDE	10K	5%	3W
R6857		1-215-923-00	METAL OXIDE	10K	5%	3W
R6858		1-214-897-00	METAL	22K	1%	1/2W
R6859		1-215-871-11	METAL OXIDE	2.2K	5%	1W
R6860		1-215-923-00	METAL OXIDE	10K	5%	3W
R6863		1-215-894-11	METAL OXIDE	2.2K	5%	2W
R6864		1-215-429-00	METAL	2.2K	1%	1/4W
R6865		1-215-429-00	METAL	2.2K	1%	1/4W
R6866		1-215-423-00	METAL	1.2K	1%	1/4W
R6867		1-249-425-11	CARBON	4.7K	5%	1/4W
R6868		1-249-425-11	CARBON	4.7K	5%	1/4W
R6869		1-216-849-11	RES-CHIP	220K	5%	1/10W
R6870		1-216-085-91	RES-CHIP	33K	5%	1/10W
R6872		1-260-125-11	CARBON	150K	5%	1/2W
R6873		1-260-125-11	CARBON	150K	5%	1/2W
R6875		1-249-417-11	CARBON	1K	5%	1/4W
R6876		1-260-288-11	CARBON	0.47	5%	1/2W
R6880		1-208-802-11	METAL CHIP	6.8K	0.5%	1/10W
R6884		1-249-441-11	CARBON	100K	5%	1/4W
R6889		1-260-123-11	CARBON	100K	5%	1/2W
R6890		1-216-295-91	SHORT CHIP	0		
R6894		1-260-123-11	CARBON	100K	5%	1/2W
R6895		1-216-073-91	RES-CHIP	10K	5%	1/10W
R6896		1-216-073-91	RES-CHIP	10K	5%	1/10W
R6897		1-216-073-91	RES-CHIP	10K	5%	1/10W
R6899		1-216-073-91	RES-CHIP	10K	5%	1/10W
R6903		1-215-923-00	METAL OXIDE	10K	5%	3W
R6905		1-249-389-11	CARBON	4.7	5%	1/4W
R6906		1-214-897-00	METAL	22K	1%	1/2W
R6908		1-247-903-00	CARBON	1M	5%	1/4W
R6909		1-247-903-00	CARBON	1M	5%	1/4W
R6910		1-247-895-91	CARBON	470K	5%	1/4W

<RELAY>

RY6601	⚠	1-755-198-12	RELAY
RY6602		1-755-357-11	RELAY, AC POWER
			(KV-DR34M69(GE)/DR34M89)
RY6603	⚠	1-755-357-11	RELAY, AC POWER

<TRANSFORMER>

T6100	⚠	1-433-844-11	TRANSFORMER, CONVERTER
T6602	⚠	1-435-690-11	TRANSFORMER, CONVERTER (PIT)
			(KV-DR34M69(GE)/DR34M89)
T6602	⚠	1-435-690-31	TRANSFORMER, CONVERTER (PIT)
			(KV-DR34M69(THAILAND))
T6800		1-429-741-11	TRANSFORMER, DRIVE
T6801		1-437-690-11	TRANSFORMER, FERRITE (DFT)
T6802		1-437-430-11	TRANSFORMER, FERRITE (HDT)
T6803	⚠	1-453-326-12	TRANSFORMER ASSY FLYBACK
			(NX-4601//M3B4)
T6804		1-437-430-11	TRANSFORMER, FERRITE (HDT)

D D5

REF NO.	PART NO.	DESCRIPTION			
		<THERMISTOR>			
TH6100	1-803-586-11	THERMISTOR, NTC			
TH6601	1-803-540-11	THERMISTOR			
TH6801	1-800-193-00	THERMISTOR			
		<VARISTOR>			
VD6601	1-803-614-11	VARISTOR ENE471D-20A (KV-DR34M69(GE)/DR34M89)			
VD6603	1-803-830-11	VARISTOR (ERZV14D621)			
VD6604	1-804-824-11	VARISTOR ENE271D-20A (KV-DR34M69(GE)/DR34M89)			
**********					
*	A-1400-586-A	D5 BOARD MOUNTED (KV-DR34M69(GE)/DR34M89)			
*	A-1400-844-A	D5 BOARD MOUNTED (KV-DR34M69(THAILAND))			
		**********			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
		<CAPACITOR>			
C6101	1-126-965-91	ELECT	22UF	20.00%	50V
C6102	1-126-965-91	ELECT	22UF	20.00%	50V
C6103	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6104	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C6105	1-126-960-11	ELECT	1UF	20.00%	50V
C6106	1-136-347-11	FILM	0.0047UF	5.00%	630V
C6107	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6108	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6109	1-129-716-00	FILM	0.015UF	5.00%	630V
C6110	1-126-947-11	ELECT	47UF	20.00%	25V
C6111	1-136-165-00	FILM	0.1UF	5.00%	50V
C6114	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6115	1-126-947-11	ELECT	47UF	20.00%	25V
C6116	1-136-479-11	FILM	0.001UF	2.00%	50V
C6117	1-163-037-11	CERAMIC CHIP	0.022UF	10.00%	50V
C6118	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6119	1-162-960-11	CERAMIC CHIP	220PF	10.00%	50V
C6201	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C6202	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6203	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C6204	1-162-962-11	CERAMIC CHIP	470PF	10.00%	50V
C6205	1-136-479-11	FILM	0.001UF	2.00%	50V
C6206	1-136-479-11	FILM	0.001UF	2.00%	50V
C6208	1-126-968-11	ELECT	100UF	20.00%	50V
C6209	1-104-663-11	ELECT	33UF	20.00%	25V
C6210	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6213	1-126-965-91	ELECT	22UF	20.00%	50V
C6214	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6215	1-126-947-11	ELECT	47UF	20.00%	25V
C6216	1-104-760-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.047UF	10.00%	50V
C6216	1-165-176-11	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.047UF	10.00%	16V
C6217	1-126-965-91	ELECT	22UF	20.00%	50V
C6218	1-126-947-11	ELECT	47UF	20.00%	25V
C6219	1-126-947-11	ELECT	47UF	20.00%	25V
C6220	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6223	1-126-947-11	ELECT	47UF	20.00%	25V
C6227	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6229	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6230	1-126-947-11	ELECT	47UF	20.00%	25V
C6233	1-126-964-11	ELECT	10UF	20.00%	50V
C6306	1-104-760-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.047UF	10.00%	50V
C6306	1-165-176-11	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.047UF	10.00%	16V
C6402	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C6403	1-163-133-00	CERAMIC CHIP	470PF	5.00%	50V
C6404	1-115-416-11	CERAMIC CHIP	0.001UF	5.00%	25V
C6406	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6408	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6409	1-126-947-11	ELECT	47UF	20.00%	25V
C6410	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6411	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6412	1-126-947-11	ELECT	47UF	20.00%	25V
C6413	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6414	1-126-960-11	ELECT	1UF	20.00%	50V
C6416	1-126-934-11	ELECT	220UF	20.00%	16V
C6422	1-163-037-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.022UF	10.00%	50V
C6422	1-164-227-11	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.022UF	10.00%	25V
C6423	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6424	1-136-479-11	FILM	0.001UF	2.00%	50V
C6427	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6428	1-163-259-91	CERAMIC CHIP	220PF	5.00%	50V
C6429	1-126-965-91	ELECT	22UF	20.00%	50V
C6430	1-104-760-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.047UF	10.00%	50V
C6430	1-165-176-11	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.047UF	10.00%	16V
C6432	1-127-715-91	CERAMIC CHIP	0.22UF	10%	16V
C6433	1-126-960-11	ELECT	1UF	20.00%	50V
C6434	1-107-725-11	CERAMIC CHIP	0.1UF	10.00%	16V
C6436	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6437	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6441	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C6442	1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
C6443	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6444	1-136-479-11	FILM	0.001UF	2.00%	50V
C6445	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6451	1-216-295-91	SHORT CHIP	0		
C6452	1-165-176-11	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.047UF	10.00%	16V
C6452	1-104-760-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.047UF	10.00%	50V
C6454	1-208-849-11	METAL CHIP	620K	0.5%	1/10W
C6458	1-162-962-11	CERAMIC CHIP	470PF	10.00%	50V
C6459	1-115-340-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.22UF	10.00%	25V
C6459	1-127-715-91	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.22UF	10%	16V
C6460	1-115-185-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.033UF	10.00%	50V
C6460	1-164-677-11	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.033UF	10.00%	16V
C6505	1-126-947-11	ELECT	47UF	20.00%	25V
C6506	1-126-947-11	ELECT	47UF	20.00%	25V
C6508	1-136-495-11	FILM	0.068UF	5.00%	50V
C6510	1-126-947-11	ELECT	47UF	20.00%	25V
C6511	1-126-947-11	ELECT	47UF	20.00%	25V

D5

REF NO.	PART NO.	DESCRIPTION			REMARK
C6512	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6513	1-162-970-11	CERAMIC CHIP	0.01UF	10.00%	25V
C6514	1-126-964-11	ELECT	10UF	20.00%	50V
C6515	1-107-714-11	ELECT	10UF	20.00%	50V
C6516	1-104-760-11	CERAMIC CHIP (KV-DR34M69(GE)/DR34M89)	0.047UF	10.00%	50V
C6516	1-165-176-11	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.047UF	10.00%	16V
C6517	1-107-714-11	ELECT	10UF	20.00%	50V
C6518	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C6519	1-126-934-11	ELECT	220UF	20.00%	16V
		<CONNECTOR>			
CN6100	1-793-498-11	CONNECTOR, BOARD TO BOARD 50P			
CN6101 *	1-564-523-11	PLUG, CONNECTOR 8P			
CN6102 *	1-564-518-11	PLUG, CONNECTOR 3P			
		<DIODE>			
D6102	8-719-987-87	ERA85-009			
D6103	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)			
D6103	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND))			
D6104	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)			
D6104	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND))			
D6105	8-719-063-73	DIODE D1NL20U-TR			
D6201	8-719-081-97	MMDL914T1			
D6202	8-719-081-97	MMDL914T1			
D6203	8-719-081-97	MMDL914T1			
D6204	8-719-081-97	MMDL914T1			
D6207	1-216-295-91	SHORT CHIP	0		
D6208	8-719-081-97	MMDL914T1			
D6209	8-719-081-97	MMDL914T1			
D6210	1-216-295-91	SHORT CHIP	0		
D6211	1-216-295-91	SHORT CHIP	0		
D6212	8-719-081-97	MMDL914T1			
D6213	8-719-081-97	MMDL914T1			
D6214	1-216-295-91	SHORT CHIP	0		
D6215	1-216-295-91	SHORT CHIP	0		
D6216	1-216-295-91	SHORT CHIP	0		
D6217	1-216-295-91	SHORT CHIP	0		
D6218	1-216-295-91	SHORT CHIP	0		
D6219	1-216-295-91	SHORT CHIP	0		
D6401	8-719-081-97	MMDL914T1			
D6402	8-719-081-97	MMDL914T1			
D6403	8-719-081-97	MMDL914T1			
D6404	1-216-295-91	SHORT CHIP	0		
D6405	8-719-081-97	MMDL914T1			
D6409	8-719-081-97	MMDL914T1			
D6411	8-719-081-97	MMDL914T1			
D6413	8-719-081-97	MMDL914T1			
D6423	8-719-081-97	MMDL914T1			
D6424	1-216-295-91	SHORT CHIP	0		
D6425	8-719-988-61	1SS355TE-17			
D6426	8-719-988-61	1SS355TE-17			
D6427	8-719-988-61	1SS355TE-17			
D6428	8-719-081-97	MMDL914T1			
D6430	8-719-081-97	MMDL914T1			
D6501	8-719-081-97	MMDL914T1			
D6502	8-719-081-97	MMDL914T1			
D6504	8-719-988-61	1SS355TE-17			
D6505	8-719-988-61	1SS355TE-17			

REF NO.	PART NO.	DESCRIPTION	REMARK
		<IC>	
IC6100	6-701-598-01	IC UPC5023CS-184	
IC6201	8-759-659-67	LA6393DLL	
IC6202	8-759-231-53	TA7805S	
IC6205	8-752-072-81	CXA1875AM	
IC6206	8-759-700-69	NJM79L12A	
IC6401	8-759-659-67	LA6393DLL	
IC6402	6-701-847-01	IC UPC1898CT-A	
IC6501	8-759-822-38	LA6510	
		<CHIP CONDUCTOR>	
JR6100	1-216-295-91	SHORT CHIP	0
JR6101	1-216-295-91	SHORT CHIP	0
JR6102	1-216-295-91	SHORT CHIP	0
JR6103	1-216-295-91	SHORT CHIP	0
JR6200	1-216-295-91	SHORT CHIP	0
JR6201	1-216-295-91	SHORT CHIP	0
JR6202	1-216-295-91	SHORT CHIP	0
JR6204	1-216-295-91	SHORT CHIP	0
JR6401	1-216-295-91	SHORT CHIP	0
JR6402	1-216-295-91	SHORT CHIP	0
JR6403	1-216-295-91	SHORT CHIP	0
JR6404	1-216-295-91	SHORT CHIP	0
JR6405	1-216-295-91	SHORT CHIP	0
JR6406	1-216-295-91	SHORT CHIP	0
JR6407	1-216-295-91	SHORT CHIP	0
JR6408	1-216-295-91	SHORT CHIP	0
JR6409	1-216-295-91	SHORT CHIP	0
JR6410	1-216-295-91	SHORT CHIP	0
JR6411	1-216-295-91	SHORT CHIP	0
JR6413	1-216-295-91	SHORT CHIP	0
JR6414	1-216-295-91	SHORT CHIP	0
JR6416	1-216-295-91	SHORT CHIP	0
JR6417	1-216-295-91	SHORT CHIP	0
JR6418	1-216-295-91	SHORT CHIP	0
JR6420	1-216-295-91	SHORT CHIP	0
JR6421	1-216-295-91	SHORT CHIP	0
JR6422	1-216-295-91	SHORT CHIP	0
JR6423	1-216-295-91	SHORT CHIP	0
JR6424	1-216-295-91	SHORT CHIP	0
JR6425	1-216-295-91	SHORT CHIP	0
JR6426	1-216-295-91	SHORT CHIP	0
		<COIL>	
L6101	1-416-920-11	INDUCTOR	10MH
L6102	1-406-989-21	INDUCTOR	10MH
L6201	1-412-537-31	INDUCTOR	100UH
		<TRANSISTOR>	
Q6001	1-801-806-11	TR DTC144EKA (KV-DR34M69(GE)/DR34M89)	
Q6001	8-729-421-19	UN2213 (KV-DR34M69(THAILAND))	
Q6002	8-729-422-33	2SD601A-Q-TX (KV-DR34M69(GE)/DR34M89)	
Q6002	8-729-010-25	MSD601-RT1 (KV-DR34M69(THAILAND))	
Q6103	8-729-140-93	2SB733-34	
Q6104	8-729-046-33	IRF720-LF49	
Q6105	8-729-216-22	2SA1162-G	
Q6106	8-729-010-25	MSD601-RT1	
Q6107	8-729-804-87	2SB1142-T	
Q6108	8-729-010-25	MSD601-RT1	

D5

REF NO.	PART NO.	DESCRIPTION	REMARK
Q6201	8-729-010-25	MSD601-RT1	
Q6202	8-729-010-25	MSD601-RT1	
Q6203	8-729-010-25	MSD601-RT1	
Q6205	8-729-010-25	MSD601-RT1	
Q6206	8-729-010-05	MSB709-RT1	
Q6207	8-729-421-19	UN2213	
Q6208	8-729-216-22	2SA1162-G	
Q6209	8-729-010-05	MSB709-RT1	
Q6212	8-729-216-22	2SA1162-G	
Q6213	8-729-010-25	MSD601-RT1	
Q6215	8-729-010-25	MSD601-RT1	
Q6216	8-729-216-22	2SA1162-G	
Q6218	8-729-010-25	MSD601-RT1	
Q6219	8-729-422-33	2SD601A-Q-TX (KV-DR34M69(GE)/DR34M89)	
Q6219	8-729-010-25	MSD601-RT1 (KV-DR34M69(THAILAND))	
Q6220	8-729-010-25	MSD601-RT1	
Q6221	8-729-010-25	MSD601-RT1	
Q6222	8-729-216-22	2SA1162-G	
Q6401	8-729-010-25	MSD601-RT1	
Q6402	8-729-216-22	2SA1162-G	
Q6409	8-729-216-22	2SA1162-G	
Q6410	8-729-010-25	MSD601-RT1	
Q6412	8-729-216-22	2SA1162-G	
Q6413	8-729-010-25	MSD601-RT1	
Q6414	8-729-216-22	2SA1162-G	
Q6415	8-729-010-25	MSD601-RT1	
Q6417	8-729-010-25	MSD601-RT1	
Q6418	8-729-216-22	2SA1162-G	
Q6420	8-729-216-22	2SA1162-G	
Q6422	8-729-216-22	2SA1162-G	
Q6423	8-729-216-22	2SA1162-G	
Q6424	8-729-010-25	MSD601-RT1	
Q6425	8-729-010-25	MSD601-RT1	
Q6437	8-729-010-25	MSD601-RT1	
Q6438	8-729-216-22	2SA1162-G	
Q6440	8-729-422-33	2SD601A-Q-TX (KV-DR34M69(GE)/DR34M89)	
Q6440	8-729-010-25	MSD601-RT1 (KV-DR34M69(THAILAND))	
Q6441	8-729-216-22	2SA1162-G	
Q6501	8-729-216-22	2SA1162-G	
Q6502	8-729-216-22	2SA1162-G	
Q6503	8-729-010-25	MSD601-RT1	
Q6504	8-729-010-25	MSD601-RT1	
Q6505	8-729-010-25	MSD601-RT1	
Q6506	8-729-421-22	UN2211	
Q6507	8-729-421-22	UN2211	
Q6508	8-729-422-33	2SD601A-Q-TX (KV-DR34M69(GE)/DR34M89)	
Q6508	8-729-010-25	MSD601-RT1 (KV-DR34M69(THAILAND))	
Q6509	8-729-010-25	MSD601-RT1	
Q6510	8-729-216-22	2SA1162-G	

<RESISTOR>

R6001	1-216-049-11	RES-CHIP	1K	5%	1/10W
R6002	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6003	1-216-025-11	RES-CHIP	100	5%	1/10W
R6006	1-216-089-91	RES-CHIP	47K	5%	1/10W
R6007	1-216-097-11	RES-CHIP	100K	5%	1/10W
R6102	1-216-049-11	RES-CHIP	1K	5%	1/10W
R6104	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R6107	1-216-061-91	RES-CHIP	3.3K	5%	1/10W
R6108	1-216-665-11	METAL CHIP	3.9K	0.5%	1/10W
R6109	1-216-057-00	RES-CHIP	2.2K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION		REMARK	
R6111	1-208-808-11	METAL CHIP	12K	0.5%	1/10W
R6112	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6113	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6114	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R6115	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6116	1-216-049-11	RES-CHIP	1K	5%	1/10W
R6117	1-216-633-11	METAL CHIP	180	0.5%	1/10W
R6118	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6119	1-216-025-11	RES-CHIP	100	5%	1/10W
R6120	1-208-818-11	METAL CHIP	33K	0.5%	1/10W
R6121	1-216-041-00	RES-CHIP	470	5%	1/10W
R6122	1-215-860-11	METAL OXIDE	33	5%	1W
R6127	1-216-025-11	RES-CHIP	100	5%	1/10W
R6128	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R6129	1-216-633-11	METAL CHIP	180	0.5%	1/10W
R6130	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R6131	1-208-812-11	METAL CHIP	18K	0.5%	1/10W
R6132	1-216-025-11	RES-CHIP	100	5%	1/10W
R6133	1-208-822-11	METAL CHIP	47K	0.5%	1/10W
R6136	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R6137	1-216-685-11	METAL CHIP	27K	0.5%	1/10W
R6138	1-216-665-11	METAL CHIP	3.9K	0.5%	1/10W
R6140	1-216-025-11	RES-CHIP	100	5%	1/10W
R6141	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6142	1-208-792-11	METAL CHIP	2.7K	0.5%	1/10W
R6143	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6148	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R6201	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6203	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6204	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6205	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6206	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6207	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6208	1-216-639-11	METAL CHIP	330	0.5%	1/10W
R6209	1-216-037-00	RES-CHIP	330	5%	1/10W
R6210	1-208-812-11	METAL CHIP	18K	0.5%	1/10W
R6213	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R6215	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R6216	1-216-089-91	RES-CHIP	47K	5%	1/10W
R6217	1-216-295-91	SHORT CHIP	0		
R6218	1-216-125-00	RES-CHIP	1.5M	5%	1/10W
R6219	1-208-830-11	METAL CHIP	100K	0.5%	1/10W
R6220	1-216-089-91	RES-CHIP	47K	5%	1/10W
R6221	1-208-822-11	METAL CHIP	47K	0.5%	1/10W
R6222	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6224	1-208-822-11	METAL CHIP	47K	0.5%	1/10W
R6225	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6227	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6230	1-208-852-11	METAL CHIP	820K	0.5%	1/10W
R6232	1-208-812-11	METAL CHIP	18K	0.5%	1/10W
R6234	1-216-097-11	RES-CHIP	100K	5%	1/10W
R6237	1-249-377-11	CARBON	0.47	5%	1/4W
R6248	1-208-812-11	METAL CHIP	18K	0.5%	1/10W
R6249	1-208-804-11	METAL CHIP	8.2K	0.5%	1/10W
R6250	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R6253	1-216-025-11	RES-CHIP	100	5%	1/10W
R6254	1-216-025-11	RES-CHIP	100	5%	1/10W
R6255	1-216-025-11	RES-CHIP	100	5%	1/10W
R6256	1-216-025-11	RES-CHIP	100	5%	1/10W
R6266	1-216-017-91	RES-CHIP	47	5%	1/10W
R6267	1-216-017-91	RES-CHIP	47	5%	1/10W
R6270	1-208-814-91	METAL CHIP	22K	0.5%	1/10W

D5

REF NO.	PART NO.	DESCRIPTION		REMARK	
R6271	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R6272	1-216-049-11	RES-CHIP	1K	5%	1/10W
R6273	1-216-049-11	RES-CHIP	1K	5%	1/10W
R6274	1-249-377-11	CARBON	0.47	5%	1/4W
R6278	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6281	1-208-826-11	METAL CHIP	68K	0.5%	1/10W
R6283	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6286	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6287	1-216-095-00	RES-CHIP	82K	5%	1/10W
R6288	1-216-097-11	RES-CHIP	100K	5%	1/10W
R6289	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6290	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6291	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6292	1-216-081-00	RES-CHIP	22K	5%	1/10W
R6293	1-216-113-00	RES-CHIP	470K	5%	1/10W
R6294	1-216-025-11	RES-CHIP	100	5%	1/10W
R6295	1-216-025-11	RES-CHIP	100	5%	1/10W
R6297	1-208-840-11	METAL CHIP	270K	0.5%	1/10W
R6298	1-208-824-11	METAL CHIP	56K	0.5%	1/10W
R6401	1-216-295-91	SHORT CHIP	0		
R6402	1-208-822-11	METAL CHIP	47K	0.5%	1/10W
R6403	1-208-848-11	METAL CHIP	560K	0.5%	1/10W
R6404	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6405	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6406	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6407	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6408	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6411	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6412	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6413	1-216-067-00	RES-CHIP	5.6K	5%	1/10W
R6414	1-216-025-11	RES-CHIP	100	5%	1/10W
R6415	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6417	1-216-295-91	SHORT CHIP	0		
R6419	1-216-025-11	RES-CHIP	100	5%	1/10W
R6422	1-216-121-11	RES-CHIP	1M	5%	1/10W
R6423	1-216-089-91	RES-CHIP	47K	5%	1/10W
R6424	1-216-295-91	SHORT CHIP	0		
R6428	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6429	1-208-812-11	METAL CHIP	18K	0.5%	1/10W
R6430	1-214-913-00	METAL	100K	1%	1/2W
R6431	1-216-113-00	RES-CHIP	470K	5%	1/10W
R6432	1-216-081-00	RES-CHIP	22K	5%	1/10W
R6433	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R6434	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R6435	1-216-295-91	SHORT CHIP	0		
R6436	1-214-921-00	METAL	220K	1%	1/2W
R6437	1-216-295-91	SHORT CHIP	0		
R6439	1-216-097-11	RES-CHIP	100K	5%	1/10W
R6440	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6441	1-216-097-11	RES-CHIP	100K	5%	1/10W
R6445	1-216-295-91	SHORT CHIP	0		
R6446	1-216-295-91	SHORT CHIP	0		
R6447	1-214-905-11	METAL	47K	1%	1/2W
R6448	1-214-917-00	METAL	150K	1%	1/2W
R6449	1-216-295-91	SHORT CHIP	0		
R6450	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6452	1-208-822-11	METAL CHIP	47K	0.5%	1/10W
R6453	1-260-119-11	CARBON	47K	5%	1/2W
R6455	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6456	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6457	1-216-073-91	RES-CHIP	10K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION		REMARK	
R6459	1-216-295-91	SHORT CHIP	0		
R6461	1-216-097-11	RES-CHIP	100K	5%	1/10W
R6462	1-208-836-11	METAL CHIP	180K	0.5%	1/10W
R6463	1-208-818-11	METAL CHIP	33K	0.5%	1/10W
R6464	1-208-846-11	METAL CHIP	470K	0.5%	1/10W
R6467	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6468	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R6469	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6471	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6472	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R6473	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R6474	1-214-905-11	METAL	47K	1%	1/2W
R6475	1-208-800-11	METAL CHIP	5.6K	0.5%	1/10W
R6476	1-216-295-91	SHORT CHIP	0		
R6477	1-208-822-11	METAL CHIP	47K	0.5%	1/10W
R6480	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6481	1-218-760-11	METAL CHIP	220K	0.5%	1/10W
R6482	1-208-844-11	METAL CHIP	390K	0.5%	1/10W
R6483	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6484	1-208-830-11	METAL CHIP	100K	0.5%	1/10W
R6487	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6489	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R6490	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6491	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6492	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6493	1-208-822-11	METAL CHIP	47K	0.5%	1/10W
R6494	1-216-097-11	RES-CHIP	100K	5%	1/10W
R6495	1-216-097-11	RES-CHIP	100K	5%	1/10W
R6496	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6497	1-216-081-00	RES-CHIP	22K	5%	1/10W
R6498	1-216-295-91	SHORT CHIP	0		
R6499	1-216-295-91	SHORT CHIP	0		
R6500	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6508	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R6509	1-208-840-11	METAL CHIP	270K	0.5%	1/10W
R6510	1-216-085-91	RES-CHIP	33K	5%	1/10W
R6511	1-216-085-91	RES-CHIP	33K	5%	1/10W
R6512	1-249-389-11	CARBON	4.7	5%	1/4W
R6513	1-216-085-91	RES-CHIP	33K	5%	1/10W
R6514	1-208-840-11	METAL CHIP	270K	0.5%	1/10W
R6515	1-249-389-11	CARBON	4.7	5%	1/4W
R6516	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R6517	1-216-089-91	RES-CHIP	47K	5%	1/10W
R6518	1-216-089-91	RES-CHIP	47K	5%	1/10W
R6519	1-208-812-11	METAL CHIP	18K	0.5%	1/10W
R6520	1-208-784-11	METAL CHIP	1.2K	0.5%	1/10W
R6521	1-208-790-11	METAL CHIP	2.2K	0.5%	1/10W
R6522	1-208-830-11	METAL CHIP	100K	0.5%	1/10W
R6523	1-215-429-00	METAL	2.2K	1%	1/4W
R6525	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6526	1-208-808-11	METAL CHIP	12K	0.5%	1/10W
R6527	1-216-089-91	RES-CHIP	47K	5%	1/10W
R6528	1-216-639-11	METAL CHIP	330	0.5%	1/10W
R6529	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6530	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R6531	1-216-025-11	RES-CHIP	100	5%	1/10W
R6532	1-208-804-11	METAL CHIP	8.2K	0.5%	1/10W
R6533	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6534	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6535	1-216-089-91	RES-CHIP	47K	5%	1/10W
R6536	1-208-812-11	METAL CHIP	18K	0.5%	1/10W
R6537	1-216-073-91	RES-CHIP	10K	5%	1/10W

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

D5 DH (KV-DR34M69 ONLY) F1

REF NO.	PART NO.	DESCRIPTION			REMARK
R6538	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6539	1-208-820-11	METAL CHIP	39K	0.5%	1/10W
R6540	1-208-822-11	METAL CHIP	47K	0.5%	1/10W
R6541	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6542	1-208-812-11	METAL CHIP	18K	0.5%	1/10W
R6543	1-208-822-11	METAL CHIP	47K	0.5%	1/10W
R6544	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6545	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6546	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6551	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6552	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6553	1-216-077-91	RES-CHIP	15K	5%	1/10W
R6554	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6555	1-208-806-11	METAL CHIP	10K	0.5%	1/10W
R6557	1-208-814-91	METAL CHIP	22K	0.5%	1/10W
R6558	1-208-826-11	METAL CHIP	68K	0.5%	1/10W
R6602	1-216-295-91	SHORT CHIP	0		
R6604	1-208-848-11	METAL CHIP	560K	0.5%	1/10W
R6609	1-208-798-11	METAL CHIP	4.7K	0.5%	1/10W
R6610	1-216-073-91	RES-CHIP	10K	5%	1/10W
R6611	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R6612	1-216-295-91	SHORT CHIP	0		
R6614	1-216-295-91	SHORT CHIP	0		
R6618	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
R6620	1-216-295-91	SHORT CHIP	0		

****

* A-1400-588-A DH BOARD MOUNTED (KV-DR34M69(GE))
* A-1400-846-A DH BOARD MOUNTED (KV-DR34M69(THAILAND))
****

<CAPACITOR>

C3801	1-126-964-11	ELECT	10UF	20.00%	50V
C3804	1-102-129-00	CERAMIC	0.01UF	10.00%	50V
C3805	1-126-964-11	ELECT	10UF	20.00%	50V
C3807	1-102-129-00	CERAMIC	0.01UF	10.00%	50V
C3816	1-126-964-11	ELECT	10UF	20.00%	50V
C3819	1-126-960-11	ELECT	1UF	20.00%	50V
C3822	1-136-165-00	FILM	0.1UF	5.00%	50V
C3823	1-126-964-11	ELECT	10UF	20.00%	50V
C3824	1-126-960-11	ELECT	1UF	20.00%	50V
C3825	1-126-964-11	ELECT	10UF	20.00%	50V
C3826	1-136-165-00	FILM	0.1UF	5.00%	50V

<CONNECTOR>

CN3802	* 1-564-510-11	PLUG, CONNECTOR 7P	

<DIODE>

D3805	8-719-911-19	1SS119-25	

<IC>

IC3805	8-759-822-38	LA6510	
IC3808	8-759-189-43	AN77L05-TA	

REF NO.	PART NO.	DESCRIPTION			REMARK
		<TRANSISTOR>			
Q3807	8-729-030-02	DTC144ESA			
Q3808	8-729-030-02	DTC144ESA			
Q3809	8-729-119-78	2SC2785-HFE			
Q3812	8-729-119-78	2SC2785-HFE			
Q3813	8-729-119-78	2SC2785-HFE			
Q3814	8-729-119-76	2SA1175-HFE			
		<RESISTOR>			
R3802	1-249-417-11	CARBON	1K	5%	1/4W
R3803	1-249-417-11	CARBON	1K	5%	1/4W
R3804	1-215-433-00	METAL	3.3K	1%	1/4W
R3805	1-215-429-00	METAL	2.2K	1%	1/4W
R3808	1-247-883-00	CARBON	150K	5%	1/4W
R3809	1-215-469-00	METAL	100K	1%	1/4W
R3810	1-249-425-11	CARBON	4.7K	5%	1/4W
R3814	1-249-411-11	CARBON	330	5%	1/4W
R3823	1-249-395-11	CARBON	15	5%	1/4W
R3825	1-249-417-11	CARBON	1K	5%	1/4W
R3828	1-249-377-11	CARBON	0.47	5%	1/4W
R3839	1-249-429-11	CARBON	10K	5%	1/4W
R3845	1-249-425-11	CARBON	4.7K	5%	1/4W
R3848	1-215-451-00	METAL	18K	1%	1/4W
R3849	1-249-377-11	CARBON	0.47	5%	1/4W
R3852	1-249-441-11	CARBON	100K	5%	1/4W
R3854	1-249-429-11	CARBON	10K	5%	1/4W
R3863	1-215-433-00	METAL	3.3K	1%	1/4W
R3864	1-215-433-00	METAL	3.3K	1%	1/4W
R3865	1-215-397-00	METAL	100	1%	1/4W
R3866	1-215-469-00	METAL	100K	1%	1/4W

****

* A-1400-490-A F1 BOARD MOUNTED (KV-DR34M69(GE)/DR34M89)
* A-1400-691-A F1 BOARD MOUNTED (KV-DR34M69(THAILAND))
****

1-533-223-11	HOLDER, FUSE (KV-DR34M69(GE)/DR34M89)	
* 4-374-846-01	COVER, CAPACITOR, CAP TYPE (KV-DR34M69(GE)/DR34M89)	
1-533-223-11	CLIP, FUSE (KV-DR34M69(THAILAND))	
4-044-778-11	COVER, CAP TYPE CONDENSER (KV-DR34M69(THAILAND))	

<CAPACITOR>

C1601	⚠ 1-104-708-51	MYLAR	0.47UF	20.00%	250V
C1602	⚠ 1-109-835-51	MYLAR	0.68UF	20.00%	250V
C1603	⚠ 1-117-703-51	CERAMIC	0.0047UF	99%	250V

<CONNECTOR>

CN1601	1-580-843-11	PIN, CONNECTOR (POWER)
CN1602	1-580-843-11	PIN, CONNECTOR (POWER)
CN1604	1-695-915-11	TAB (CONTACT)

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

F1 H1 H2

REF NO.		PART NO.	DESCRIPTION			REMARK
			<FUSE>			
F1601	⚠	1-576-334-11	FUSE, CYLINDERICAL (TIME-LAG) (KV-DR34M69(GE)/DR34M89)			
F1601	⚠	1-576-334-11	FUSE, TIME-LAG 5A/250V (KV-DR34M69(THAILAND))			
			<FERRITE BEAD>			
FB1601		1-410-397-21	FERRITE	1.1UH		
FB1602		1-410-397-21	FERRITE	1.1UH		
FB1603		1-410-397-21	FERRITE	1.1UH		
FB1604		1-410-397-21	FERRITE	1.1UH		
			<RESISTOR>			
R1601	⚠	1-219-759-91	CARBON	1M	5%	1/2W
			<TRANSFORMER>			
T1601	⚠	1-433-900-21	TRANSFORMER, LINE FILTER			
T1602	⚠	1-433-900-21	TRANSFORMER, LINE FILTER			
			<VARISTOR>			
VDR161		1-803-830-11	VARISTOR (ERZV14D621)			
**********						
	*	A-1400-491-A	H1 BOARD MOUNTED (KV-DR34M69(GE)/DR34M89)			
	*	A-1400-692-A	H1 BOARD MOUNTED (KV-DR34M69(THAILAND))			
			**********			
			<CAPACITOR>			
C1910		1-126-947-11	ELECT	47UF	20.00%	16V
C1930		1-136-153-00	FILM	0.01UF	5.00%	50V
C1932		1-136-153-00	FILM	0.01UF	5.00%	50V
C1935		1-102-824-00	CERAMIC	470PF	5.00%	50V
C1938		1-102-824-00	CERAMIC	470PF	5.00%	50V
			<CONNECTOR>			
CN1905	*	1-764-333-11	PLUG, CONNECTOR 10P			
CN1906		1-564-509-11	PLUG, CONNECTOR 6P			
CN1932	*	1-564-509-11	PLUG, CONNECTOR 6P			
CN1934	*	1-764-333-11	PLUG, CONNECTOR 10P			
			<DIODE>			
D1905		8-719-070-16	NNCD9.1A-T1			
D1907		8-719-070-16	NNCD9.1A-T1			
D1930		8-719-929-15	HZS9.1NB2			
D1944		8-719-070-16	NNCD9.1A-T1			
D1945		8-719-911-19	1SS119-25			
D1946		8-719-911-19	1SS119-25			

REF NO.		PART NO.	DESCRIPTION			REMARK
			<JACK>			
J1931		1-770-786-11	JACK			
J1932		1-784-646-11	TERMINAL, S			
J1933		1-770-329-11	JACK, PIN 3P			
			<COIL>			
L1931		1-414-856-11	INDUCTOR	10UH		
L1932		1-414-856-11	INDUCTOR	10UH		
			<TRANSISTOR>			
Q1901		8-729-030-02	DTC144ESA			
Q1902		8-729-030-02	DTC144ESA			
			<RESISTOR>			
R1911		1-249-411-11	CARBON	330	5%	1/4W
R1913		1-249-429-11	CARBON	10K	5%	1/4W
R1914		1-249-411-11	CARBON	330	5%	1/4W
R1915		1-249-429-11	CARBON	10K	5%	1/4W
R1916		1-249-401-11	CARBON	47	5%	1/4W
R1917		1-247-807-31	CARBON	100	5%	1/4W
R1920		1-247-807-31	CARBON	100	5%	1/4W
R1921		1-247-807-31	CARBON	100	5%	1/4W
R1933		1-247-895-91	CARBON	470K	5%	1/4W
R1934		1-247-807-31	CARBON	100	5%	1/4W
R1935		1-247-807-31	CARBON	100	5%	1/4W
R1936		1-247-895-91	CARBON	470K	5%	1/4W
R1952		1-249-421-11	CARBON	2.2K	5%	1/4W
R1970		1-249-426-11	CARBON	5.6K	5%	1/4W
R1971		1-249-413-11	CARBON	470	5%	1/4W
R1972		1-249-417-11	CARBON	1K	5%	1/4W
R1973		1-249-420-11	CARBON	1.8K	5%	1/4W
R1974		1-247-843-11	CARBON	3.3K	5%	1/4W
			<SWITCH>			
S1972		1-692-431-21	SWITCH, TACTILE			
S1973		1-692-431-21	SWITCH, TACTILE			
S1974		1-692-431-21	SWITCH, TACTILE			
S1975		1-692-431-21	SWITCH, TACTILE			
S1976		1-692-431-21	SWITCH, TACTILE			
S1977		1-692-431-21	SWITCH, TACTILE			
S1978		1-692-431-21	SWITCH, TACTILE			
**********						
	*	A-1400-492-A	H2 BOARD MOUNTED (KV-DR34M69(GE)/DR34M89)			
	*	A-1400-693-A	H2 BOARD MOUNTED (KV-DR34M69THAILAND))			
			**********			
	*	4-055-304-01	HOLDER, LED			
			<CAPACITOR>			
C1911		1-126-947-11	ELECT	47UF	20.00%	16V
C1912		1-102-824-00	CERAMIC	470PF	5.00%	50V

The components identified by shading and mark ⚠ are critical for safety. Replace only with part number specified.

H2 J P

REF NO.		PART NO.	DESCRIPTION			REMARK
			<CONNECTOR>			
CN1651	*	1-580-844-11	PIN, CONNECTOR (POWER)			
CN1652	*	1-580-844-11	PIN, CONNECTOR (POWER)			
CN1907	*	1-564-521-11	PLUG, CONNECTOR 6P			
			<DIODE>			
D1906		8-719-083-18	DIODE SPB-25MVWF			
			<IC>			
IC1901		8-742-134-01	SBX1981-51RP			
			<SWITCH>			
S1651	⚠	1-571-433-31	SWITCH, PUSH (AC POWER)			

****

	*	A-1400-500-A	J BOARD MOUNTED (KV-DR34M69(GE)/DR34M89)			
	*	A-1400-695-A	J BOARD MOUNTED (KV-DR34M69(THAILAND))			
			**********			
			<CAPACITOR>			
C2410		1-126-967-11	ELECT	47UF	20.00%	50V
C2411		1-126-967-11	ELECT	47UF	20.00%	50V
C2412		1-126-967-11	ELECT	47UF	20.00%	50V
C2413		1-102-112-00	CERAMIC	330PF	10.00%	50V
C2414		1-102-112-00	CERAMIC	330PF	10.00%	50V
C2418		1-126-960-11	ELECT	1UF	20.00%	50V
C2419		1-126-960-11	ELECT	1UF	20.00%	50V
			<CONNECTOR>			
CN2410	*	1-564-523-11	PLUG, CONNECTOR 8P			
			<DIODE>			
D2410		8-719-929-15	HZS9.1NB2			
D2411		8-719-929-15	HZS9.1NB2			
D2412		8-719-929-15	HZS9.1NB2			
D2414		8-719-929-15	HZS9.1NB2			
D2415		8-719-929-15	HZS9.1NB2			
			<JACK>			
J2410		1-784-623-11	BLOCK, PIN JACK 5P			
			<RESISTOR>			
R2410		1-247-804-11	CARBON	75	5%	1/4W
R2411		1-247-804-11	CARBON	75	5%	1/4W
R2412		1-247-804-11	CARBON	75	5%	1/4W
R2414		1-247-887-00	CARBON	220K	5%	1/4W
R2415		1-247-807-31	CARBON	100	5%	1/4W
R2417		1-247-887-00	CARBON	220K	5%	1/4W
R2418		1-247-807-31	CARBON	100	5%	1/4W

****

	*	A-1300-299-A	P BOARD COMPLETE (KV-DR34M69(GE)/DR34M89)			
	*	A-1300-450-A	P BOARD COMPLETE (KV-DR34M69(THAILAND))			
			**********			
			<CAPACITOR>			
C8801		1-104-665-11	ELECT	100UF	20.00%	10V
C8802		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8803		1-162-915-11	CERAMIC CHIP	10PF	0.50PF	50V
C8804		1-162-915-11	CERAMIC CHIP	10PF	0.50PF	50V
C8805		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8806		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8807		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8808		1-126-967-11	ELECT	47UF	20.00%	50V
C8809		1-126-967-11	ELECT	47UF	20.00%	50V
C8810		1-104-665-11	ELECT	100UF	20.00%	10V
C8811		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8812		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8813		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8814		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8815		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8816		1-104-665-11	ELECT	100UF	20.00%	10V
C8817		1-104-665-11	ELECT	100UF	20.00%	10V
C8818		1-104-665-11	ELECT	100UF	20.00%	10V
C8819		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8820		1-104-665-11	ELECT	100UF	20.00%	10V
C8821		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8822		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8823		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8824		1-117-720-11	CERAMIC CHIP	4.7UF		10V
C8825		1-117-720-11	CERAMIC CHIP	4.7UF		10V
C8826		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8827		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8828		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8829		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8830		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8831		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8832		1-162-926-11	CERAMIC CHIP	82PF	5.00%	50V
C8834		1-164-004-11	CERAMIC CHIP	0.1UF	10.00%	25V
C8835		1-162-927-11	CERAMIC CHIP	100PF	5.00%	50V
			<CONNECTOR>			
CN8801		1-793-496-11	CONNECTOR, BOARD TO BOARD 20P			
			<DIODE>			
D8801		8-719-081-97	MMDL914T1			
			<FILTER>			
FL8802		1-236-071-11	ENCAPSULATED COMPONENT			
FL8803		1-236-071-11	ENCAPSULATED COMPONENT			
FL8804		1-236-071-11	ENCAPSULATED COMPONENT			

P V2

REF NO.	PART NO.	DESCRIPTION			REMARK
FL8805	1-236-071-11	ENCAPSULATED COMPONENT			
FL8808	1-236-071-11	ENCAPSULATED COMPONENT			
		<IC>			
IC8801	8-759-830-24	SDA9588XB23			
IC8802	8-759-460-72	BA033FP-E2			
		<COIL>			
L8801	1-414-856-11	INDUCTOR	10UH		
L8806	1-412-537-31	INDUCTOR	100UH		
L8807	1-414-856-11	INDUCTOR	10UH		
L8809	1-408-412-00	INDUCTOR	18UH		
		<TRANSISTOR>			
Q8801	8-729-010-05	MSB709-RT1			
Q8802	8-729-010-05	MSB709-RT1			
Q8803	8-729-010-05	MSB709-RT1			
Q8804	8-729-010-05	MSB709-RT1			
Q8805	8-729-010-05	MSB709-RT1			
Q8806	8-729-230-49	2SC2712-YG			
Q8807	8-729-230-49	2SC2712-YG			
Q8808	8-729-010-05	MSB709-RT1			
Q8809	8-729-010-05	MSB709-RT1			
Q8810	8-729-010-05	MSB709-RT1			
Q8811	8-729-010-05	MSB709-RT1			
Q8812	8-729-230-49	2SC2712-YG			
		<RESISTOR>			
R8801	1-216-089-91	RES-CHIP	47K	5%	1/10W
R8802	1-216-089-91	RES-CHIP	47K	5%	1/10W
R8803	1-216-025-11	RES-CHIP	100	5%	1/10W
R8804	1-216-025-11	RES-CHIP	100	5%	1/10W
R8805	1-216-295-91	SHORT CHIP	0		
R8806	1-216-041-00	RES-CHIP	470	5%	1/10W
R8807	1-216-041-00	RES-CHIP	470	5%	1/10W
R8808	1-216-041-00	RES-CHIP	470	5%	1/10W
R8809	1-216-025-11	RES-CHIP	100	5%	1/10W
R8810	1-216-025-11	RES-CHIP	100	5%	1/10W
R8811	1-216-639-11	METAL CHIP	330	0.5%	1/10W
R8812	1-216-025-11	RES-CHIP	100	5%	1/10W
R8815	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8816	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8817	1-216-041-00	RES-CHIP	470	5%	1/10W
R8818	1-216-025-11	RES-CHIP	100	5%	1/10W
R8819	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8820	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8821	1-216-025-11	RES-CHIP	100	5%	1/10W
R8822	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8823	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8824	1-216-025-11	RES-CHIP	100	5%	1/10W
R8825	1-216-041-00	RES-CHIP	470	5%	1/10W
R8826	1-216-025-11	RES-CHIP	100	5%	1/10W
R8827	1-216-025-11	RES-CHIP	100	5%	1/10W
R8828	1-216-025-11	RES-CHIP	100	5%	1/10W
R8829	1-216-025-11	RES-CHIP	100	5%	1/10W
R8830	1-216-025-11	RES-CHIP	100	5%	1/10W
R8831	1-216-089-91	RES-CHIP	47K	5%	1/10W
R8832	1-216-089-91	RES-CHIP	47K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION			REMARK
R8833	1-216-089-91	RES-CHIP	47K	5%	1/10W
R8834	1-216-089-91	RES-CHIP	47K	5%	1/10W
R8835	1-216-047-91	RES-CHIP	820	5%	1/10W
R8836	1-216-047-91	RES-CHIP	820	5%	1/10W
R8837	1-216-025-11	RES-CHIP	100	5%	1/10W
R8838	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R8839	1-216-053-00	RES-CHIP	1.5K	5%	1/10W
R8840	1-216-025-11	RES-CHIP	100	5%	1/10W
R8841	1-216-025-11	RES-CHIP	100	5%	1/10W
R8842	1-216-097-11	RES-CHIP	100K	5%	1/10W
R8843	1-216-041-00	RES-CHIP	470	5%	1/10W
R8844	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8845	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8846	1-216-041-00	RES-CHIP	470	5%	1/10W
R8847	1-216-121-11	RES-CHIP	1M	5%	1/10W
R8848	1-216-073-91	RES-CHIP	10K	5%	1/10W
R8849	1-216-049-11	RES-CHIP	1K	5%	1/10W
R8850	1-216-051-00	RES-CHIP	1.2K	5%	1/10W
		<CRYSTAL>			
X8801	1-781-946-21	VIBRATOR, CRYSTAL			

****

* A-1400-711-A V2 BOARD MOUNTED
(KV-DR34M69(GE)/DR34M89)
* A-1400-847-A V2 BOARD MOUNTED
(KV-DR34M69(THAILAND))
****

		<CAPACITOR>			
C5802	1-163-038-91	CERAMIC CHIP	0.1UF		25V
		(KV-DR34M69(GE)/DR34M89)			
C5802	1-164-360-11	CERAMIC CHIP	0.1UF		16V
		(KV-DR34M69(THAILAND))			
C5805	1-163-038-91	CERAMIC CHIP	0.1UF		25V
		(KV-DR34M69(GE)/DR34M89)			
C5805	1-164-360-11	CERAMIC CHIP	0.1UF		16V
		(KV-DR34M69(THAILAND))			
C5806	1-163-038-91	CERAMIC CHIP	0.1UF		25V
		(KV-DR34M69(GE)/DR34M89)			
C5806	1-164-360-11	CERAMIC CHIP	0.1UF		16V
		(KV-DR34M69(THAILAND))			
C5815	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C5816	1-126-963-11	ELECT	4.7UF	20.00%	50V
C5817	1-107-826-11	CERAMIC CHIP	0.1UF	10.00%	16V
C5818	1-162-924-11	CERAMIC CHIP	56PF	5.00%	50V
C5820	1-162-924-11	CERAMIC CHIP	56PF	5.00%	50V
C5821	1-163-038-91	CERAMIC CHIP	0.1UF		25V
		(KV-DR34M69(GE)/DR34M89)			
C5821	1-164-360-11	CERAMIC CHIP	0.1UF		16V
		(KV-DR34M69(THAILAND))			
C5822	1-162-964-11	CERAMIC CHIP	0.001UF	10.00%	50V
C5823	1-126-963-11	ELECT	4.7UF	20.00%	50V
C5826	1-126-963-11	ELECT	4.7UF	20.00%	50V
C5830	1-163-038-91	CERAMIC CHIP	0.1UF		25V
		(KV-DR34M69(GE)/DR34M89)			
C5830	1-164-360-11	CERAMIC CHIP	0.1UF		16V
		(KV-DR34M69(THAILAND))			
C5831	1-126-933-11	ELECT	100UF	20.00%	16V
C5835	1-163-038-91	CERAMIC CHIP	0.1UF		25V
		(KV-DR34M69(GE)/DR34M89)			

V2 VM

REF NO.	PART NO.	DESCRIPTION			REMARK
C5835	1-164-360-11	CERAMIC CHIP (KV-DR34M69(THAILAND))	0.1UF		16V
C5837	1-126-933-11	ELECT	100UF	20.00%	16V
C5852	1-162-995-11	CERAMIC CHIP	0.022UF		50V
C5853	1-126-963-11	ELECT	4.7UF	20.00%	50V
		<CONNECTOR>			
CN5801 *	1-774-812-11	CONNECTOR, BOARD TO BOARD 7P			
CN5803 *	1-774-812-11	CONNECTOR, BOARD TO BOARD 7P			
		<DIODE>			
D5802	8-719-050-37	DIODE M1MA152WA-T1			
D5803	8-719-045-99	RD2.2M-T1B			
		<FERRITE BEAD>			
FB5801	1-410-397-21	FERRITE	1.1UH		
FB5803	1-410-397-21	FERRITE	1.1UH		
FB5804	1-410-397-21	FERRITE	1.1UH		
FB5805	1-410-397-21	FERRITE	1.1UH		
		<IC>			
IC5801	6-700-607-01	IC SAA5264PS/M3			
IC5802	8-759-828-44	NJM2870F33(TE2)			
		<CHIP CONDUCTOR>			
JR5802	1-216-295-91	SHORT CHIP	0		
JR5803	1-216-295-91	SHORT CHIP	0		
JR5804	1-216-295-91	SHORT CHIP	0		
JR5805	1-216-295-91	SHORT CHIP	0		
JR5811	1-216-041-00	RES-CHIP	470	5%	1/10W
JR5812	1-216-041-00	RES-CHIP	470	5%	1/10W
JR5813	1-216-041-00	RES-CHIP	470	5%	1/10W
		<TRANSISTOR>			
Q5801	8-729-230-49	2SC2712-YG			
Q5803	8-729-230-49	2SC2712-YG			
Q5810	8-729-230-49	2SC2712-YG			
		<RESISTOR>			
R5821	1-216-082-00	RES-CHIP	24K	5%	1/10W
R5822	1-216-025-11	RES-CHIP	100	5%	1/10W
R5828	1-216-025-11	RES-CHIP	100	5%	1/10W
R5829	1-216-025-11	RES-CHIP	100	5%	1/10W
R5830	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R5831	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R5839	1-216-655-11	METAL CHIP	1.5K	0.5%	1/10W
R5841	1-216-025-11	RES-CHIP	100	5%	1/10W
R5842	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R5843	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R5845	1-216-049-11	RES-CHIP	1K	5%	1/10W
R5846	1-216-049-11	RES-CHIP	1K	5%	1/10W
R5851	1-216-057-00	RES-CHIP	2.2K	5%	1/10W
R5853	1-216-830-11	RES-CHIP	5.6K	5%	1/10W
R5857	1-216-081-00	RES-CHIP	22K	5%	1/10W

REF NO.	PART NO.	DESCRIPTION			REMARK
R5859	1-216-029-00	RES-CHIP	150	5%	1/10W
R5860	1-216-029-00	RES-CHIP	150	5%	1/10W
R5862	1-216-029-00	RES-CHIP	150	5%	1/10W
R5864	1-216-041-00	RES-CHIP	470	5%	1/10W
R5866	1-216-449-11	METAL OXIDE	56	5%	2W
R5871	1-216-037-00	RES-CHIP	330	5%	1/10W
R5878	1-216-073-91	RES-CHIP	10K	5%	1/10W
R5884	1-216-295-91	SHORT CHIP	0		
R5892	1-216-025-11	RES-CHIP	100	5%	1/10W
R5899	1-216-025-11	RES-CHIP	100	5%	1/10W
		<CRYSTAL>			
X5801	1-578-774-11	VIBRATOR, CRYSTAL			

****

*	A-1400-499-A	VM BOARD MOUNTED (KV-DR34M69(GE)/DR34M89)			
*	A-1400-694-A	VM BOARD MOUNTED (KV-DR34M69(THAILAND))			
		**********			
	4-382-854-11	SCREW (M3X10), P, SW (+)			
		<CAPACITOR>			
C5401	1-126-935-11	ELECT	470UF	20.00%	16V
C5402	1-113-619-11	CERAMIC CHIP	0.47UF		10V
C5403	1-126-935-11	ELECT	470UF	20.00%	6.3V
C5405	1-126-933-11	ELECT	100UF	20.00%	16V
C5406	1-126-935-11	ELECT	470UF	20.00%	6.3V
C5407	1-107-364-11	MYLAR	0.01UF	10.00%	200V
C5408	1-107-364-11	MYLAR	0.01UF	10.00%	200V
C5409	1-107-649-11	ELECT	2.2UF	20.00%	250V
C5410	1-130-471-00	MYLAR	0.001UF	5.00%	50V
C5411	1-130-471-00	MYLAR	0.001UF	5.00%	50V
C5412	1-126-935-11	ELECT	470UF	20.00%	16V
C5413	1-107-648-91	ELECT	100UF	20.00%	160V
C5415	1-104-999-11	MYLAR	0.1UF	10.00%	200V
C5417	1-101-821-00	CERAMIC	0.0022UF		500V
C5418	1-107-638-11	ELECT	33UF	20.00%	160V
		<CONNECTOR>			
CN5401 *	1-770-723-11	CONNECTOR, BOARD TO BOARD 8P			
CN5402	1-764-334-11	PLUG, CONNECTOR 11P			
		<DIODE>			
D5400	8-719-404-50	MA111-TX			
D5401	8-719-510-02	D1NS4 (KV-DR34M69(GE)/DR34M89)			
D5401	8-719-210-21	11EQS04 (KV-DR34M69(THAILAND))			
D5402	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)			
D5402	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND))			
D5403	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)			
D5403	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND))			
D5404	8-719-911-19	1SS119-25 (KV-DR34M69(GE)/DR34M89)			
D5404	8-719-991-33	1SS133T-77 (KV-DR34M69(THAILAND))			
D5405	8-719-110-56	RD22ES-B1			

VM

REF NO.	PART NO.	DESCRIPTION			REMARK
D5406	8-719-110-56	RD22ES-B1			
		<COIL>			
L5400	1-412-525-31	INDUCTOR	10UH		
		<FILTER>			
LP5401	* 4-042-408-01	PIN, COATING LEAD			
		<TRANSISTOR>			
Q5400	8-729-119-78	2SC2785-HFE			
Q5401	8-729-119-78	2SC2785-HFE			
Q5402	8-729-119-78	2SC2785-HFE			
Q5403	8-729-119-78	2SC2785-HFE			
Q5404	8-729-119-76	2SA1175-HFE			
Q5405	8-729-119-76	2SA1175-HFE			
Q5406	8-729-045-05	2SA2005			
Q5407	8-729-045-04	2SC5511			
		<RESISTOR>			
R5401	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R5402	1-249-415-11	CARBON	680	5%	1/4W
R5403	1-247-739-11	CARBON	100	5%	1/2W
R5404	1-249-418-11	CARBON	1.2K	5%	1/4W
R5405	1-216-864-11	SHORT CHIP	0		
R5406	1-216-065-91	RES-CHIP	4.7K	5%	1/10W
R5407	1-249-401-11	CARBON	47	5%	1/4W
R5408	1-247-807-31	CARBON	100	5%	1/4W
R5409	1-249-409-11	CARBON	220	5%	1/4W
R5410	1-249-401-11	CARBON	47	5%	1/4W
R5411	1-249-401-11	CARBON	47	5%	1/4W
R5412	1-249-429-11	CARBON	10K	5%	1/4W
R5413	1-249-414-11	CARBON	560	5%	1/4W
R5414	1-249-432-11	CARBON	18K	5%	1/4W
R5415	1-247-739-11	CARBON	100	5%	1/2W
R5416	1-249-385-11	CARBON	2.2	5%	1/4W
R5417	1-249-432-11	CARBON	18K	5%	1/4W
R5418	1-249-414-11	CARBON	560	5%	1/4W
R5419	1-249-421-11	CARBON	2.2K	5%	1/4W
R5420	1-249-421-11	CARBON	2.2K	5%	1/4W
R5421	1-249-385-11	CARBON	2.2	5%	1/4W
R5422	1-249-405-11	CARBON	100	5%	1/4W
R5423	1-215-915-11	METAL OXIDE	470	5%	3W
R5424	1-249-395-11	CARBON	15	5%	1/4W
R5425	1-216-017-91	RES-CHIP	47	5%	1/10W
R5427	1-249-395-11	CARBON	15	5%	1/4W

****

ACCESSORIES AND PACKING MATERIALS
****

	3-701-910-00	SCREW, SPECIAL (DIA. 3.8X20)
	4-065-210-01	JOINT (KV-DR34M69(GE)/DR34M89)
*	4-074-148-01	BAG, PROTECTION (KV-DR34M69(GE)/DR34M89)
*	4-054-764-01	BAG,PROTECTION (KV-DR34M69(THAILAND))
*	4-087-316-01	CUSHION, UPPER (KV-DR34M69(GE)/DR34M89)
*	4-088-645-01	CUSHION, UPPER (KV-DR34M69(THAILAND))
*	4-087-317-01	CUSHION, LOWER (KV-DR34M69(GE)/DR34M89)
*	4-088-646-01	CUSHION, LOWER (KV-DR34M69(THAILAND))
*	4-087-318-01	INDIVIDUAL CARTON (KV-DR34M69(GE)/DR34M89)
*	4-088-644-01	INDIVIDUAL CARTON (KV-DR34M69(THAILAND))
*	4-087-319-01	TRAY (KV-DR34M69(GE)/DR34M89)
*	4-088-647-01	TRAY (KV-DR34M69(THAILAND))
	4-392-003-11	BAND, HOLD (KV-DR34M69(GE)/DR34M89)
	4-392-003-21	BAND, HOLDING (KV-DR34M69(THAILAND))
	4-392-004-11	CLIP (KV-DR34M69(GE)/DR34M89)
	4-059-705-01	CLIP (KV-DR34M69(THAILAND))
	4-088-512-11	MANUAL, INSTRUCTION (KV-DR34M69(GE))
	4-088-356-11	MANUAL, INSTRUCTION (KV-DR34M69(THAILAND))
	4-088-298-11	MANUAL, INSTRUCTION (KV-DR34M89)
	1-569-008-21	ADAPTOR, CONVERSION 2P (KV-DR34M89)

****

REMOTE COMMANDER
****

	1-477-313-11	REMOTE COMMANDER (RM-991)
	4-079-833-01	BATTERY COVER REMOTE COMMANDER

Sony Corporation
Sony Technology Malaysia Sdn. Bd.
Visual Products

9-872-307-01

English
© 2002.5

SONY

4-088-512-**11** (1)

Trinitron Color TV

Operating Instructions — GB

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

使用說明書 — CT

- 使用本電視機之前請先詳細閱讀此手冊，並妥善保存以備日後用作參考。

Panduan Pengendalian — MY

- Sebelum mengendalikan unit, sila baca buku panduan ini dengan teliti dan simpan untuk rujukan masa depan.

FD Trinitron WEGA

KV-DR34
KV-DR29

© 2002 Sony Corporation

M69

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

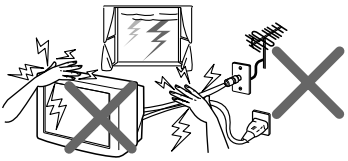

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

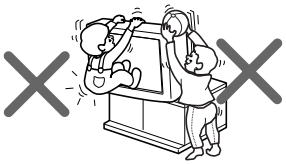

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

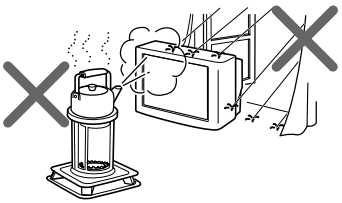

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

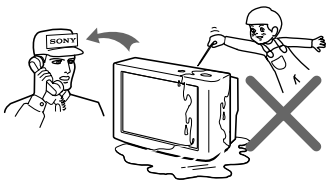

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

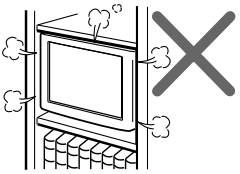

Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

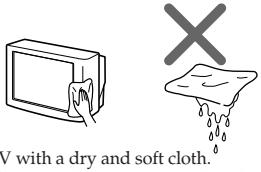

Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.

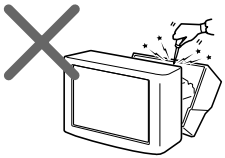

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

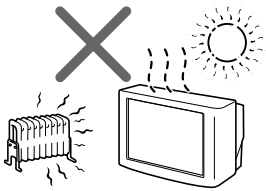

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

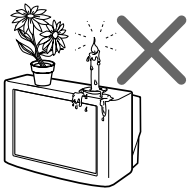

Do not place any objects on the TV.

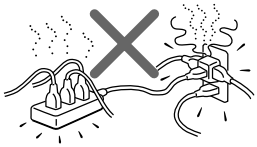

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

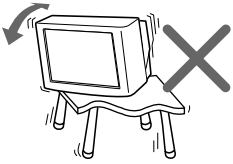

Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

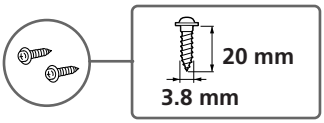

screws

clamps



band

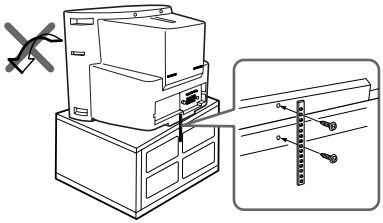

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

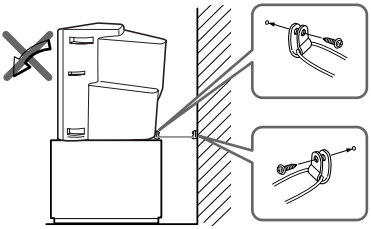

(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

or

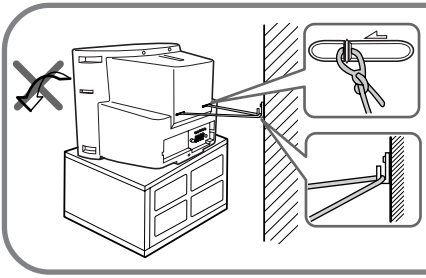

(1) Attach each end of a cord or chain to the provided holders at the rear of your TV.
(2) Securely fix the attached cord or chain to a wall or pillar using an attachment which can support the TV set weight.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

Getting Started **6**
Setting up your TV ("INITIAL SETUP") **7**

Overview of Controls

TV front and rear panels **8**
Remote control **9**

Advanced Operations

Selecting the picture and sound modes **11**
Viewing higher quality pictures with DRC-MF **12**
Viewing the picture in wide mode .. **12**
Watching Picture-in-Picture (PIP) ... **13**
Selecting a TV program using PIP .. **14**
Listening with surround sound **14**
Setting the timers **15**
Enjoying stereo or bilingual programs **16**
Viewing Teletext **17**

Menu Adjustment

Introducing the menu system **18**
Changing the "PICTURE" setting ... **21**
Changing the "SOUND" setting **23**
Changing the Picture-in-Picture ("PIP") setting **25**
Changing the "SETUP" setting **26**
Changing the Channel Preset ("CH PRESET") setting **28**

Additional Information

Connecting optional components ... **31**
Troubleshooting **33**
Specifications ..... **Back cover**

GB

■ Getting Started

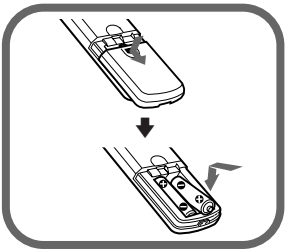

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

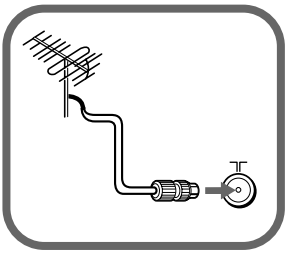

Step 2

Connect the antenna cable (not supplied) to ⊤ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 31).

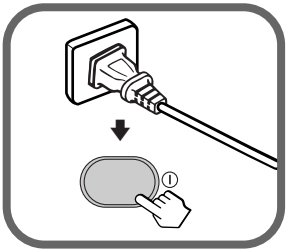

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

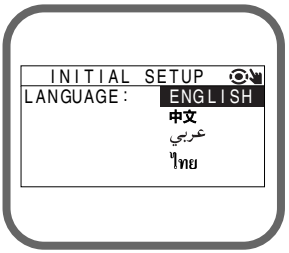

Step 4

Set up the TV by following the instructions of the "INITIAL SETUP"menu (see page 7).

■ Setting up your TV ("INITIAL SETUP")

When you turn on your TV for the first time, the "INITIAL SETUP" menu will appear. This menu allows you to change the menu language, adjust the picture position and preset the TV channels automatically.

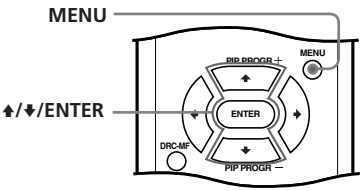

1 Press ↑ or ↓ to select the desired menu language (e.g.,"ENGLISH"), then press ENTER.

The selected menu language appears.

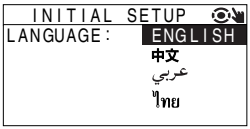

2 If the "PIC ROTATION" bar is slanted, press ↑ or ↓ to adjust it, then press ENTER.

If no adjustment is necessary, then press ENTER.

The ⊞ or ⊟ icon on the screen flashes while adjusting.

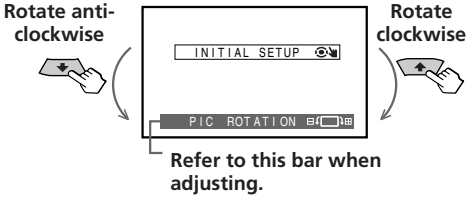

3 Press ↑ or ↓ to select "YES", then press ENTER to preset the channels automatically (see page 28).

The screen will indicate automatic presetting is in progress.

To skip automatic channel presetting, select "NO", then press ENTER.

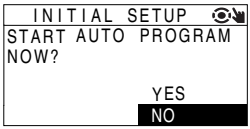

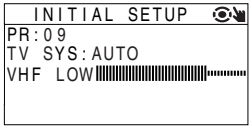

4 Press ↑ or ↓ to select "NO", then press ENTER. The "INITIAL SETUP" menu will not appear again the next time you turn on the TV by pressing ①.

To allow this menu to appear again, select "YES", then press ENTER.

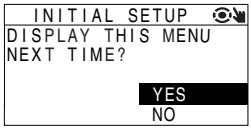

Tip

- You can immediately go to the end of the "INITIAL SETUP" menu by pressing MENU.
- You can also set up your TV using the menu system (see page 18).

■ TV front and rear panels

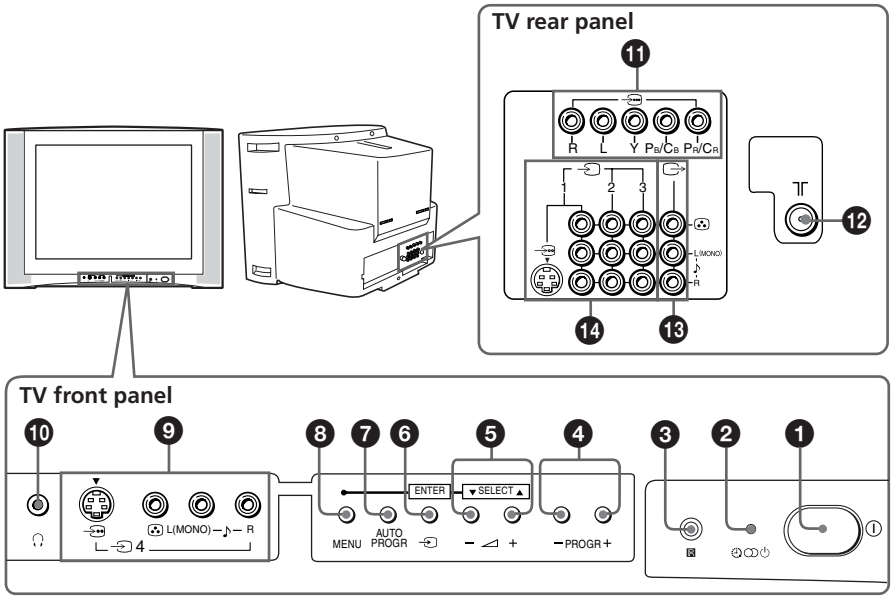

Button/Terminal	Function	Page
❶ ⏻	Turn off or turn on the TV.	–
❷ ⏻	Standby indicator.	–
❷ 🕘	Wake Up indicator.	15
❷ ◯◯	Stereo/bilingual indicator.	16
❸	Remote control sensor.	–
❹ PROGR +/–	Select program number.	–
❺ +/–	Adjust volume.	–
❻	Select TV or video input.	–
❼ AUTO PROGR	Preset channels automatically.	–
Menu operations		
❺ SELECT ▼/▲	Select and adjust items	20
❻ ENTER	Confirm selected items	20
❽ MENU	Display or cancel the menu	20
❾ 4	Video input terminal 4.	31
❿	Headphone jack.	–
⓫	Component video input terminal.	32
⓬	Antenna input terminal.	31
⓭	Monitor output terminal.	31
⓮ 1, 2, 3	Video input terminal 1, 2, 3.	31

■ Remote control

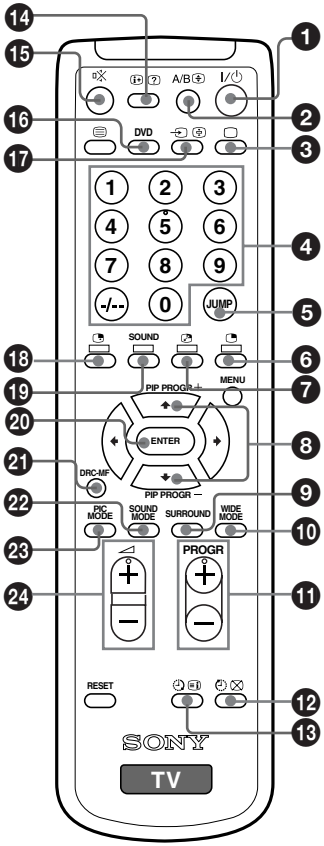

Button	Function	Page
❶ I/⏻	Turn off temporarily or turn on the TV.	–
❸ ▭	Display the TV input.	–
❹ 0 – 9, -/--	Input numbers.	–
❺ JUMP	Jump to previous program number.	–
❾ SURROUND	Select surround mode.	14
❿ WIDE MODE	Select wide-mode (16:9).	12
⓫ PROGR +/–	Select program number.	–
⓮ i+	Display on-screen information.	–
⓯ 🔇	Mute the sound.	–
⓰ DVD	Select component video input.	32
⓱ ▭	Select TV or video input.	31
㉑ DRC-MF	Select DRC-MF mode.	12
㉒ SOUND MODE	Select sound mode.	11
㉓ PIC MODE	Select picture mode.	11
㉔ +/–	Adjust volume.	–
Timer operations		
⓬	Set TV to turn off automatically.	15
⓭	Set TV to turn on automatically.	15
PIP operations (yellow label)		
❻	Display a sub screen.	13
❼	Swap main and sub screens.	13
❽ PIP PROGR +/ PIP PROGR –	Display and change programs in the sub screen.	13,14
⓲	Select a video input in the sub screen.	13
⓳ SOUND	Swap sound between main and sub screen.	13
⓴ ENTER	Change sub screen to main screen.	14
Stereo/bilingual operations		
❷ A/B	Select stereo/bilingual mode.	16

continue

continued

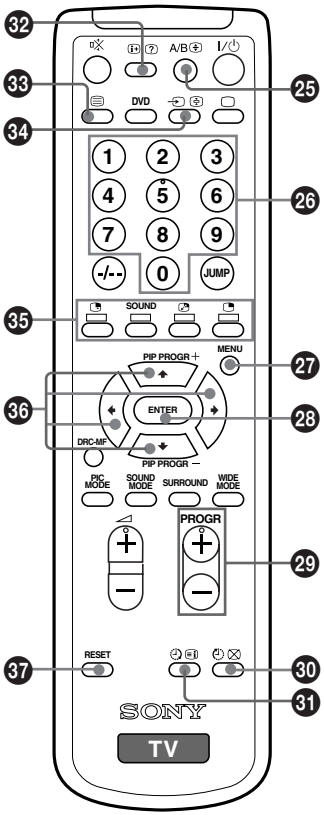

Button	Function	Page
Menu operations		
27 MENU	Display or cancel the menu.	20
28 ENTER	Confirm selected items.	20
36 ↑, ↓, ←, →	Select and adjust items.	20
Teletext operations (green label)		
25	Enlarge the Teletext display.	17
26 0 – 9	Input Teletext page number	17
29 PROGR +/–	Display the next or previous page.	17
30	Show TV screen while waiting for Teletext page.	17
31	Display Teletext service contents.	17
32	Reveal concealed information.	17
33	Display Teletext broadcast.	17
34	Stop Teletext display from scrolling.	17
35 (red, green, yellow, blue)	Access a FASTEXT menu.	17
37 RESET	Set TV to factory setting.	33

Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the “PERSONAL” option.

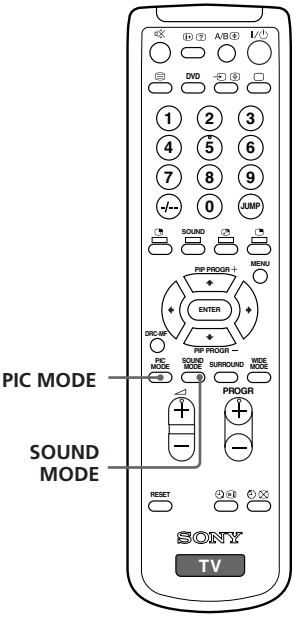

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
“DYNAMIC”	view high contrast pictures.
“STANDARD”	view normal pictures.
“HI-FINE”	view higher density pictures with mild contrast.
“PERSONAL”	receive the last adjusted picture setting from the “ADJUST” option in the “PICTURE” menu (see page 22).

Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

Select	To
“♪ DYNAMIC”	listen to dynamic and clear sound that emphasizes both the low and high tones.
“♪ DRAMA”	listen to sound that emphasizes voice and high tones.
“♪ SOFT”	listen to soft sound.
“♪ PERSONAL”	receive the last adjusted sound setting from the “ADJUST” option in the “SOUND” menu (see page 24).

■ Viewing higher quality pictures with DRC-MF

The Digital Reality Creation-Multi Function (DRC-MF) feature allows you to enjoy higher quality pictures on your TV. You can use the DRC-MF button to select "DRC1250" or "DRC PROGRESSIVE".

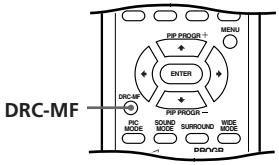

Select	To
"DRC1250"	view super real (higher density) pictures.
"DRC PROGRESSIVE"	reduce jitter of any small areas or scanning lines (e.g., letters or the edge of objects) on the screen.

Note

- The DRC-MF mode is not selectable when the "GAME MODE" or Picture-in-Picture ("PIP") mode is turned on.

The DRC-MF logo (DRC-MF Digital Reality Creation) and "DRC-MF" are trademarks of Sony Corporation.

■ Viewing the picture in wide mode

When receiving a wide-mode (16:9) signal, the picture will appear "squeezed" (compressed) on your screen. Use the WIDE MODE button to view the picture with the optimal effect.

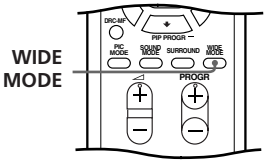

Select	To
"ON"	view the picture in wide-mode (16:9).
"OFF"	cancel wide-mode (16:9).

■ Watching Picture-in-Picture (PIP)

With the PIP feature, you can display two different TV programs or video input at the same time by using the button.

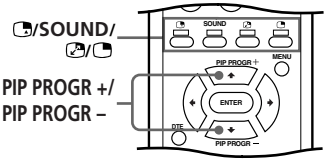

To	Press
Display a sub screen	. To cancel the sub screen, press the button again.
Change a program number in the sub screen	PIP PROGR + or PIP PROGR –.
Select a video input in the sub screen	.
Swap pictures between the main and sub screens	.
Swap sound between the main and sub screens A "♪" symbol will appear next to the program number or video input display to indicate which screen you are hearing.	SOUND.

Notes

- The DRC-MF mode is not selectable when PIP is turned on.
- The picture and sound from the ⇨ (monitor output) terminals will always be from the main screen, even when you select the sub screen sound by pressing SOUND (see page 31).

■ Selecting a TV program using PIP

You can select your desired TV program directly from the PIP sub screen by using PIP PROGR +/– buttons.

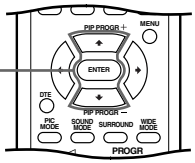

1 Press PIP PROGR +/– until the desired program appears in the sub screen.

2 Press ENTER to change the sub screen program to the main screen.

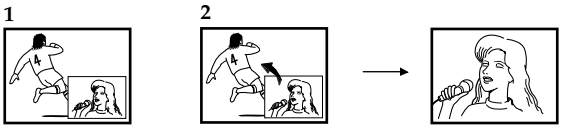

■ Listening with surround sound

You can use the SURROUND button to listen to the sound effects of a concert hall or movie theater.

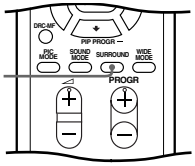

Select	To
"TruSurround"	listen to the surround sound that spreads out to the rear of a room.
"SIMULATED"	listen to monaural sound with a stereo-like effect.
"OFF"	cancel surround sound.

The surround of your TV is categorized as TruSurround.

TruSurround™ is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents.

■ Setting the timers

You can set your TV to turn on and off automatically by using the WAKE UP and SLEEP timers respectively.

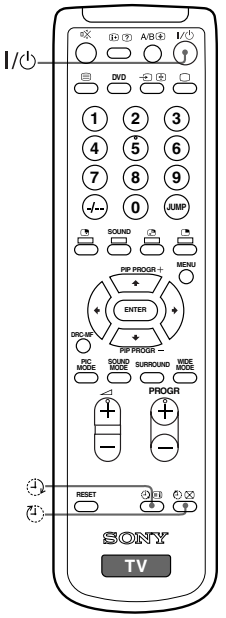

Setting the Wake Up timer

1 Press ⏲ until the desired period of time appears on the screen.

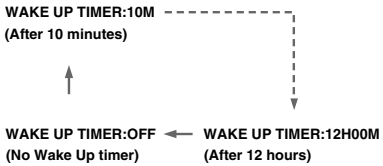

The Wake Up timer starts immediately after you have set it.

2 Select the program number or video input you want to wake up to.

3 Press I/⏻, or set the Sleep timer if you want the TV to turn off automatically.

The ⏲ indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press ⏲ until the desired period of time appears on the screen.

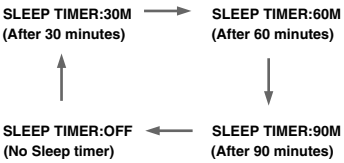

The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by turning off the TV's main power.
- If no buttons are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

■ Enjoying stereo or bilingual programs

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

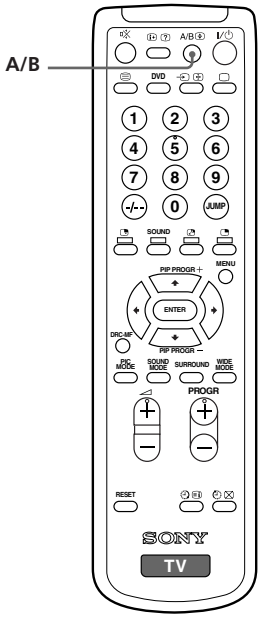

When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → MONO (Regular sound)
NICAM bilingual	NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound)
NICAM monaural	NICAM MAIN (Main sound) → MONO (Regular sound)

When receiving an A2 program

Broadcasting	On-screen display (Selected sound)
A2 stereo	STEREO (Stereo sound) → MONO (Regular sound)
A2 bilingual	MAIN (Main sound) → SUB (Sub sound)

Notes

- If the stereo sound is noisy when receiving a stereo program, select "MONO". The sound becomes monaural, but the noise is reduced.
- If the sound is distorted when receiving a monaural program through ⅂Γ (antenna input), press A/B repeatedly until "MONO" appears on the screen. To cancel the monaural sound setting, press A/B again until "AUTO" appears on the screen.
- Your TV can only receive monaural sound when you select the PIP sub screen sound by pressing SOUND (see page 13).

Viewing Teletext

Some TV stations broadcast an information service called Teletext which allows you to receive various information, such as stock market reports and news.

You can use the buttons on the remote to view Teletext.

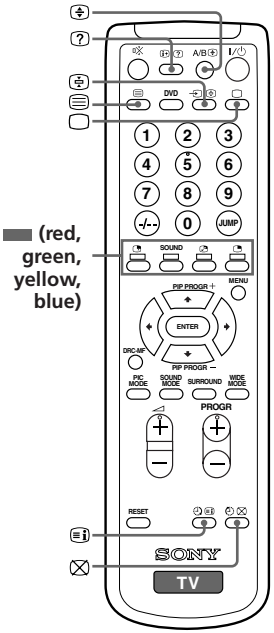

To	Do this
display a Teletext page on the TV picture	Press ☰. Each time you press ☰, the screen changes as follows: Teletext → Teletext and TV → TV. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.
check the contents of a Teletext service	Press ⓘ. An overview of the Teletext contents, including page numbers, appears on the screen.
select a Teletext page	Press the number buttons to enter the three-digit page number of the desired Teletext page. If you make a mistake, reenter the correct page number. To access the next or previous page, press PROGR +/–.
hold (pause) a Teletext display	Press ⊕ to display the symbol "⊕" at the top left corner of the screen. To resume normal Teletext viewing, press ⊕ or ☰.
reveal concealed information (e.g., an answer to a quiz)	Press ?. To conceal the information, press the button again.
enlarge the Teletext display	Press ⊕. Each time you press ⊕, the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.
stand by for a Teletext page while watching a TV program	1 Enter the Teletext page number that you want to refer to, then press ⊠. 2 When the page number is displayed, press ☰ to show the text.
select a FASTEXT menu or the colored boxes	Press ■ (red, green, yellow and blue) that corresponds to the desired menu or page number.
turn off Teletext	Press ▭.

Note

- The FASTEXT feature can be used only when the FASTEXT broadcast is available.

■ Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.

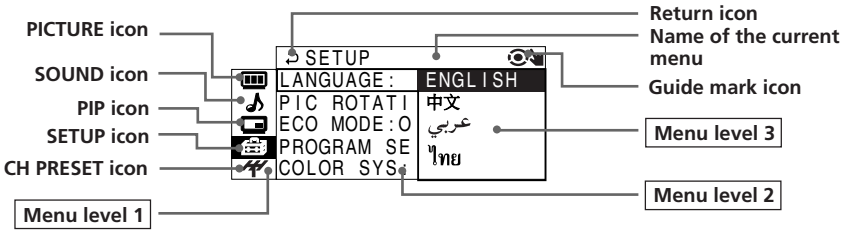

Level 1	Level 2	Level 3/Function	Page
"PICTURE"	"DRC-MF"	Select the "DRC-MF" mode: "DRC1250" → "PROGRESSIVE"	21
	"PICTURE MODE"	Select the picture mode: "DYNAMIC" → "STANDARD" → "HI-FINE" → "PERSONAL" → "ADJUST"	
	"ADJUST"	Adjust the "PERSONAL" option: "PICTURE" → "COLOR" → "BRIGHT" → "HUE" → "SHARP"	
	"3D-NR"	Reduce picture noise: "ON" → "OFF"	
	"WIDE MODE"	Change the picture size.	
	"GAME MODE"	Adjust the picture settings for video games.	
"SOUND"	"SOUND MODE"	Select the sound mode: "DYNAMIC" → "DRAMA" → "SOFT" → "PERSONAL" → "ADJUST"	23
	"ADJUST"	Adjust the "PERSONAL" option: "BASS" → "TREBLE" → "BALANCE" → "BBE"*	
	"SURROUND"	Select the "SURROUND" mode: "TruSurround" → "SIMULATED" →"OFF"	
	"INTELLIGENT VOL"	Adjust volume automatically.	
"PIP"	"POSITION"	Change the position of the sub screen.	25
	"PIP"	Display a sub screen within the main picture.	
	"SWAP"	Exchange pictures between main screen and sub screen.	

Level 1	Level 2	Level 3/Function	Page
"SETUP"	"LANGUAGE"	Change the menu language: "ENGLISH" → "中文"(Chinese) → "عربي"(Arabic) → "ไทย"(Thai)	26
	"PIC ROTATION"	Adjust the picture position.	
	"ECO MODE"	Reduce power consumption of your TV.	
	"PROGRAM SETUP"	Adjust each program number settings.	
	"COLOR SYS"	Select the color system: "AUTO" →" PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43"	
"CH PRESET"	"AUTO PROGRAM"	Preset channels automatically.	28
	"MANUAL PROGRAM"	Preset channels manually.	
	"TV SYS"	Select the TV system: "B/G" → "I" → "D/K" → "M"	

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE symbol are the trademarks of BBE Sound, Inc.

continue

continued

How to use the menu

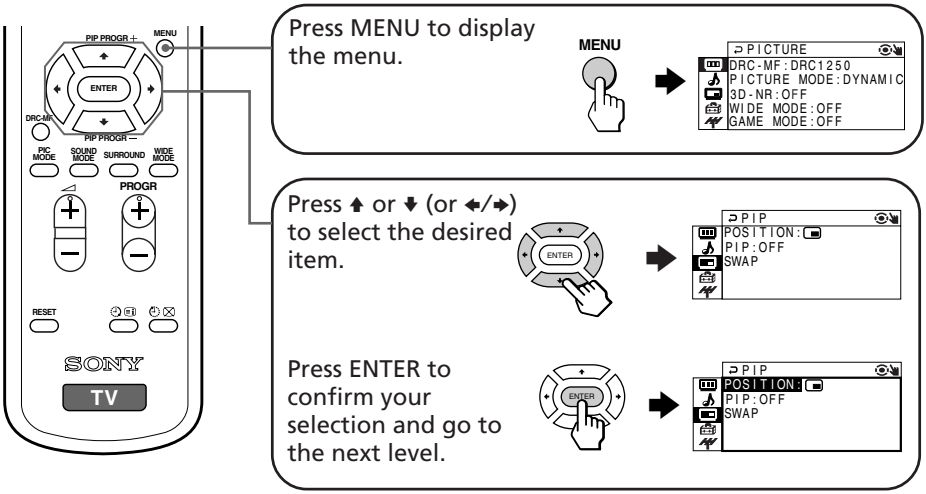

Other menu operations

To	Press
Adjust the setting value	▲, ▼, ◄ or ►.
Move to the next/previous menu level	◄ or ►.
Cancel the menu	MENU.

Tips

- If you want to exit from Menu level 2 to Menu level 1, press ▲ or ▼ until the return icon (⮌) is highlighted, then press ENTER.
- Some of the menu items can be operated directly using the remote buttons.
- The MENU, ENTER, and SELECT ▼/▲ buttons on the TV can also be used for the operations above.

Front of TV

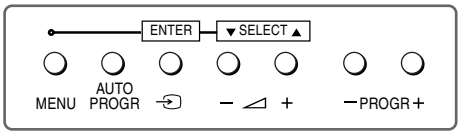

■ Changing the “PICTURE” setting

The “PICTURE” menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the “PICTURE” icon ( ) is selected, then press ENTER.

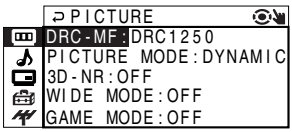

3 Press ↑ or ↓ to select the desired item (e.g., “DRC-MF”), then press ENTER.

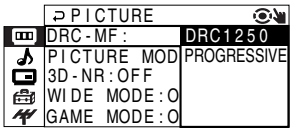

Select	To
“DRC-MF”	choose either “DRC1250” or “PROGRESSIVE” (see page 12).
“PICTURE MODE”	choose either “DYNAMIC”, “STANDARD”, “HI-FINE”, “PERSONAL”*, or “ADJUST” (see page 11).
“3D-NR”	adjust picture signal automatically to reduce noise. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“WIDE MODE”	choose either “ON” or “OFF” (see page 12).
“GAME MODE”	adjust the picture setting that is suitable to view video games. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted picture settings from the “ADJUST” option (see page 22).

Notes

- “GAME MODE” is available only when receiving signals through (video input), (S video input), or (component video input).
- The DRC-MF mode is not selectable when GAME MODE is turned on.

continue

continued

Adjusting the "ADJUST" items under "PICTURE MODE"

1 Press ↑ or ↓ to select the desired item (e.g.,"COLOR"), then press ENTER.

2 Adjust the value according to the following table, then press ENTER.

For	Press ↓ or ← to	Press ↑ or → to
"PICTURE"	decrease picture contrast.	increase picture contrast.
"COLOR"	decrease color intensity.	increase color intensity.
"BRIGHT"	darken the picture.	brighten the picture.
"HUE"	increase red picture tones.	increase green picture tones.
"SHARP"	soften the picture.	sharpen the picture.

Notes

- "HUE" can be adjusted for the NTSC color system only.
- Reducing sharpness ("SHARP") can also reduce picture noise.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

■ Changing the “SOUND” setting

The “SOUND” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press ↑ or ↓ to select the “SOUND” icon (♪), then press ENTER.

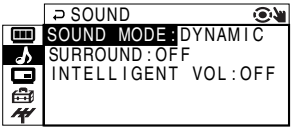

3 Press ↑ or ↓ to select the desired item (e.g., “SOUND MODE”), then press ENTER.

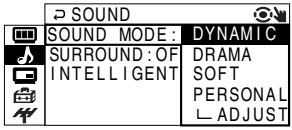

Select	To
“SOUND MODE”	choose either “DYNAMIC”, “DRAMA”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“SURROUND”	choose either “TruSurround”, “SIMULATED” or “OFF” (see page 14).
“INTELLIGENT VOL”	adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted sound settings from the “ADJUST” option (see page 24).

continue

continued

Adjusting the "ADJUST" items under "SOUND MODE"

1 Press ↑ or ↓ to select the desired item (e.g., "BALANCE"), then press ENTER.

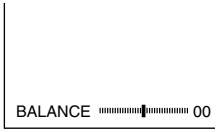

2 Adjust the value according to the following table, then press ENTER .

For	Press ↓ or ← to	Press ↑ or → to
"BASS"	decrease the bass.	increase the bass.
"TREBLE"	decrease the treble.	increase the treble.
"BALANCE"	increase the left speaker's volume.	increase the right speaker's volume.
"BBE"	select "HIGH" for higher enhancement of sound clarity; select "LOW" for lower enhancement of sound clarity; select "OFF" to cancel BBE sound.	

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

■ Changing the Picture-in-Picture ("PIP") setting

The "PIP" menu allows you to display a sub screen, change the sub screen position and exchange pictures between the main and sub screens.

1 Press MENU.

2 Press ↑ or ↓ to select the "PIP" icon (), then press ENTER.

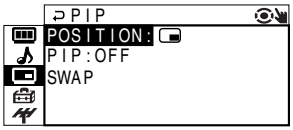

3 Press ↑ or ↓ to select the desired item (e.g., "POSITION"), then press ENTER.

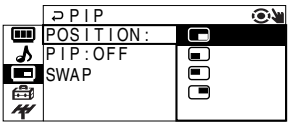

Select	To
"POSITION"	change the position of the sub screen. Press ↑ or ↓ to select the desired position, then press ENTER . 
"PIP"	display a sub screen. Press ↑ or ↓ to select "ON", then press ENTER . To cancel, press or select "OFF", then press ENTER .
"SWAP"	exchange pictures between the main screen and sub screen.

■ Changing the “SETUP” setting

The “SETUP” menu allows you to change the menu language, adjust the picture position, reduce your TV power consumption, set up your program numbers and select the color system.

1 Press MENU.

2 Press ↑ or ↓ to select the “SETUP” icon (), then press ENTER.

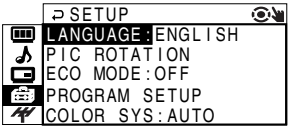

3 Press ↑ or ↓ to select the desired item (e.g., “COLOR SYS”), then press ENTER.

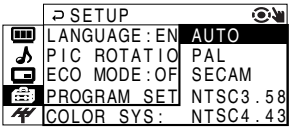

Select	To
“LANGUAGE”	change the menu language. Press ↑ or ↓ to select either “ENGLISH”, “中文” (Chinese), “ عربي ” (Arabic), or “ ไทย ” (Thai) then press ENTER. The selected menu language appears.
“PIC ROTATION”	adjust the picture position when it is not aligned with the TV screen. Press ↑ , → , ↓ or ← to adjust the picture position, then press ENTER.
“ECO MODE”	reduce power consumption of your TV to save energy. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER. When you press or turn on the TV, ECO MODE ( ) symbol will appear on the screen for a while.
“PROGRAM SETUP”	adjust each channel settings (see **Adjusting each program number settings (“PROGRAM SETUP”)** on page 27).
“COLOR SYS”	Select the color system. Normally, set this to “AUTO”.

Adjusting each program number settings (“PROGRAM SETUP”)

1 Select “PROGRAM SETUP” from the “SETUP” menu.

2 Select “PR” and press ENTER. Press ↑ or ↓ to select the desired program number you want to adjust, then press ENTER.

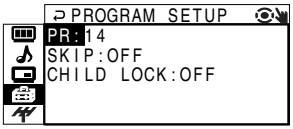

3 Press ↑ or ↓ to select the desired item (e.g., “SKIP”), then press ENTER.

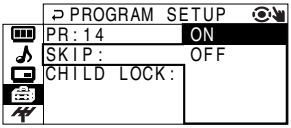

Select	To
“PR”	select the desired program number.
“SKIP”	skip unwanted or unused program number. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“CHILD LOCK”	prevent children from watching this selected program number. Press ↑ or ↓ to select “ON”, then press ENTER. The lock symbol (🔒) appears on the screen. To cancel, select “OFF”, then press ENTER If you preset a locked program number, that program number will be unlocked automatically.

4 To continue adjusting other program numbers, press ↑ or ↓ to select “PR”, then repeat step 2 and 3.

■ Changing the Channel Preset ("CH PRESET") setting

The "CH PRESET" menu allows you to preset channels automatically, manually preset channels and select the TV system.

1 Press MENU.

2 Press ↑ or ↓ to select the "CH PRESET" icon (), then press ENTER.

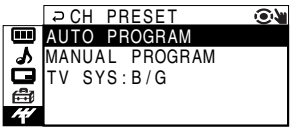

3 Press ↑ or ↓ to select the desired item (e.g., "AUTO PROGRAM"), then press ENTER.

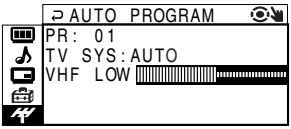

Select	To
"AUTO PROGRAM"	preset channels automatically.
"MANUAL PROGRAM"	manually preset desired channels and channels that cannot be preset automatically (see **Presetting channels manually** on page 29).
"TV SYS"	select the TV system. Press ↑ or ↓ to select either "B/G", "I", "D/K" or "M", then press ENTER.

Presetting channels manually

1 After selecting "MANUAL PROGRAM", select the program number to which you want to preset a channel.

(1) Make sure "PR" is selected, then press ENTER.

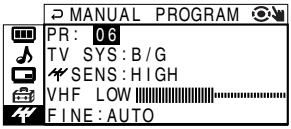

(2) Press ↑ or ↓ until the program number you want to preset (e.g., program number "10") appears on the menu, then press ENTER.

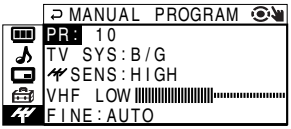

Tip

- You can also select the program number with the PROGR +/– or number buttons.

2 Select the desired channel.

(1) Press ↑ or ↓ to select either "VHF LOW", "VHF HIGH", or "UHF", then press ENTER.

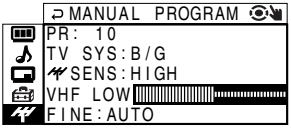

(2) Press ↑ or ↓ until the desired channel's broadcast appears on the TV screen, then press ENTER.

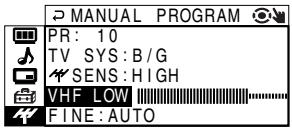

3 If the sound of the desired channel is abnormal, select the appropriate TV system.

(1) Press ↑ or ↓ to select "TV SYS", then press ENTER.

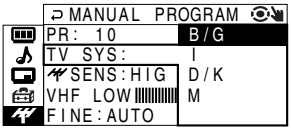

(2) Press ↑ or ↓ until the sound becomes normal, then press ENTER.

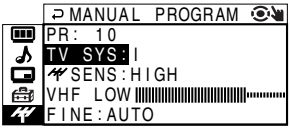

continue

continued

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the "FINE" tuning feature.

(1) Press ↑ or ↓ to select "FINE", then press ENTER.

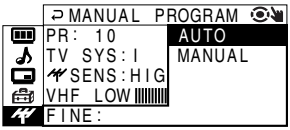

(2) Press ↑ or ↓ to select "MANUAL", then press ENTER.

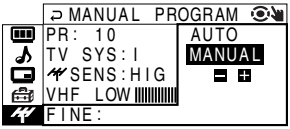

(3) Press ↑, ↓, ← or → until the picture and sound quality are optimal, then press ENTER.
The + or – icon on the menu flashes while tuning.

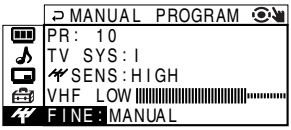

5 If the TV signal is too strong and the picture is distorted, you can adjust the TV reception sensitivity.

(1) Press ↑ or ↓ to select "SENS", then press ENTER.

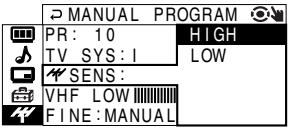

(2) Press ↑ or ↓ to select "LOW", then press ENTER.

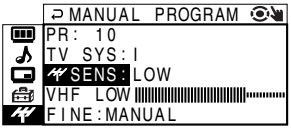

Note

- If you connect a VCR to ⅂ (antenna input), preset the signal output from the VCR to the program number 0 on the TV.

■ Connecting optional components

Connecting to the video input terminal ( )

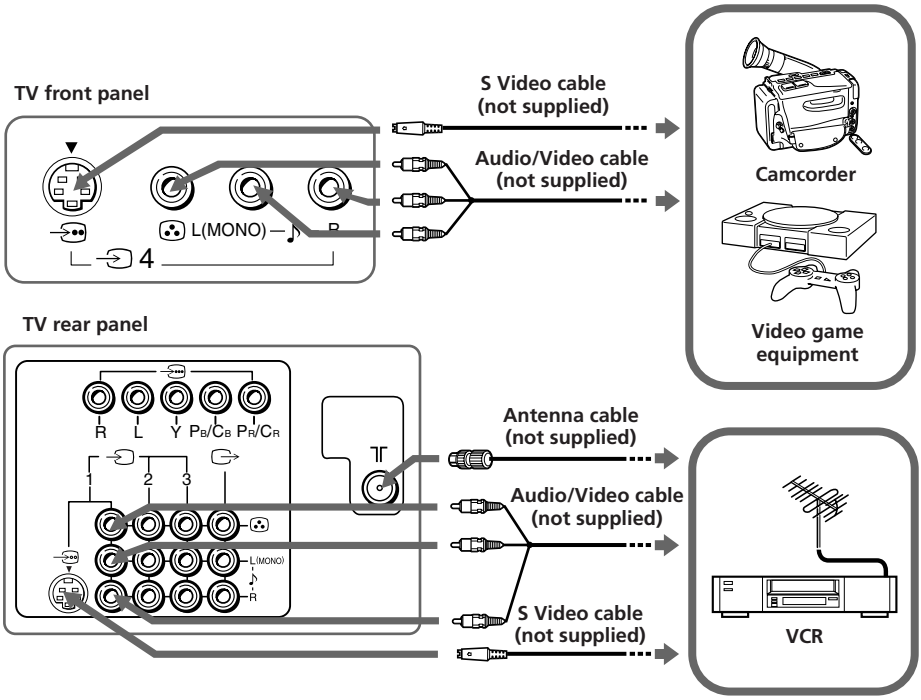

Connecting to the monitor output terminal ( )

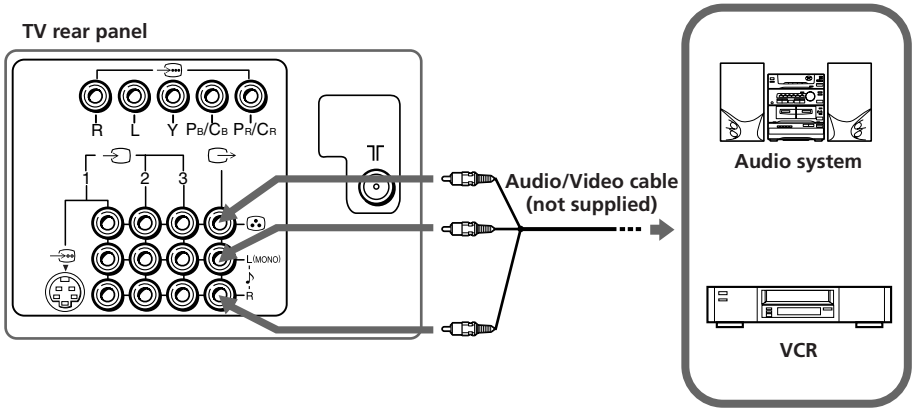

continue

continued

Connecting a DVD player to the component video input terminal ( )

1 Using an audio cable, connect R and L under (component video input) on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.

2 Using a component video cable, connect Y, P_B/C_B, and P_R/C_R under (component video input) on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.

3 Press DVD on the remote to watch the (component video input) and "DVD" will appear on your screen.

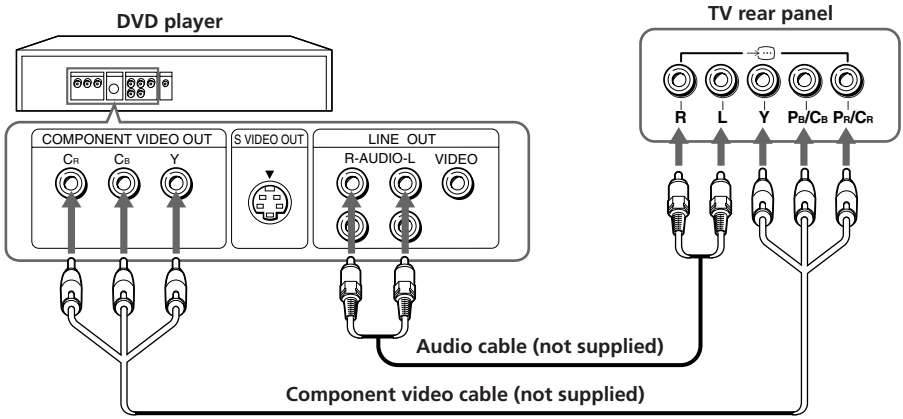

Notes

- Some DVD player terminals may be labeled differently:

Connect	To (on the DVD player)
Y (green)	Y
P_B/C_B (blue)	C_B, P_B, C_b or B-Y
P_R/C_R (red)	C_R, P_R, C_r or R-Y

- When both (S video) and (video) for 1 or 4 are connected at the same time, (S video) is automatically selected. To view (video), disconnect the S video cable.
- If you select "DVD" on your TV screen, the signal from the (monitor output) will not be output properly. This does not indicate a malfunction.
- When receiving a progressive signal through the (component video input), "PIP" is not available, and "DRC-MF" and "GAME MODE" are not selectable.

■ Troubleshooting

If you have any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

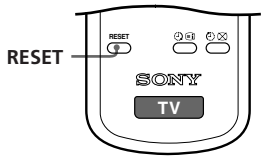

Reset function

Press the RESET button on your remote control. Your TV will go blank for about half a second then the picture will reappear with "RESET" displayed on your TV screen for about 10 seconds.

Pressing RESET will set your TV to the factory setting, but certain problems may be solved.

Troubleshooting guide

Symptom	Possible cause	Solutions	Page
Snowy picture  **Noisy sound**	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	31
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Channel presetting is inappropriate or incomplete.	• Display the "CH PRESET" menu and select "MANUAL PROGRAM" to preset the channel again.	29
	• Signal transmission is low.	• Try using a booster.	–
Distorted picture **Noisy sound**	• Broadcast signals are too strong.	• Display the "CH PRESET" menu and select "MANUAL PROGRAM". Then, select "SENS: LOW".	30
		• Turn off or disconnect the booster if it is in use.	–
Good picture **Noisy sound**	• The TV system setting is inappropriate.	• Display the "CH PRESET" menu and select the appropriate TV system ("TV SYS").	29
	• PIP sound is selected when PIP is displayed.	• Press SOUND or .	13

continue

continued

Symptom	Possible cause	Solutions	Page
No picture **No sound** 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and VCR connections.	31
	• The TV is not turned on.	• Press I/⏻ (power). • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	9 8
Good picture **No sound** 	• The volume level is too low.	• Press + to increase the volume level.	9
	• The sound is muted. • PIP sound is selected when PIP is displayed.	• Press 🔇 to cancel the muting. • Press SOUND or ◔.	9 13
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.	– –
Double images or "ghosts" 	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna. • Use the fine tuning ("FINE") function.	– 30
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Use of a booster is inappropriate.	• Turn off or disconnect the booster if it is in use.	–
No color 	• The color level setting is too low.	• Display the "PICTURE" menu and select "ADJUST" of "PICTURE MODE", then adjust the "COLOR" level.	22
	• The color system setting is inappropriate.	• Display the "SETUP" menu and check the color system ("COLOR SYS") setting (usually set this to "AUTO").	26
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–

Symptom	Possible cause	Solutions	Page
Picture slant 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. • Display the "SETUP" menu and adjust "PIC ROTATION" so that the picture position is optimal.	– 26
Abnormal color patches 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.	–
TV cannot receive stereo broadcast sound.	• The stereo reception setting is inappropriate.	• Press A/B until "AUTO" appears on the screen.	16
or	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and on the wall.	31
Stereo broadcast sound switches on and off or is distorted.	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
"100" appears at the top of the screen and there is no Teletext display.	• The channel carries no Teletext broadcast.	—	17
Teletext display is incomplete (snowy picture or double images).	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR, and at the wall.	31
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
	• Signal transmission is too low.	• Try using a booster. • Use the fine tuning ("FINE") function.	– 30

continue

continued

Symptom	Possible cause	Solutions	Page
The ⏻ (standby) indicator on your TV flashes red several times after every three seconds.	• Your TV's self-diagnosis function indicates the possible problems.	• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.	–
Cannot play shooting games.	• Some shooting games which involve pointing a light beam at the TV screen with an electronic gun or rifle cannot be used with your TV. For details, see the instruction manual supplied with the video game software.	—	–
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.	—	–
A small "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

■ Specifications

	KV-DR34M69	KV-DR29M69	Note
Power requirements	110-240 V AC, 50/60 Hz		
Power consumption (W)	Indicated on the rear of the TV		
Television system	B/G, I, D/K, M		
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43		
Stereo/Bilingual system	NICAM Stereo/Bilingual B/G, I; A2 Stereo/Bilingual B/G		
Teletext language	English, Arabic, French		
Channel coverage **B/G**	VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41		
I	UHF : B21 to B68 CATV : S01 to S03, S1 to S41		
D/K	VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39		
M	VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84		
(Antenna)	75-ohm external terminal		
Audio output (Speaker)	6W + 6W		
3D WOOFER	15W		
Number of terminal			
(Video)	Input: 4 Output: 1	Phono jacks; 1 Vp-p, 75 ohms	
(Audio)	Input: 4 Output: 1	Phono jacks; 500 mVrms	
(S Video)	Input: 2	Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms	
(Component Video)	Input: 1	Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative P_B/C_B: 0.7 Vp-p, 75 ohms P_R/C_R 0.7 Vp-p, 75 ohms Audio: 500 mVrms	
(Headphone)	Output: 1	Stereo minijack	
Picture tube	34 in.	29 in.	
Tube size (cm)	86	72	Measured diagonally
Screen size (cm)	80	68	Measured diagonally
Dimensions (w/h/d, mm)	894 × 690 × 569	786 × 596 × 514	
Mass (kg)	85	57	

Design and specifications are subject to change without notice.

http://www.sony.net/

Sony Corporation

SONY

4-088-356-**11** (1)

Trinitron Color TV
เครื่องรับโทรทัศน์สี Trinitron

Operating Instructions **GB**

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

คู่มือการใช้งาน **ไทย**

- ก่อนเริ่มการใช้งานกรุณาอ่านคู่มือนี้โดยละเอียดทั้งหมดและเก็บรักษาคู่มือไว้สำหรับอ้างอิงในโอกาสต่อ ๆไป

FD Trinitron
WEGA

KV-DR34
KV-DR29

© 2002 Sony Corporation

M69
M63

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 220 – 240 V AC.
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

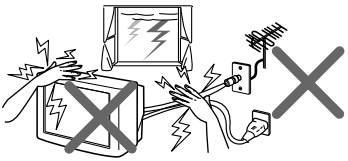

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

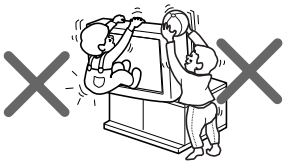

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

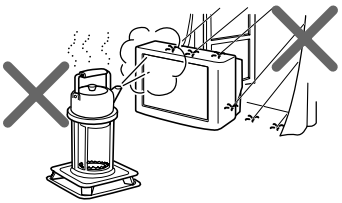

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

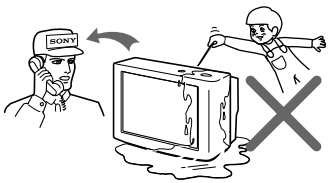

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

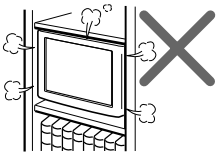

Do not block the ventilation openings of the TV.
Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

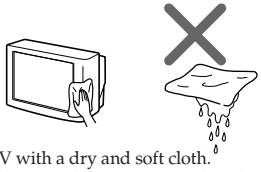

Clean the TV with a dry and soft cloth.
Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.

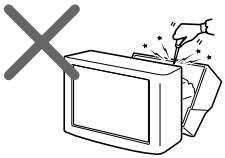

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

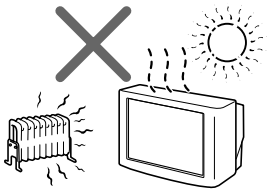

Your TV is recommended for home use only.
Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

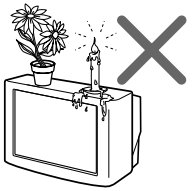

Do not place any objects on the TV.

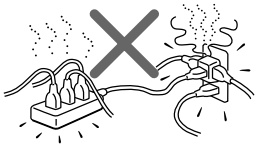

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

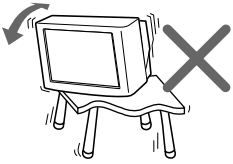

Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

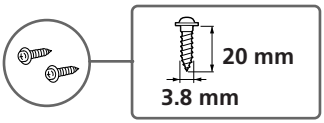

screws

clamps



band

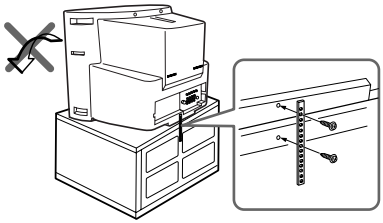

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

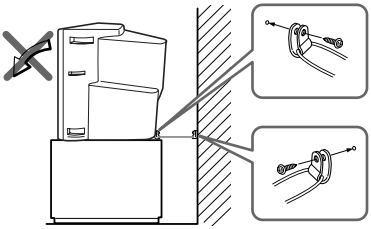

(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

or

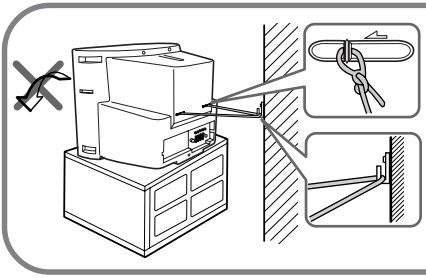

(1) Attach each end of a cord or chain to the provided holders at the rear of your TV.
(2) Securely fix the attached cord or chain to a wall or pillar using an attachment which can support the TV set weight.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

Getting Started **6**
Setting up your TV ("INITIAL SETUP") **7**

Overview of Controls

TV front and rear panels **8**
Remote control **9**

Advanced Operations

Selecting the picture and sound modes **11**
Viewing higher quality pictures with DRC-MF **12**
Viewing the picture in wide mode .. **12**
Watching Picture-in-Picture (PIP) (KV-DR34M69 only) **13**
Selecting a TV program using PIP (KV-DR34M69 only) **14**
Listening with surround sound **14**
Setting the timers **15**
Enjoying stereo or bilingual programs **16**
Viewing Teletext (KV-DR34M69 only) **17**

Menu Adjustment

Introducing the menu system **18**
Changing the "PICTURE" setting ... **21**
Changing the "SOUND" setting **23**
Changing the Picture-in-Picture ("PIP") setting (KV-DR34M69 only) **25**
Changing the "SETUP" setting **26**
Changing the Channel Preset ("CH PRESET") setting **28**

Additional Information

Connecting optional components ... **31**
Troubleshooting **33**
Specifications ..... **Back cover**

GB

■ Getting Started

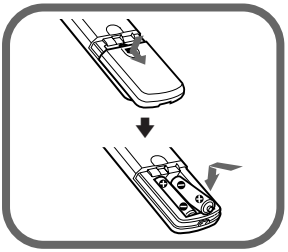

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

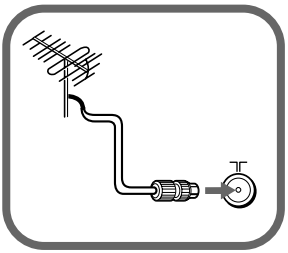

Step 2

Connect the antenna cable (not supplied) to ⅂⊢ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 31).

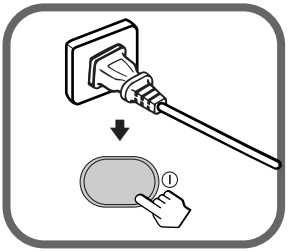

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

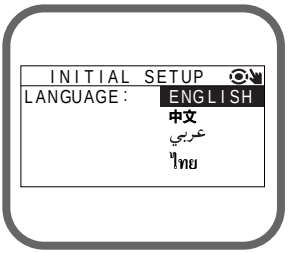

Step 4

Set up the TV by following the instructions of the "INITIAL SETUP"menu (see page 7).

■ Setting up your TV ("INITIAL SETUP")

When you turn on your TV for the first time, the "INITIAL SETUP" menu will appear. This menu allows you to change the menu language, adjust the picture position and preset the TV channels automatically.

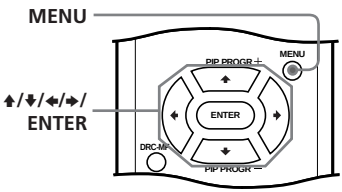

1 Press ↑ or ↓ to select the desired menu language (e.g.,"ENGLISH"), then press ENTER.

The selected menu language appears.

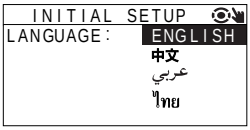

2 Press ↑ or ↓ (or ←/→), then press ENTER to adjust the picture position if it is not aligned to the TV screen.

The ⊞ or ⊟ icon on the screen flashes while adjusting.



3 Press ↑ or ↓ to select "YES", then press ENTER to preset the channels automatically (see page 28).

The screen will indicate automatic presetting is in progress.

To skip automatic channel presetting, select "NO", then press ENTER.

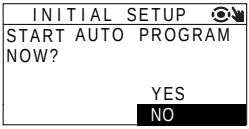

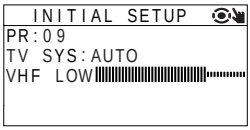

4 Press ↑ or ↓ to select "NO", then press ENTER. The "INITIAL SETUP" menu will not appear again the next time you turn on the TV by pressing ⏻.

To allow this menu to appear again, select "YES", then press ENTER.

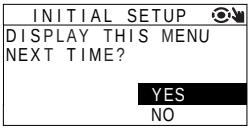

Tip

- You can immediately go to the end of the "INITIAL SETUP" menu by pressing MENU.
- You can also set up your TV using the menu system (see page 18).

■ TV front and rear panels

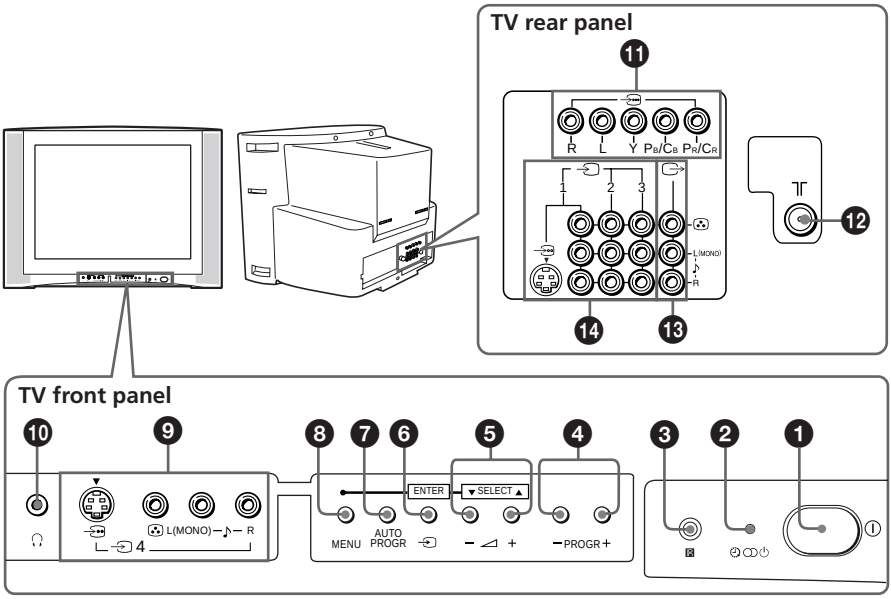

Button/Terminal	Function	Page
❶ ⏻	Turn off or turn on the TV.	–
❷ ⏻	Standby indicator.	–
❷ 🕘	Wake Up indicator.	15
❷ ◯◯	Stereo/bilingual indicator.	16
❸	Remote control sensor.	–
❹ PROGR +/–	Select program number.	–
❺ +/–	Adjust volume.	–
❻	Select TV or video input.	–
❼ AUTO PROGR	Preset channels automatically.	–
Menu operations		
❺ SELECT ▼/▲	Select and adjust items.	20
❻ ENTER	Confirm selected items.	20
❽ MENU	Display or cancel the menu.	20
❾ 4	Video input terminal 4.	31
❿	Headphone jack.	–
⓫	Component video input terminal.	32
⓬	Antenna input terminal.	31
⓭	Monitor output terminal.	31
⓮ 1, 2, 3	Video input terminal 1, 2, 3.	31

■ Remote control

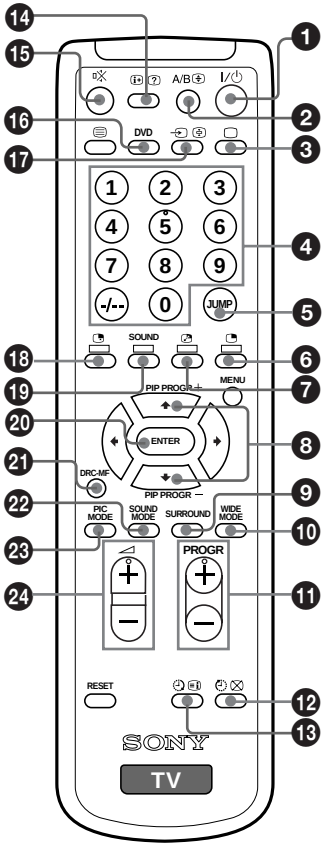

Button	Function	Page
❶ I/⏻	Turn off temporarily or turn on the TV.	–
❸ ▭	Display the TV input.	–
❹ 0 – 9, -/--	Input numbers.	–
❺ JUMP	Jump to previous program number.	–
❾ SURROUND	Select surround mode.	14
❿ WIDE MODE	Select wide-mode (16:9).	12
⓫ PROGR +/–	Select program number.	–
⓮ i+	Display on-screen information.	–
⓯ 🔇	Mute the sound.	–
⓰ DVD	Select component video input.	32
⓱ ⏎	Select TV or video input.	31
㉑ DRC-MF	Select DRC-MF mode.	12
㉒ SOUND MODE	Select sound mode.	11
㉓ PIC MODE	Select picture mode.	11
㉔ ◿ +/–	Adjust volume.	–
Timer operations		
⓬ ⏲	Set TV to turn off automatically.	15
⓭ ⏲	Set TV to turn on automatically.	15
PIP operations (yellow label) (KV-DR34M69 only)		
❻ ◔	Display a sub screen.	13
❼ ⤢	Swap main and sub screens.	13
❽ PIP PROGR +/ PIP PROGR –	Display and change programs in the sub screen.	13,14
⓲ ◔	Select a video input in the sub screen.	13
⓳ SOUND	Swap sound between main and sub screen.	13
⓴ ENTER	Change sub screen to main screen.	14
Stereo/bilingual operations		
❷ A/B	Select stereo/bilingual mode.	16

continue

continued

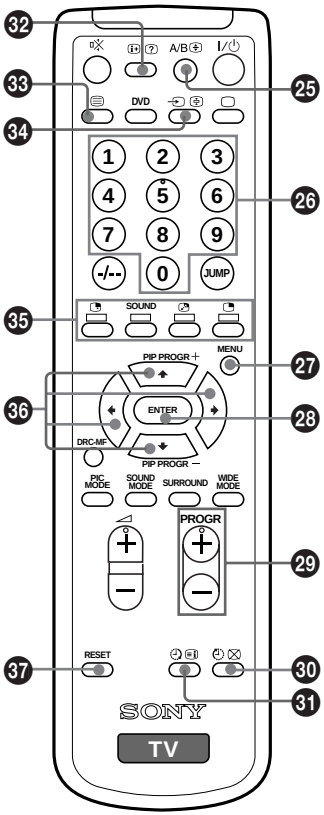

Button	Function	Page
Menu operations		
27 MENU	Display or cancel the menu.	20
28 ENTER	Confirm selected items.	20
36 ↑, ↓, ←, →	Select and adjust items.	20
Teletext operations (green label) (KV-DR34M69 only)		
25 ⊕	Enlarge the Teletext display.	17
26 0 – 9	Input Teletext page number	17
29 PROGR +/–	Display the next or previous page.	17
30 ⊠	Show TV screen while waiting for Teletext page.	17
31 ⓘ	Display Teletext service contents.	17
32 ?	Reveal concealed information.	17
33 ☰	Display Teletext broadcast.	17
34 ⊕	Stop Teletext display from scrolling.	17
35 ▬ (red, green, yellow, blue)	Access a FASTEXT menu.	17
37 RESET	Set TV to factory setting.	33

■ Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the “PERSONAL” option.

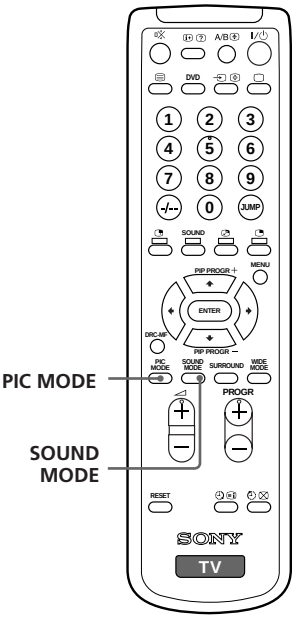

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
“DYNAMIC”	view high contrast pictures.
“STANDARD”	view normal pictures.
“HI-FINE”	view higher density pictures with mild contrast.
“PERSONAL”	receive the last adjusted picture setting from the “ADJUST” option in the “PICTURE” menu (see page 22).

Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

Select	To
“♪ DYNAMIC”	listen to dynamic and clear sound that emphasizes both the low and high tones.
“♪ DRAMA”	listen to sound that emphasizes voice and high tones.
“♪ SOFT”	listen to soft sound.
“♪ PERSONAL”	receive the last adjusted sound setting from the “ADJUST” option in the “SOUND” menu (see page 24).

■ Viewing higher quality pictures with DRC-MF

The Digital Reality Creation-Multi Function (DRC-MF) feature allows you to enjoy higher quality pictures on your TV. You can use the DRC-MF button to select "DRC1250" or "DRC PROGRESSIVE".

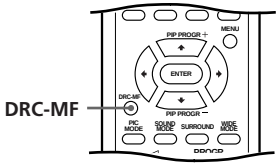

Select	To
"DRC1250"	view super real (higher density) pictures.
"DRC PROGRESSIVE"	reduce jitter of any small areas or scanning lines (e.g., letters or the edge of objects) on the screen.

Note

- The DRC-MF mode is not selectable when the "GAME MODE" or Picture-in-Picture ("PIP") mode is turned on.

The DRC-MF logo (DRC-MF Digital Reality Creation) and "DRC-MF" are trademarks of Sony Corporation.

■ Viewing the picture in wide mode

When receiving a wide-mode (16:9) signal, the picture will appear "squeezed" (compressed) on your screen. Use the WIDE MODE button to view the picture with the optimal effect.

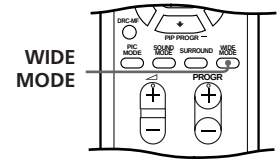

Select	To
"ON"	view the picture in wide-mode (16:9).
"OFF"	cancel wide-mode (16:9).

■ Watching Picture-in-Picture (PIP)

► KV-DR34M69 only

With the PIP feature, you can display two different TV programs or video input at the same time by using the ◔ button.

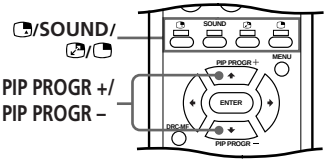

To	Press
Display a sub screen	◔. To cancel the sub screen, press the button again.
Change a program number in the sub screen	PIP PROGR + or PIP PROGR –.
Select a video input in the sub screen	◔.
Swap pictures between the main and sub screens	◔.
Swap sound between the main and sub screens A "♪" symbol will appear next to the program number or video input display to indicate which screen you are hearing.	SOUND.

Notes

- The DRC-MF mode is not selectable when PIP is turned on.
- The picture and sound from the ⇨ (monitor output) terminals will always be from the main screen, even when you select the sub screen sound by pressing SOUND (see page 31).

■ Selecting a TV program using PIP

▶ KV-DR34M69 only

You can select your desired TV program directly from the PIP sub screen by using the PIP PROGR +/– buttons.

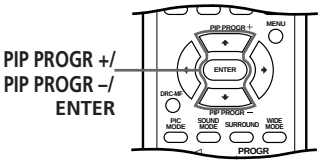

1 Press PIP PROGR +/– until the desired program appears in the sub screen.

2 Press ENTER to change the sub screen program to the main screen.

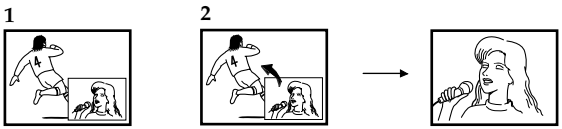

■ Listening with surround sound

You can use the SURROUND button to listen to the sound effects of a concert hall or movie theater.

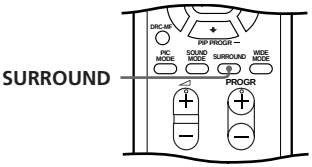

Select	To
"TruSurround"	listen to the surround sound that spreads out to the rear of a room.
"SIMULATED"	listen to monaural sound with a stereo-like effect.
"OFF"	cancel surround sound.

The surround of your TV is categorized as TruSurround.

TruSurround™ is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents.

■ Setting the timers

You can set your TV to turn on and off automatically by using the WAKE UP and SLEEP timers respectively.

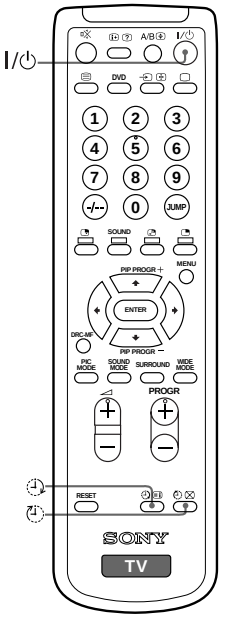

Setting the Wake Up timer

1 Press ⏲ until the desired period of time appears on the screen.

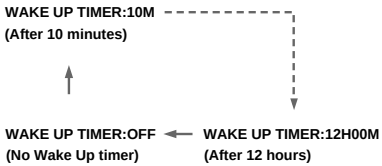

The Wake Up timer starts immediately after you have set it.

2 Select the program number or video input you want to wake up to.

3 Press I/⏻, or set the Sleep timer if you want the TV to turn off automatically.

The ⏲ indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press ⏲ until the desired period of time appears on the screen.

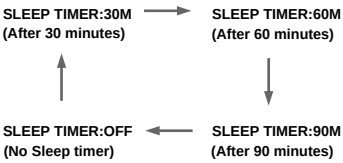

The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by turning off the TV's main power.
- If no buttons are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

■ Enjoying stereo or bilingual programs

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

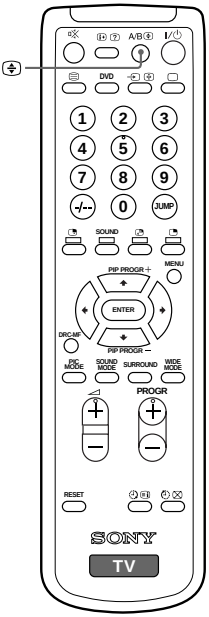

When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → MONO (Regular sound)
NICAM bilingual	NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound)
NICAM monaural	NICAM MAIN (Main sound) → MONO (Regular sound)

When receiving an A2 program

Broadcasting	On-screen display (Selected sound)
A2 stereo	STEREO (Stereo sound) → MONO (Regular sound)
A2 bilingual	MAIN (Main sound) → SUB (Sub sound)

Notes

- If the stereo sound is noisy when receiving a stereo program, select "MONO". The sound becomes monaural, but the noise is reduced.
- If the sound is distorted when receiving a monaural program through ⅂⌜ (antenna input), press A/B repeatedly until "MONO" appears on the screen. To cancel the monaural sound setting, press A/B again until "AUTO" appears on the screen.

■ Viewing Teletext

► KV-DR34M69 only

Some TV stations broadcast an information service called Teletext which allows you to receive various information, such as stock market reports and news.

You can use the buttons on the remote to view Teletext.

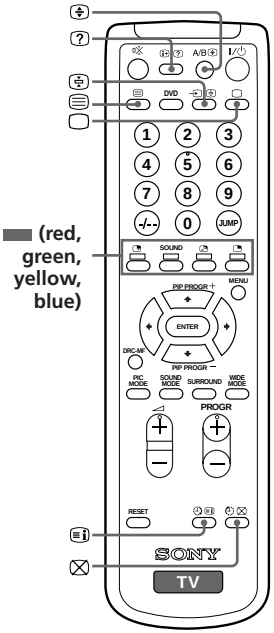

To	Do this
display a Teletext page on the TV picture	Press ☰. Each time you press ☰, the screen changes as follows: Teletext → Teletext and TV → TV. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.
check the contents of a Teletext service	Press ⓘ. An overview of the Teletext contents, including page numbers, appears on the screen.
select a Teletext page	Press the number buttons to enter the three-digit page number of the desired Teletext page. If you make a mistake, reenter the correct page number. To access the next or previous page, press PROGR +/–.
hold (pause) a Teletext display	Press ⇳ to display the symbol "⇳" at the top left corner of the screen. To resume normal Teletext viewing, press ⇳ or ☰.
reveal concealed information (e.g., an answer to a quiz)	Press ?. To conceal the information, press the button again.
enlarge the Teletext display	Press ⇕. Each time you press ⇕, the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.
stand by for a Teletext page while watching a TV program	1 Enter the Teletext page number that you want to refer to, then press ⊠. 2 When the page number is displayed, press ☰ to show the text.
select a FASTEXT menu or the colored boxes	Press ■ (red, green, yellow and blue) that corresponds to the desired menu or page number.
turn off Teletext	Press ▭.

Note

- The FASTEXT feature can be used only when the FASTEXT broadcast is available.

■ Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.

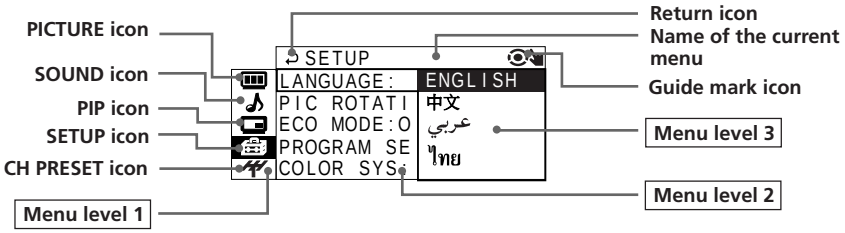

Level 1	Level 2	Level 3/Function	Page
"PICTURE"	"DRC-MF"	Select the "DRC-MF" mode: "DRC1250" → "PROGRESSIVE"	21
	"PICTURE MODE"	Select the picture mode: "DYNAMIC" → "STANDARD" → "HI-FINE" → "PERSONAL" → "ADJUST"	
	"ADJUST"	Adjust the "PERSONAL" option: "PICTURE" → "COLOR" → "BRIGHT" → "HUE" → "SHARP"	
	"3D-NR"	Reduce picture noise: "ON" → "OFF"	
	"WIDE MODE"	Change the picture size.	
	"GAME MODE"	Adjust the picture settings for video games.	
"SOUND"	"SOUND MODE"	Select the sound mode: "DYNAMIC" → "DRAMA" → "SOFT" → "PERSONAL" → "ADJUST"	23
	"ADJUST"	Adjust the "PERSONAL" option: "BASS" → "TREBLE" → "BALANCE" → "BBE"*	
	"SURROUND"	Select the "SURROUND" mode: "TruSurround" → "SIMULATED" →"OFF"	
	"INTELLIGENT VOL"	Adjust volume automatically.	
"PIP" (KV-DR34M69 only)	"POSITION"	Change the position of the sub screen.	25
	"PIP"	Display a sub screen within the main picture.	
	"SWAP"	Exchange pictures between main screen and sub screen.	

Level 1	Level 2	Level 3/Function	Page
"SETUP"	"LANGUAGE"	Change the menu language: "ENGLISH" → "中文"(Chinese) → "عربي"(Arabic) → "ไทย"(Thai)	26
	"PIC ROTATION"	Adjust the picture position.	
	"ECO MODE"	Reduce power consumption of your TV.	
	"PROGRAM SETUP"	Adjust each program number settings.	
	"COLOR SYS"	Select the color system: "AUTO" →" PAL" → "SECAM" → "NTSC3.58" → "NTSC4.43"	
"CH PRESET"	"AUTO PROGRAM"	Preset channels automatically.	28
	"MANUAL PROGRAM"	Preset channels manually.	
	"TV SYS"	Select the TV system: "B/G" → "I" → "D/K" → "M"	

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word "BBE" and the BBE symbol are the trademarks of BBE Sound, Inc.

continue

continued

How to use the menu

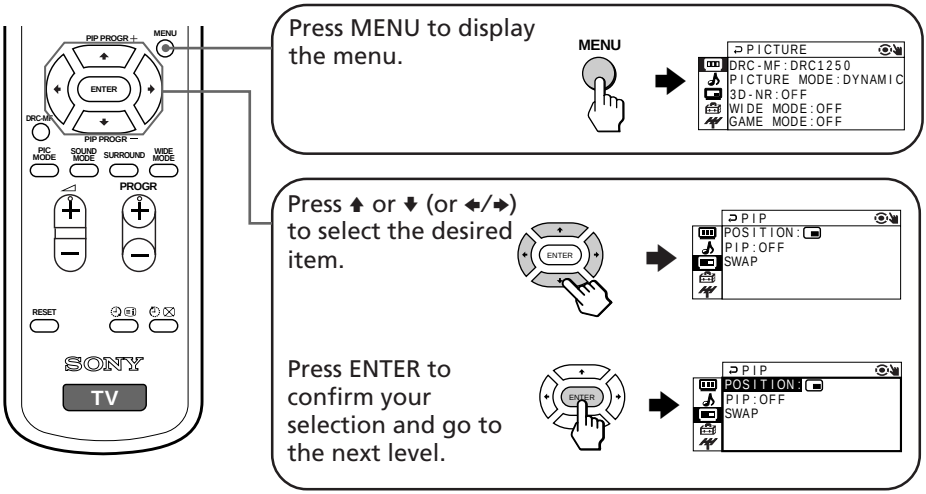

Other menu operations

To	Press
Adjust the setting value	↑, ↓, ← or →.
Move to the next/previous menu level	← or →.
Cancel the menu	MENU.

Tips

- If you want to exit from Menu level 2 to Menu level 1, press ↑ or ↓ until the return icon (⮌) is highlighted, then press ENTER.
- Some of the menu items can be operated directly using the remote buttons.
- The MENU, ENTER, and SELECT ▼/▲ buttons on the TV can also be used for the operations above.

Front of TV

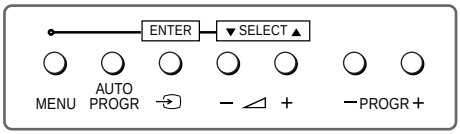

■ Changing the “PICTURE” setting

The “PICTURE” menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the “PICTURE” icon ( ) is selected, then press ENTER.

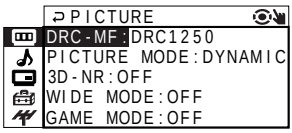

3 Press ↑ or ↓ to select the desired item (e.g., “DRC-MF”), then press ENTER.

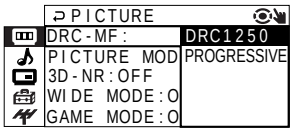

Select	To
“DRC-MF”	choose either “DRC1250” or “PROGRESSIVE” (see page 12).
“PICTURE MODE”	choose either “DYNAMIC”, “STANDARD”, “HI-FINE”, “PERSONAL”*, or “ADJUST” (see page 11).
“3D-NR”	adjust picture signal automatically to reduce noise. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“WIDE MODE”	choose either “ON” or “OFF” (see page 12).
“GAME MODE”	adjust the picture setting that is suitable to view video games. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted picture settings from the “ADJUST” option (see page 22).

Notes

- “GAME MODE” is available only when receiving signals through (video input), (S video input), or (component video input).
- The DRC-MF mode is not selectable when GAME MODE is turned on.

continue

continued

Adjusting the "ADJUST" items under "PICTURE MODE"

1 Press ↑ or ↓ to select the desired item (e.g.,"COLOR"), then press ENTER.

2 Adjust the value according to the following table, then press ENTER.

For	Press ↓ or ← to	Press ↑ or → to
"PICTURE"	decrease picture contrast.	increase picture contrast.
"COLOR"	decrease color intensity.	increase color intensity.
"BRIGHT"	darken the picture.	brighten the picture.
"HUE"	increase red picture tones.	increase green picture tones.
"SHARP"	soften the picture.	sharpen the picture.

Notes

- "HUE" can be adjusted for the NTSC color system only.
- Reducing sharpness ("SHARP") can also reduce picture noise.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

■ Changing the “SOUND” setting

The “SOUND” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press ↑ or ↓ to select the “SOUND” icon (♪), then press ENTER.

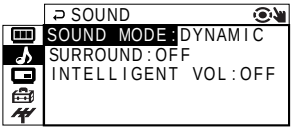

3 Press ↑ or ↓ to select the desired item (e.g., “SOUND MODE”), then press ENTER.

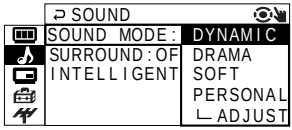

Select	To
“SOUND MODE”	choose either “DYNAMIC”, “DRAMA”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“SURROUND”	choose either “TruSurround”, “SIMULATED” or “OFF” (see page 14).
“INTELLIGENT VOL”	adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted sound settings from the “ADJUST” option (see page 24).

continue

continued

Adjusting the "ADJUST" items under "SOUND MODE"

1 Press ↑ or ↓ to select the desired item (e.g., "BALANCE"), then press ENTER.

2 Adjust the value according to the following table, then press ENTER .

For	Press ↓ or ← to	Press ↑ or → to
"BASS"	decrease the bass.	increase the bass.
"TREBLE"	decrease the treble.	increase the treble.
"BALANCE"	increase the left speaker's volume.	increase the right speaker's volume.
"BBE"	select "HIGH" for higher enhancement of sound clarity; select "LOW" for lower enhancement of sound clarity; select "OFF" to cancel BBE sound.	

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

■ Changing the Picture-in-Picture (“PIP”) setting

► KV-DR34M69 only

The “PIP” menu allows you to display a sub screen, change the sub screen position and exchange pictures between the main and sub screens.

1 Press MENU.

2 Press ↑ or ↓ to select the “PIP” icon (), then press ENTER.

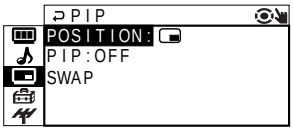

3 Press ↑ or ↓ to select the desired item (e.g., “POSITION”), then press ENTER.

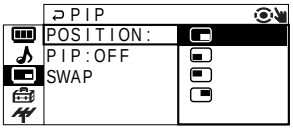

Select	To
“POSITION”	change the position of the sub screen. Press ↑ or ↓ to select the desired position, then press ENTER . 
“PIP”	display a sub screen. Press ↑ or ↓ to select “ON”, then press ENTER . To cancel, press or select “OFF”, then press ENTER .
“SWAP”	exchange pictures between the main screen and sub screen.

■ Changing the “SETUP” setting

The “SETUP” menu allows you to change the menu language, adjust the picture position, reduce your TV power consumption, set up your program numbers and select the color system.

1 Press MENU.

2 Press ↑ or ↓ to select the “SETUP” icon (), then press ENTER.

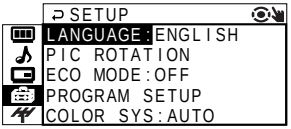

3 Press ↑ or ↓ to select the desired item (e.g., “COLOR SYS”), then press ENTER.

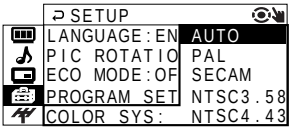

Select	To
“LANGUAGE”	change the menu language. Press ↑ or ↓ to select either “ENGLISH”, “中文” (Chinese), “عربي” (Arabic), or “ไทย” (Thai) then press ENTER. The selected menu language appears.
“PIC ROTATION”	adjust the picture position when it is not aligned with the TV screen. Press ↑ , → , ↓ or ← to adjust the picture position, then press ENTER.
“ECO MODE”	reduce power consumption of your TV to save energy. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER. When you press or turn on the TV, ECO MODE ( ) symbol will appear on the screen for about 40 seconds.
“PROGRAM SETUP”	adjust each channel settings (see **Adjusting each program number settings (“PROGRAM SETUP”)** on page 27).
“COLOR SYS”	Select the color system. Normally, set this to “AUTO”.

Adjusting each program number settings (“PROGRAM SETUP”)

1 Select “PROGRAM SETUP” from the “SETUP” menu.

2 Select “PR” and press ENTER. Press ↑ or ↓ to select the desired program number you want to adjust, then press ENTER.

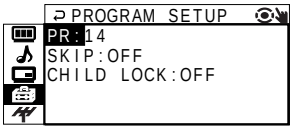

3 Press ↑ or ↓ to select the desired item (e.g., “SKIP”), then press ENTER.

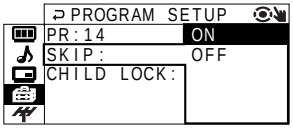

Select	To
“PR”	select the desired program number.
“SKIP”	skip unwanted or unused program number. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“CHILD LOCK”	prevent children from watching this selected program number. Press ↑ or ↓ to select “ON”, then press ENTER. The lock symbol (🔒) appears on the screen. To cancel, select “OFF”, then press ENTER If you preset a locked program number, that program number will be unlocked automatically.

4 To continue adjusting other program numbers, press ↑ or ↓ to select “PR”, then repeat step 2 and 3.

■ Changing the Channel Preset ("CH PRESET") setting

The "CH PRESET" menu allows you to preset channels automatically, manually preset channels and select the TV system.

1 Press MENU.

2 Press ↑ or ↓ to select the "CH PRESET" icon (), then press ENTER.

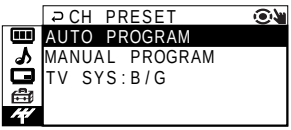

3 Press ↑ or ↓ to select the desired item (e.g., "AUTO PROGRAM"), then press ENTER.

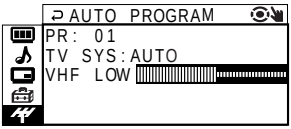

Select	To
"AUTO PROGRAM"	preset channels automatically.
"MANUAL PROGRAM"	manually preset desired channels and channels that cannot be preset automatically (see **Presetting channels manually** on page 29).
"TV SYS"	select the TV system. Press ↑ or ↓ to select either "B/G", "I", "D/K" or "M", then press ENTER.

Presetting channels manually

1 After selecting "MANUAL PROGRAM", select the program number to which you want to preset a channel.

(1) Make sure "PR" is selected, then press ENTER.

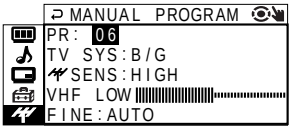

(2) Press ↑ or ↓ until the program number you want to preset (e.g., program number "10") appears on the menu, then press ENTER.

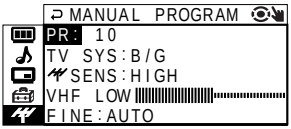

Tip

- You can also select the program number with the PROGR +/– or number buttons.

2 Select the desired channel.

(1) Press ↑ or ↓ to select either "VHF LOW", "VHF HIGH", or "UHF", then press ENTER.

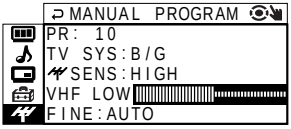

(2) Press ↑ or ↓ until the desired channel's broadcast appears on the TV screen, then press ENTER.

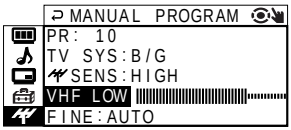

3 If the sound of the desired channel is abnormal, select the appropriate TV system.

(1) Press ↑ or ↓ to select "TV SYS", then press ENTER.

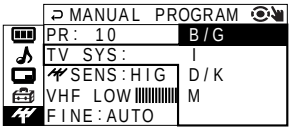

(2) Press ↑ or ↓ until the sound becomes normal, then press ENTER.

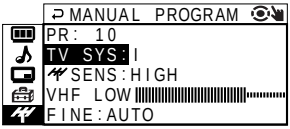

continue

continued

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the "FINE" tuning feature.

(1) Press ↑ or ↓ to select "FINE", then press ENTER.

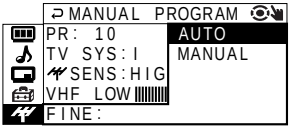

(2) Press ↑ or ↓ to select "MANUAL", then press ENTER.

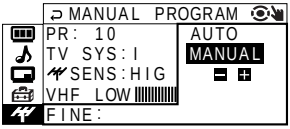

(3) Press ↑, ↓, ← or → until the picture and sound quality are optimal, then press ENTER.
The + or – icon on the menu flashes while tuning.

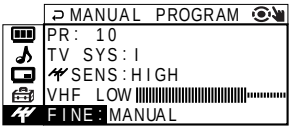

5 If the TV signal is too strong and the picture is distorted, you can adjust the TV reception sensitivity.

(1) Press ↑ or ↓ to select "SENS", then press ENTER.

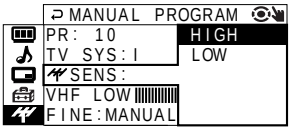

(2) Press ↑ or ↓ to select "LOW", then press ENTER.

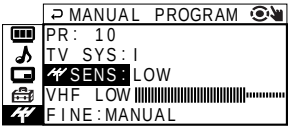

Notes

- If you connect a VCR to ⅂ (antenna input), preset the signal output from the VCR to the program number 0 on the TV.
- "SENS" is available for KV-DR34M69 only.

■ Connecting optional components

Connecting to the video input terminal ( )

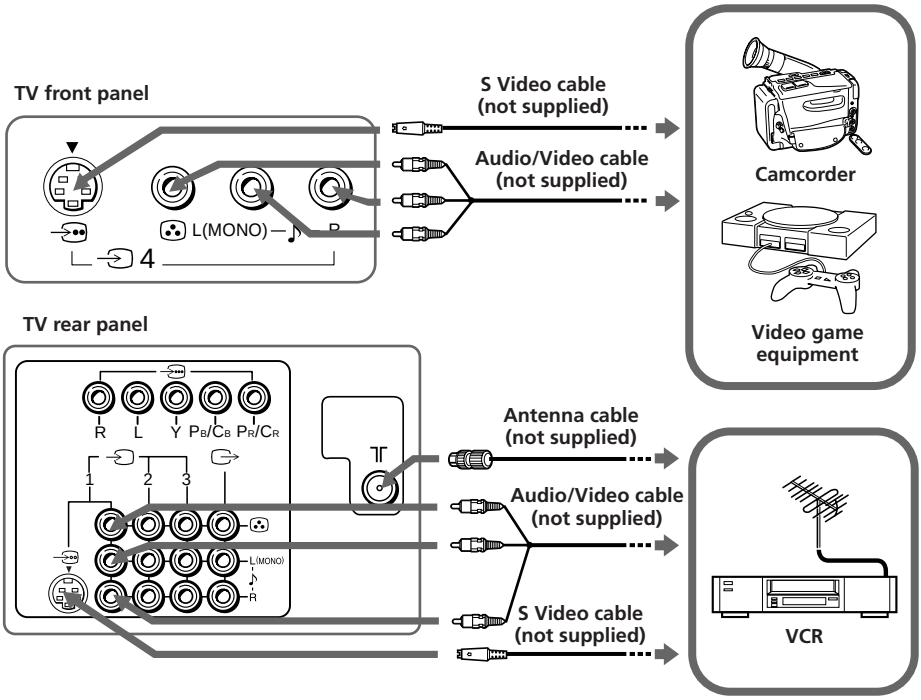

Connecting to the monitor output terminal ( )

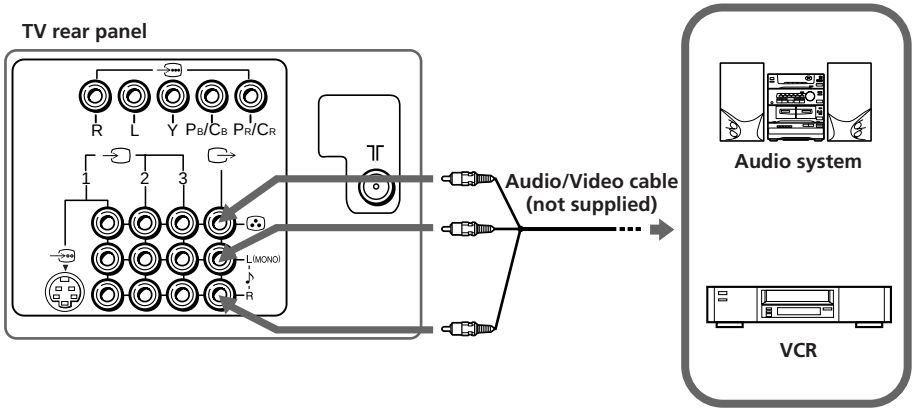

continue

continued

Connecting a DVD player to the component video input terminal ( )

1 Using an audio cable, connect R and L under (component video input) on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.

2 Using a component video cable, connect Y, P_B/C_B, and P_R/C_R under (component video input) on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.

3 Press DVD on the remote to watch the (component video input) and "DVD" will appear on your screen.

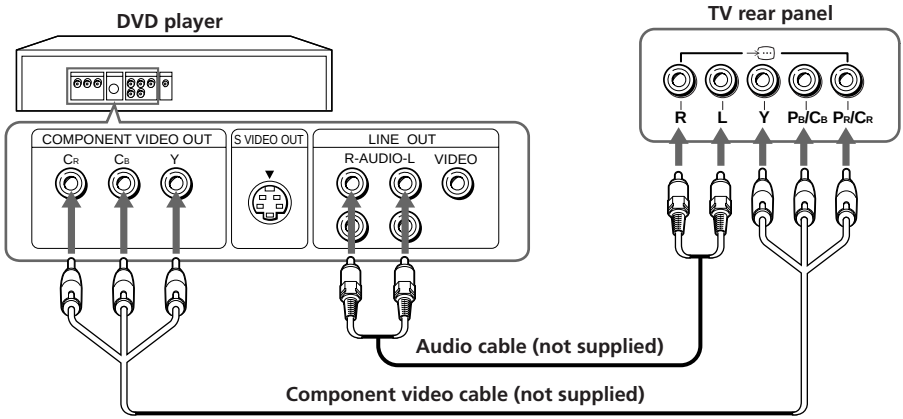

Notes

- Some DVD player terminals may be labeled differently:

Connect	To (on the DVD player)
Y (green)	Y
P_B/C_B (blue)	C_B, P_B, C_b or B-Y
P_R/C_R (red)	C_R, P_R, C_r or R-Y

- When both (S video) and (video) for 1 or 4 are connected at the same time, (S video) is automatically selected. To view (video), disconnect the S video cable.
- If you select "DVD" on your TV screen, the signal from the (monitor output) will not be output properly. This does not indicate a malfunction.
- When receiving a progressive signal through the (component video input), "PIP" is not available, and "DRC-MF" and "GAME MODE" are not selectable.

■ Troubleshooting

If you have any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

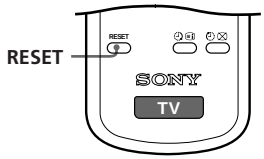

Reset function

Press the RESET button on your remote control. Your TV will go blank for about half a second then the picture will reappear with "RESET" displayed on your TV screen for about 10 seconds.

Pressing RESET will set your TV to the factory setting, but certain problems may be solved.

Troubleshooting guide

Symptom	Possible cause	Solutions	Page
Snowy picture  **Noisy sound**	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	31
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Channel presetting is inappropriate or incomplete.	• Display the "CH PRESET" menu and select "MANUAL PROGRAM" to preset the channel again.	29
	• Signal transmission is low.	• Try using a booster.	–
Distorted picture **Noisy sound**	• Broadcast signals are too strong.	• Display the "CH PRESET" menu and select "MANUAL PROGRAM". Then, select "⚡ SENS: LOW" (KV-DR34M69 only). • Turn off or disconnect the booster if it is in use.	30 –
Good picture **Noisy sound**	• The TV system setting is inappropriate. • PIP sound is selected when PIP is displayed.	• Display the "CH PRESET" menu and select the appropriate TV system ("TV SYS"). • Press SOUND or ◔ (KV-DR34M69 only).	29 13

continue

continued

Symptom	Possible cause	Solutions	Page
No picture **No sound** 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and VCR connections.	31
	• The TV is not turned on.	• Press I/⏻ (power). • Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	9 8
Good picture **No sound** 	• The volume level is too low.	• Press + to increase the volume level.	9
	• The sound is muted. • PIP sound is selected when PIP is displayed.	• Press 🔇 to cancel the muting. • Press SOUND or ◔ (KV-DR34M69 only).	9 13
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV. • Check the antenna setup. Contact a Sony dealer for advice.	– –
Double images or "ghosts" 	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna. • Use the fine tuning ("FINE") function.	– 30
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Use of a booster is inappropriate.	• Turn off or disconnect the booster if it is in use.	–
No color 	• The color level setting is too low.	• Display the "PICTURE" menu and select "ADJUST" of "PICTURE MODE", then adjust the "COLOR" level.	22
	• The color system setting is inappropriate.	• Display the "SETUP" menu and check the color system ("COLOR SYS") setting (usually set this to "AUTO").	26
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–

Symptom	Possible cause	Solutions	Page
Picture slant 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. • Display the "SETUP" menu and adjust "PIC ROTATION" so that the picture position is optimal.	– 26
Abnormal color patches 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.	–
TV cannot receive stereo broadcast sound.	• The stereo reception setting is inappropriate.	• Press A/B until "AUTO" appears on the screen.	16
or	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and on the wall.	31
Stereo broadcast sound switches on and off or is distorted.	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
"100" appears at the top of the screen and there is no Teletext display (KV-DR34M69 only).	• The channel carries no Teletext broadcast.	—	17
Teletext display is incomplete (snowy picture or double images) (KV-DR34M69 only).	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR, and at the wall.	31
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
	• Signal transmission is too low.	• Try using a booster. • Use the fine tuning ("FINE") function.	– 30

continue

continued

Symptom	Possible cause	Solutions	Page
The ⏻ (standby) indicator on your TV flashes red several times after every three seconds.	• Your TV's self-diagnosis function indicates the possible problems.	• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.	–
Cannot play shooting games.	• Some shooting games which involve pointing a light beam at the TV screen with an electronic gun or rifle cannot be used with your TV. For details, see the instruction manual supplied with the video game software.	—	–
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.	—	–
A small "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

■ Specifications

	KV-DR34M69	KV-DR29M63	Note
Power requirements	220-240 V AC, 50/60 Hz		
Power consumption (W)	Indicated on the rear of the TV		
Television system	B/G, I, D/K, M		
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43		
Stereo/Bilingual system	NICAM Stereo/Bilingual B/G, I; A2 Stereo/Bilingual B/G		
Teletext language	English, Arabic, French, Persian		KV-DR34M69 only
Channel coverage			
B/G	VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41		
I	UHF : B21 to B68 CATV : S01 to S03, S1 to S41		
D/K	VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39		
M	VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84		
(Antenna)	75-ohm external terminal		
Audio output (Speaker)	6W + 6W		
3D WOOFER	15W		
Number of terminal			
(Video)	Input: 4 Output: 1	Phono jacks; 1 Vp-p, 75 ohms	
(Audio)	Input: 4 Output: 1	Phono jacks; 500 mVrms	
(S Video)	Input: 2	Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms	
(Component Video)	Input: 1	Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative P_B/C_B: 0.7 Vp-p, 75 ohms P_R/C_R 0.7 Vp-p, 75 ohms Audio: 500 mVrms	
(Headphone)	Output: 1	Stereo minijack	
Picture tube	34 in.	29 in.	
Tube size (cm)	86	72	Measured diagonally
Screen size (cm)	80	68	Measured diagonally
Dimensions (w/h/d, mm)	894 × 690 × 569	786 × 596 × 514	
Mass (kg)	85	57	

Design and specifications are subject to change without notice.

Sony Thai Co., Ltd.
2126 Kromadit Building, New Petchburi Road,
Bangkapi, Huaykwang, Bangkok 10320

http://www.sony.net/
Sony Corporation

SONY

4-088-297-**11** (1)

Trinitron Color TV

Operating Instructions

GB

- Before operating the unit, please read this manual thoroughly and retain it for future reference.

FD Trinitron
WEGA

KV-DR34
KV-DR29

© 2002 Sony Corporation

M89
M39

WARNING

- Dangerously high voltages are present inside the TV.
- TV operating voltage: 110 – 240 V AC. (For New Zealand only: 220 - 240 V AC.)
- Do not plug in the power cord until you have completed making all other connections; otherwise a minimum leakage current might flow through the antenna and other terminals to ground.
- To avoid battery leakage and damage to the remote, remove the batteries from the remote if you are not going to use it for several days. If any liquid leaks from the batteries and touches your skin, immediately wash it away with water.

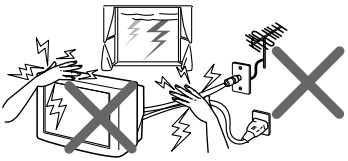

For your own safety, do not touch any part of the TV, the power cord and the antenna cable during lightning storms.

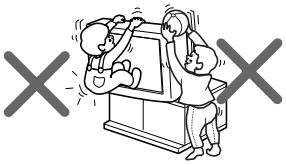

For children's safety, do not leave children alone with the TV. Do not allow children to climb onto it.

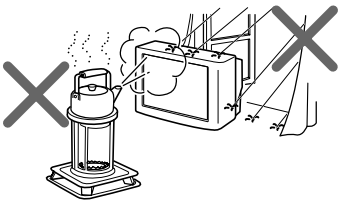

To prevent fire or shock hazard, do not expose the TV to rain or moisture.

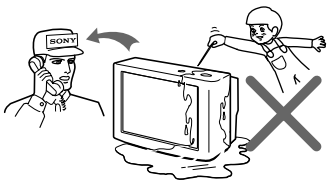

Do not operate the TV if any liquid or solid object falls into it. Have it checked immediately by qualified personnel only.

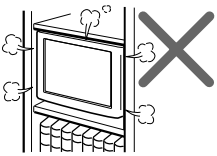

Do not block the ventilation openings of the TV. Do not install the TV in a confined space, such as a bookcase or built-in cabinet.

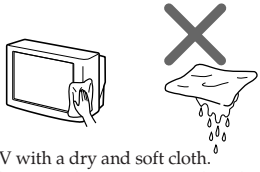

Clean the TV with a dry and soft cloth. Do not use benzine, thinner, or any other chemicals to clean the TV. Do not attach anything (e.g., adhesive tape, cellophane tape, glue) on the painted cabinet of the TV. Do not scratch the picture tube.

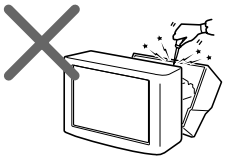

Do not open the cabinet and the rear cover of the TV as high voltages and other hazards are present inside the TV. Refer servicing and disposal of the TV to qualified personnel.

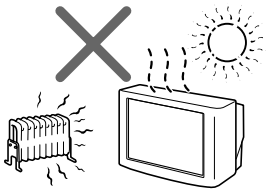

Your TV is recommended for home use only. Do not use the TV in any vehicle or where it may be subject to excessive dust, heat, moisture or vibrations.

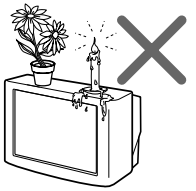

Do not place any objects on the TV.

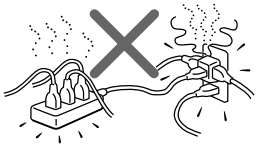

Do not plug in too many appliances to the same power socket. Do not damage the power cord.

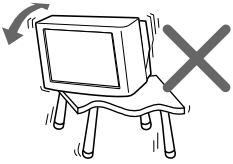

Install the TV on a stable TV stand and floor which can support the TV set weight. Ensure that the TV stand surface is flat and its area is larger than the bottom area of the TV.



Pull the power cord out by the plug. Do not pull the power cord itself. Even if your TV is turned off, it is still connected to the AC power source (mains) as long as the power cord is plugged in. Unplug the TV before moving it or if you are not going to use it for several days.

■ Securing the TV

To prevent the TV from falling, use the supplied screws, clamps and band to secure the TV.

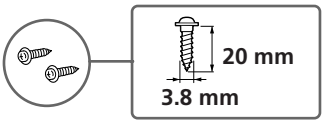

screws

clamps



band

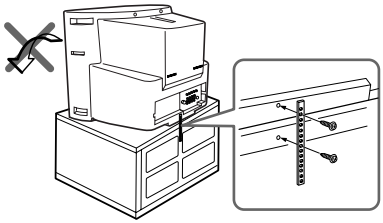

Screw the band to the TV stand and to the provided hole at the rear of your TV.

or

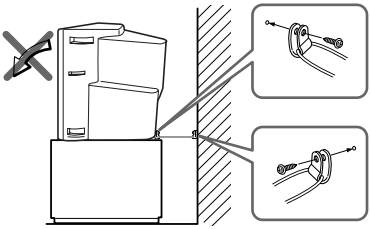

(1) Put a cord or chain through the clamps.
(2) Screw one clamp to a wall or pillar and the other clamp to the provided hole at the rear of your TV.

or

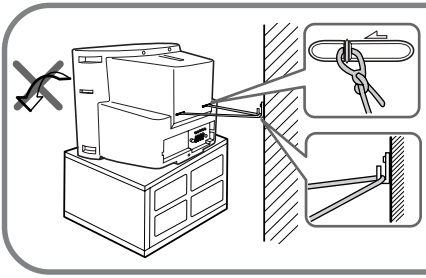

(1) Attach each end of a cord or chain to the provided holders at the rear of your TV.
(2) Securely fix the attached cord or chain to a wall or pillar using an attachment which can support the TV set weight.

Note

- Use only the supplied screws. Use of other screws may damage the TV.

Table of Contents

Installation

Getting Started **6**
Setting up your TV ("INITIAL SETUP") **7**

Overview of Controls

TV front and rear panels **8**
Remote control **9**

Advanced Operations

Selecting the picture and sound modes **11**
Viewing higher quality pictures with DRC-MF **12**
Viewing the picture in wide mode .. **12**
Watching Picture-in-Picture (PIP) ... **13**
Selecting a TV program using PIP .. **14**
Listening with surround sound **14**
Setting the timers **15**
Enjoying stereo or bilingual programs (KV-DR29M39 only) **16**
Viewing Teletext **17**

Menu Adjustment

Introducing the menu system **18**
Changing the "PICTURE" setting ... **21**
Changing the "SOUND" setting **23**
Changing the Picture-in-Picture ("PIP") setting **25**
Changing the "SETUP" setting **26**
Changing the Channel Preset ("CH PRESET") setting **28**

Additional Information

Connecting optional components ... **31**
Troubleshooting **33**
Specifications ..... **Back cover**

GB

■ Getting Started

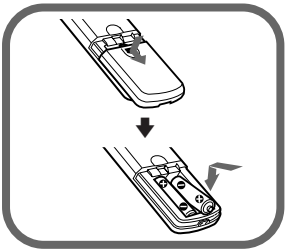

Step 1

Insert the batteries (supplied) into the remote.

Note

- Do not use old or different types of batteries together.

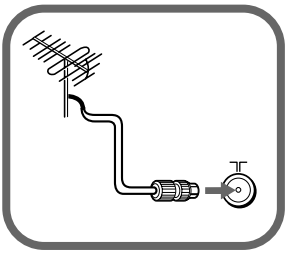

Step 2

Connect the antenna cable (not supplied) to ⅂⊢ (antenna input) at the rear of the TV.

Tip

- You can also connect your TV to other optional components (see page 31).

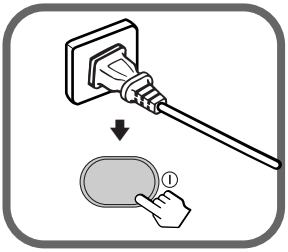

Step 3

Plug in the power cord, then press ⏻ on the TV to turn it on.

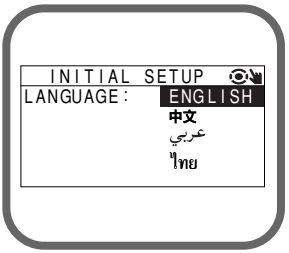

Step 4

Set up the TV by following the instructions of the "INITIAL SETUP"menu (see page 7).

■ Setting up your TV ("INITIAL SETUP")

When you turn on your TV for the first time, the "INITIAL SETUP" menu will appear. This menu allows you to change the menu language, adjust the picture position and preset the TV channels automatically.

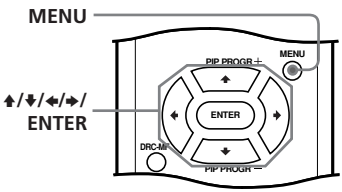

1 Press ↑ or ↓ to select the desired menu language (e.g.,"ENGLISH"), then press ENTER.

The selected menu language appears.

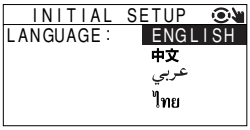

2 Press ↑ or ↓ (or ←/→), then press ENTER to adjust the picture position if it is not aligned to the TV screen.

The ⊞ or ⊟ icon on the screen flashes while adjusting.



3 Press ↑ or ↓ to select "YES", then press ENTER to preset the channels automatically (see page 28).

The screen will indicate automatic presetting is in progress.

To skip automatic channel presetting, select "NO", then press ENTER.

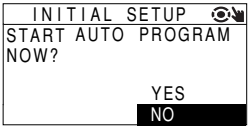

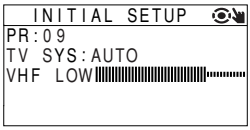

4 Press ↑ or ↓ to select "NO", then press ENTER. The "INITIAL SETUP" menu will not appear again the next time you turn on the TV by pressing ⏻.

To allow this menu to appear again, select "YES", then press ENTER.

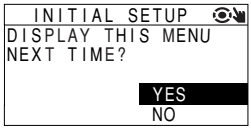

Tip

- You can immediately go to the end of the "INITIAL SETUP" menu by pressing MENU.
- You can also set up your TV using the menu system (see page 18).

■ TV front and rear panels

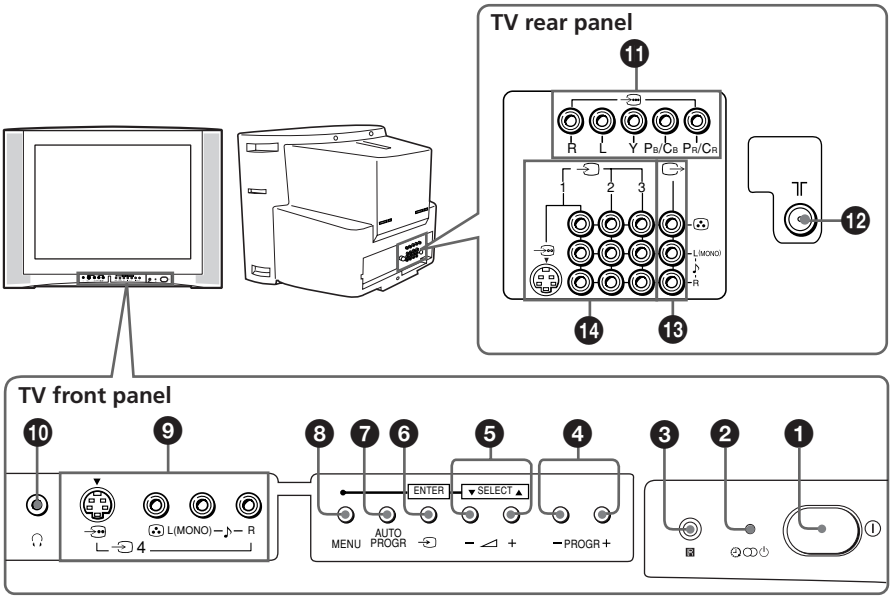

Button/Terminal	Function	Page
❶ ⏻	Turn off or turn on the TV.	–
❷ ⏻	Standby indicator.	–
❷ 🕘	Wake Up indicator.	15
❷ (KV-DR29M39 only)	Stereo/bilingual indicator.	16
❸	Remote control sensor.	–
❹ PROGR +/–	Select program number.	–
❺ +/–	Adjust volume.	–
❻	Select TV or video input.	–
❼ AUTO PROGR	Preset channels automatically.	–
Menu operations		
❺ SELECT ▼/▲	Select and adjust items	20
❻ ENTER	Confirm selected items	20
❽ MENU	Display or cancel the menu	20
❾ 4	Video input terminal 4.	31
❿	Headphone jack.	–
⓫	Component video input terminal.	32
⓬	Antenna input terminal.	31
⓭	Monitor output terminal.	31
⓮ 1, 2, 3	Video input terminal 1, 2, 3.	31

■ Remote control

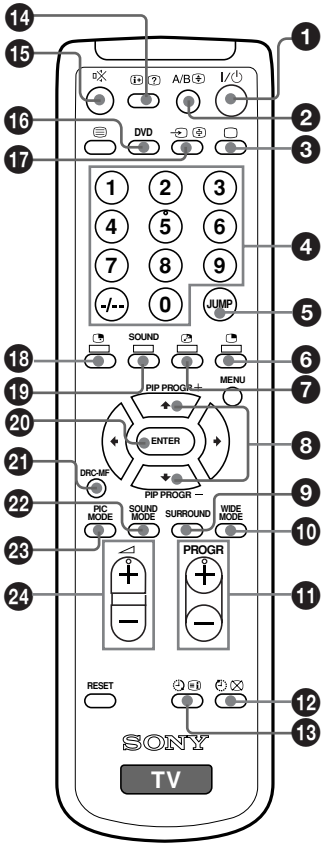

Button	Function	Page
❶ I/⏻	Turn off temporarily or turn on the TV.	–
❸ ▭	Display the TV input.	–
❹ 0 – 9, -/--	Input numbers.	–
❺ JUMP	Jump to previous program number.	–
❾ SURROUND	Select surround mode.	14
❿ WIDE MODE	Select wide-mode (16:9).	12
⓫ PROGR +/–	Select program number.	–
⓮ i+	Display on-screen information.	–
⓯ 🔇	Mute the sound.	–
⓰ DVD	Select component video input.	32
⓱ ▭	Select TV or video input.	31
㉑ DRC-MF	Select DRC-MF mode.	12
㉒ SOUND MODE	Select sound mode.	11
㉓ PIC MODE	Select picture mode.	11
㉔ ◿ +/–	Adjust volume.	–
Timer operations		
⓬ ⏲	Set TV to turn off automatically.	15
⓭ ⏲	Set TV to turn on automatically.	15
PIP operations (yellow label)		
❻ ▭	Display a sub screen.	13
❼ ▭	Swap main and sub screens.	13
❽ PIP PROGR +/ PIP PROGR –	Display and change programs in the sub screen.	13,14
⓲ ▭	Select a video input in the sub screen.	13
⓳ SOUND	Swap sound between main and sub screen.	13
⓴ ENTER	Change sub screen to main screen.	14
Stereo/bilingual operations (KV-DR29M39 only)		
❷ A/B	Select stereo/bilingual mode.	16

continue

continued

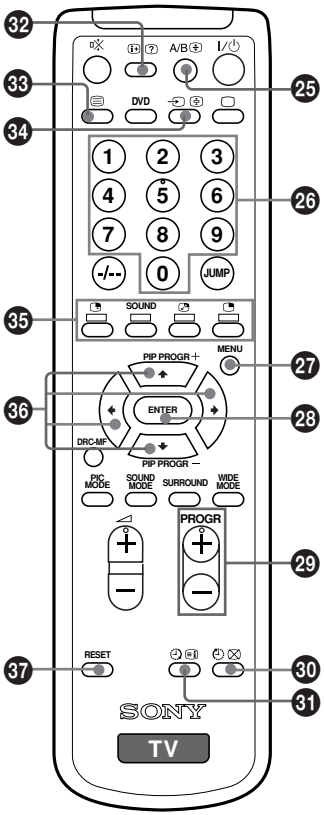

Button	Function	Page
Menu operations		
27 MENU	Display or cancel the menu.	20
28 ENTER	Confirm selected items.	20
36 ↑, ↓, ←, →	Select and adjust items.	20
Teletext operations (green label)		
25 ⊕	Enlarge the Teletext display.	17
26 0 – 9	Input Teletext page number	17
29 PROGR +/–	Display the next or previous page.	17
30 ⊠	Show TV screen while waiting for Teletext page.	17
31 ⓘ	Display Teletext service contents.	17
32 ?	Reveal concealed information.	17
33 ☰	Display Teletext broadcast.	17
34 ⊟	Stop Teletext display from scrolling.	17
35 ▬ (red, green, yellow, blue)	Access a FASTEXT menu.	17
37 RESET	Set TV to factory setting.	33

Selecting the picture and sound modes

You can select picture and sound modes and adjust the setting to your preference in the “PERSONAL” option.

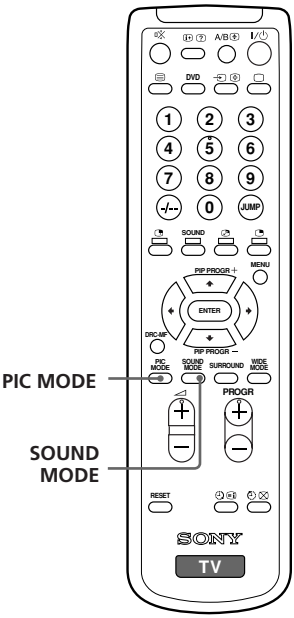

Selecting the picture mode

Press PIC MODE to select the desired picture mode.

Select	To
“DYNAMIC”	view high contrast pictures.
“STANDARD”	view normal pictures.
“HI-FINE”	view higher density pictures with mild contrast.
“PERSONAL”	receive the last adjusted picture setting from the “ADJUST” option in the “PICTURE” menu (see page 22).

Selecting the sound mode

Press SOUND MODE to select the desired sound mode.

Select	To
“♪ DYNAMIC”	listen to dynamic and clear sound that emphasizes both the low and high tones.
“♪ DRAMA”	listen to sound that emphasizes voice and high tones.
“♪ SOFT”	listen to soft sound.
“♪ PERSONAL”	receive the last adjusted sound setting from the “ADJUST” option in the “SOUND” menu (see page 24).

■ Viewing higher quality pictures with DRC-MF

The Digital Reality Creation-Multi Function (DRC-MF) feature allows you to enjoy higher quality pictures on your TV. You can use the DRC-MF button to select "DRC1250" or "DRC PROGRESSIVE".

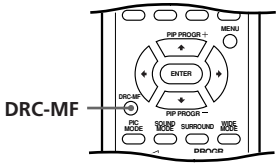

Select	To
"DRC1250"	view super real (higher density) pictures.
"DRC PROGRESSIVE"	reduce jitter of any small areas or scanning lines (e.g., letters or the edge of objects) on the screen.

Note

- The DRC-MF mode is not selectable when the "GAME MODE" or Picture-in-Picture ("PIP") mode is turned on.

The DRC-MF logo (DRC-MF Digital Reality Creation) and "DRC-MF" are trademarks of Sony Corporation.

■ Viewing the picture in wide mode

When receiving a wide-mode (16:9) signal, the picture will appear "squeezed" (compressed) on your screen. Use the WIDE MODE button to view the picture with the optimal effect.

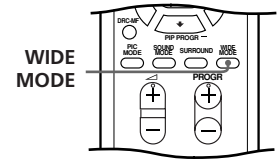

Select	To
"ON"	view the picture in wide-mode (16:9).
"OFF"	cancel wide-mode (16:9).

■ Watching Picture-in-Picture (PIP)

With the PIP feature, you can display two different TV programs or video input at the same time by using the ◔ button.

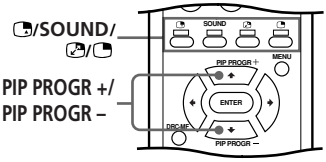

To	Press
Display a sub screen	◔. To cancel the sub screen, press the button again.
Change a program number in the sub screen	PIP PROGR + or PIP PROGR –.
Select a video input in the sub screen	◔.
Swap pictures between the main and sub screens	◔.
Swap sound between the main and sub screens A "♪" symbol will appear next to the program number or video input display to indicate which screen you are hearing.	SOUND.

Notes

- The DRC-MF mode is not selectable when PIP is turned on.
- The picture and sound from the ⊃ (monitor output) terminals will always be from the main screen, even when you select the sub screen sound by pressing SOUND (see page 31).

■ Selecting a TV program using PIP

You can select your desired TV program directly from the PIP sub screen by using the PIP PROGR +/– buttons.

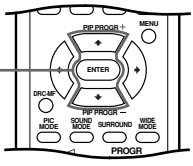

1 Press PIP PROGR +/– until the desired program appears in the sub screen.

2 Press ENTER to change the sub screen program to the main screen.

■ Listening with surround sound

You can use the SURROUND button to listen to the sound effects of a concert hall or movie theater.

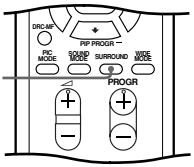

Select	To
"TruSurround"	listen to the surround sound that spreads out to the rear of a room.
"SIMULATED"	listen to monaural sound with a stereo-like effect.
"OFF"	cancel surround sound.

The surround of your TV is categorized as TruSurround.

TruSurround™ is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS and TruSurround are incorporated under license from SRS Labs, Inc. and are protected under United States Patent Nos. 4,748,669 and 4,841,572 with numerous additional issued and pending foreign patents.

■ Setting the timers

You can set your TV to turn on and off automatically by using the WAKE UP and SLEEP timers respectively.

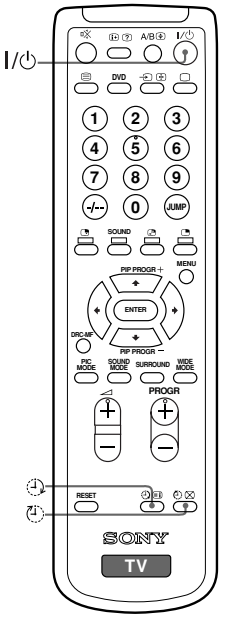

Setting the Wake Up timer

1 Press ⏲ until the desired period of time appears on the screen.

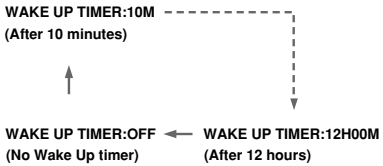

The Wake Up timer starts immediately after you have set it.

2 Select the program number or video input you want to wake up to.

3 Press I/⏻, or set the Sleep timer if you want the TV to turn off automatically.

The ⏲ indicator on the TV lights up orange when the TV goes into standby mode.

Setting the Sleep timer

Press ⏲ until the desired period of time appears on the screen.

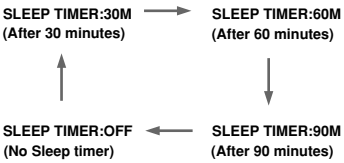

The Sleep timer starts immediately after you have set it.

Notes

- You can also cancel the Wake Up and Sleep timers by turning off the TV's main power.
- If no buttons are pressed for more than two hours after the TV is turned on using the Wake Up timer, the TV automatically goes into standby mode.

■ Enjoying stereo or bilingual programs

▶ KV-DR29M39 only

You can enjoy stereo sound or bilingual programs of NICAM and A2 stereo systems by using the A/B button.

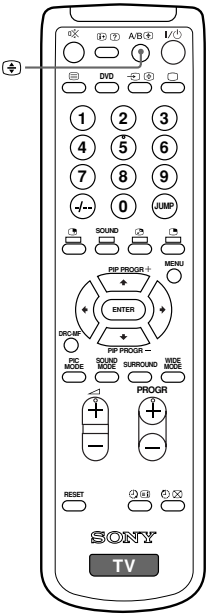

When receiving a NICAM program

Broadcasting	On-screen display (Selected sound)
NICAM stereo	NICAM (Stereo sound) → MONO (Regular sound)
NICAM bilingual	NICAM MAIN (Main sound) → NICAM SUB (Sub sound) → MONO (Regular sound)
NICAM monaural	NICAM MAIN (Main sound) → MONO (Regular sound)

When receiving an A2 program

Broadcasting	On-screen display (Selected sound)
A2 stereo	STEREO (Stereo sound) → MONO (Regular sound)
A2 bilingual	MAIN (Main sound) → SUB (Sub sound)

Notes

- If the stereo sound is noisy when receiving a stereo program, select “MONO”. The sound becomes monaural, but the noise is reduced.
- If the sound is distorted when receiving a monaural program through ⅂ (antenna input), press A/B repeatedly until “MONO” appears on the screen. To cancel the monaural sound setting, press A/B again until “AUTO” appears on the screen.

Viewing Teletext

Some TV stations broadcast an information service called Teletext which allows you to receive various information, such as stock market reports and news.

You can use the buttons on the remote to view Teletext.

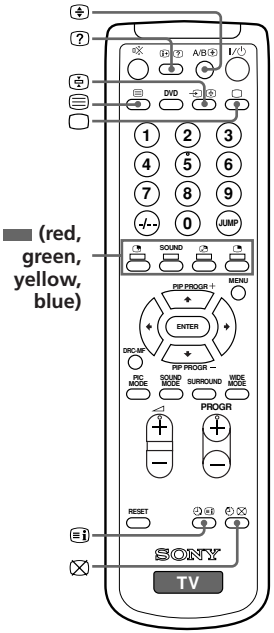

To	Do this
display a Teletext page on the TV picture	Press ☰. Each time you press ☰, the screen changes as follows: Teletext → Teletext and TV → TV. If there is no Teletext broadcast, "100" is displayed at the top left corner of the screen.
check the contents of a Teletext service	Press ⓘ. An overview of the Teletext contents, including page numbers, appears on the screen.
select a Teletext page	Press the number buttons to enter the three-digit page number of the desired Teletext page. If you make a mistake, reenter the correct page number. To access the next or previous page, press PROGR +/–.
hold (pause) a Teletext display	Press ⊜ to display the symbol "⊜" at the top left corner of the screen. To resume normal Teletext viewing, press ⊜ or ☰.
reveal concealed information (e.g., an answer to a quiz)	Press ?. To conceal the information, press the button again.
enlarge the Teletext display	Press ⊕. Each time you press ⊕, the Teletext display changes as follows: Enlarge upper half → Enlarge lower half → Normal size.
stand by for a Teletext page while watching a TV program	1 Enter the Teletext page number that you want to refer to, then press ⊠. 2 When the page number is displayed, press ☰ to show the text.
select a FASTEXT menu or the colored boxes	Press ■ (red, green, yellow and blue) that corresponds to the desired menu or page number.
turn off Teletext	Press ▭.

Note

- The FASTEXT feature can be used only when the FASTEXT broadcast is available.

■ Introducing the menu system

The MENU button lets you open a menu and change the settings of your TV. The following is an overview of the menu system.

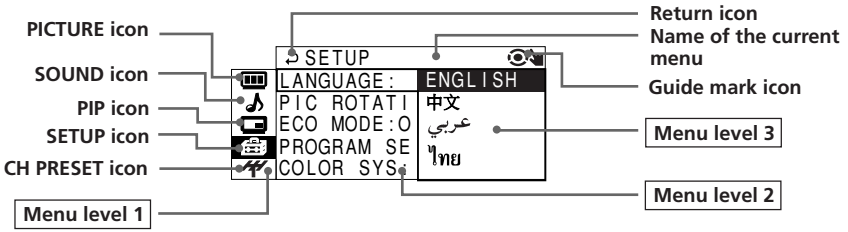

Level 1	Level 2	Level 3/Function	Page
"PICTURE"	"DRC-MF"	Select the "DRC-MF" mode: "DRC1250" → "PROGRESSIVE"	21
	"PICTURE MODE"	Select the picture mode: "DYNAMIC" → "STANDARD" → "HI-FINE" → "PERSONAL" → "ADJUST"	
	"ADJUST"	Adjust the "PERSONAL" option: "PICTURE" → "COLOR" → "BRIGHT" → "HUE" → "SHARP"	
	"3D-NR"	Reduce picture noise: "ON" → "OFF"	
	"WIDE MODE"	Change the picture size.	
	"GAME MODE"	Adjust the picture settings for video games.	
"SOUND"	"SOUND MODE"	Select the sound mode: "DYNAMIC" → "DRAMA" → "SOFT" → "PERSONAL" → "ADJUST"	23
	"ADJUST"	Adjust the "PERSONAL" option: "BASS" → "TREBLE" → "BALANCE" → "BBE"*	
	"SURROUND"	Select the "SURROUND" mode: "TruSurround" → "SIMULATED" →"OFF"	
	"INTELLIGENT VOL"	Adjust volume automatically.	
"PIP"	"POSITION"	Change the position of the sub screen.	25
	"PIP"	Display a sub screen within the main picture.	
	"SWAP"	Exchange pictures between main screen and sub screen.	

Level 1	Level 2	Level 3/Function	Page
“SETUP”	“LANGUAGE”	Change the menu language: “ENGLISH” → “中文”(Chinese) → “عربي”(Arabic) → “ไทย”(Thai)	26
	“PIC ROTATION”	Adjust the picture position.	
	“ECO MODE”	Reduce power consumption of your TV.	
	“PROGRAM SETUP”	Adjust each program number settings.	
	“COLOR SYS”	Select the color system: “AUTO” →“ PAL” → “SECAM” → “NTSC3.58” → “NTSC4.43”	
“CH PRESET”	“AUTO PROGRAM”	Preset channels automatically.	28
	“MANUAL PROGRAM”	Preset channels manually.	
	“TV SYS”	Select the TV system: “B/G” → “I” → “D/K” → “M”	

* The BBE is manufactured by Sony Corporation under license from BBE Sound, Inc. It is covered by U.S. Patent No. 4,638,258 and No. 4,482,866. The word “BBE” and the BBE symbol are the trademarks of BBE Sound, Inc.

continue

continued

How to use the menu

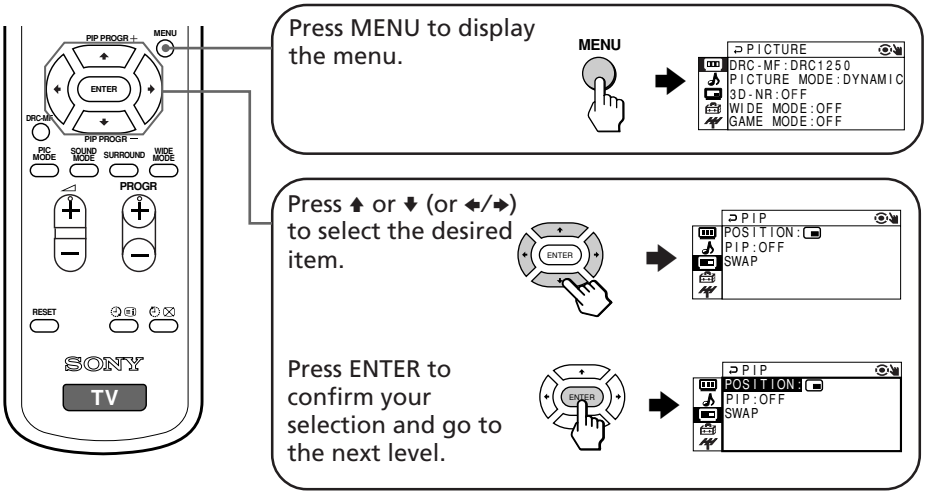

Other menu operations

To	Press
Adjust the setting value	↑, ↓, ← or →.
Move to the next/previous menu level	← or →.
Cancel the menu	MENU.

Tips

- If you want to exit from Menu level 2 to Menu level 1, press ↑ or ↓ until the return icon (⮌) is highlighted, then press ENTER.
- Some of the menu items can be operated directly using the remote buttons.
- The MENU, ENTER, and SELECT ▼/▲ buttons on the TV can also be used for the operations above.

Front of TV

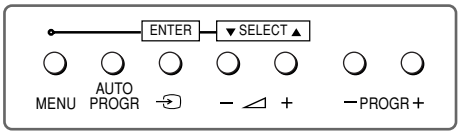

■ Changing the “PICTURE” setting

The “PICTURE” menu allows you to adjust the picture settings.

1 Press MENU.

2 Make sure the “PICTURE” icon ( ) is selected, then press ENTER.

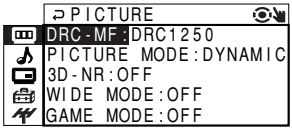

3 Press ↑ or ↓ to select the desired item (e.g., “DRC-MF”), then press ENTER.

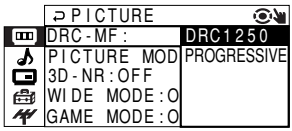

Select	To
“DRC-MF”	choose either “DRC1250” or “PROGRESSIVE” (see page 12).
“PICTURE MODE”	choose either “DYNAMIC”, “STANDARD”, “HI-FINE”, “PERSONAL”*, or “ADJUST” (see page 11).
“3D-NR”	adjust picture signal automatically to reduce noise. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“WIDE MODE”	choose either “ON” or “OFF” (see page 12).
“GAME MODE”	adjust the picture setting that is suitable to view video games. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted picture settings from the “ADJUST” option (see page 22).

Notes

- “GAME MODE” is available only when receiving signals through (video input), (S video input), or (component video input).
- The DRC-MF mode is not selectable when GAME MODE is turned on.

continue

continued

Adjusting the "ADJUST" items under "PICTURE MODE"

1 Press ↑ or ↓ to select the desired item (e.g.,"COLOR"), then press ENTER.

2 Adjust the value according to the following table, then press ENTER.

For	Press ↓ or ← to	Press ↑ or → to
"PICTURE"	decrease picture contrast.	increase picture contrast.
"COLOR"	decrease color intensity.	increase color intensity.
"BRIGHT"	darken the picture.	brighten the picture.
"HUE"	increase red picture tones.	increase green picture tones.
"SHARP"	soften the picture.	sharpen the picture.

Notes

- "HUE" can be adjusted for the NTSC color system only.
- Reducing sharpness ("SHARP") can also reduce picture noise.

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

■ Changing the “SOUND” setting

The “SOUND” menu allows you to adjust the sound settings.

1 Press MENU.

2 Press ↑ or ↓ to select the “SOUND” icon (♪), then press ENTER.

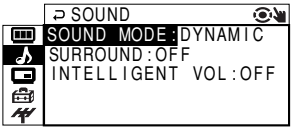

3 Press ↑ or ↓ to select the desired item (e.g., “SOUND MODE”), then press ENTER.

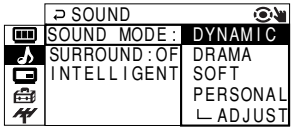

Select	To
“SOUND MODE”	choose either “DYNAMIC”, “DRAMA”, “SOFT”, “PERSONAL”*, or “ADJUST” (see page 11).
“SURROUND”	choose either “TruSurround”, “SIMULATED” or “OFF” (see page 14).
“INTELLIGENT VOL”	adjust the volume of all program numbers and video inputs automatically. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.

* When the “PERSONAL” mode is selected, you can receive the last adjusted sound settings from the “ADJUST” option (see page 24).

continue

continued

Adjusting the "ADJUST" items under "SOUND MODE"

1 Press ↑ or ↓ to select the desired item (e.g., "BALANCE"), then press ENTER.

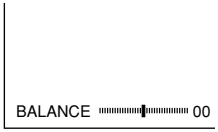

2 Adjust the value according to the following table, then press ENTER .

For	Press ↓ or ← to	Press ↑ or → to
"BASS"	decrease the bass.	increase the bass.
"TREBLE"	decrease the treble.	increase the treble.
"BALANCE"	increase the left speaker's volume.	increase the right speaker's volume.
"BBE"	select "HIGH" for higher enhancement of sound clarity; select "LOW" for lower enhancement of sound clarity; select "OFF" to cancel BBE sound.	

3 Repeat the above steps to adjust other items.

The adjusted settings will be received when you select "PERSONAL".

■ Changing the Picture-in-Picture ("PIP") setting

The "PIP" menu allows you to display a sub screen, change the sub screen position and exchange pictures between the main and sub screens.

1 Press MENU.

2 Press ↑ or ↓ to select the "PIP" icon (), then press ENTER.

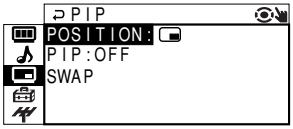

3 Press ↑ or ↓ to select the desired item (e.g., "POSITION"), then press ENTER.

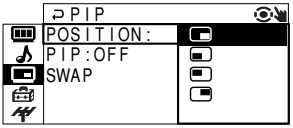

Select	To
"POSITION"	change the position of the sub screen. Press ↑ or ↓ to select the desired position, then press ENTER . 
"PIP"	display a sub screen. Press ↑ or ↓ to select "ON", then press ENTER . To cancel, press or select "OFF", then press ENTER .
"SWAP"	exchange pictures between the main screen and sub screen.

■ Changing the “SETUP” setting

The “SETUP” menu allows you to change the menu language, adjust the picture position, reduce your TV power consumption, set up your program numbers and select the color system.

1 Press MENU.

2 Press ↑ or ↓ to select the “SETUP” icon (), then press ENTER.

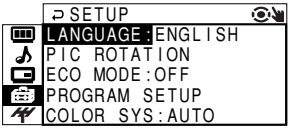

3 Press ↑ or ↓ to select the desired item (e.g., “COLOR SYS”), then press ENTER.

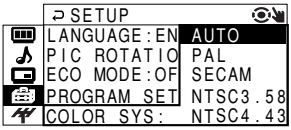

Select	To
“LANGUAGE”	change the menu language. Press ↑ or ↓ to select either “ENGLISH”, “中文” (Chinese), “عربي” (Arabic), or “ไทย” (Thai) then press ENTER. The selected menu language appears.
“PIC ROTATION”	adjust the picture position when it is not aligned with the TV screen. Press ↑ , → , ↓ or ← to adjust the picture position, then press ENTER.
“ECO MODE”	reduce power consumption of your TV to save energy. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER. When you press or turn on the TV, ECO MODE ( ) symbol will appear on the screen for about 40 seconds.
“PROGRAM SETUP”	adjust each channel settings (see **Adjusting each program number settings (“PROGRAM SETUP”)** on page 27).
“COLOR SYS”	Select the color system. Normally, set this to “AUTO”.

Adjusting each program number settings (“PROGRAM SETUP”)

1 Select “PROGRAM SETUP” from the “SETUP” menu.

2 Select “PR” and press ENTER. Press ↑ or ↓ to select the desired program number you want to adjust, then press ENTER.

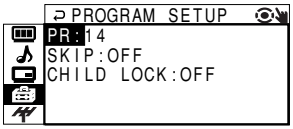

3 Press ↑ or ↓ to select the desired item (e.g., “SKIP”), then press ENTER.

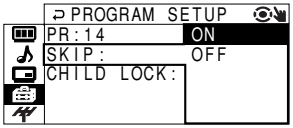

Select	To
“PR”	select the desired program number.
“SKIP”	skip unwanted or unused program number. Press ↑ or ↓ to select “ON”, then press ENTER. To cancel, select “OFF”, then press ENTER.
“CHILD LOCK”	prevent children from watching this selected program number. Press ↑ or ↓ to select “ON”, then press ENTER. The lock symbol (🔒) appears on the screen. To cancel, select “OFF”, then press ENTER If you preset a locked program number, that program number will be unlocked automatically.

4 To continue adjusting other program numbers, press ↑ or ↓ to select “PR”, then repeat step 2 and 3.

■ Changing the Channel Preset ("CH PRESET") setting

The "CH PRESET" menu allows you to preset channels automatically, manually preset channels and select the TV system.

1 Press MENU.

2 Press ↑ or ↓ to select the "CH PRESET" icon (), then press ENTER.

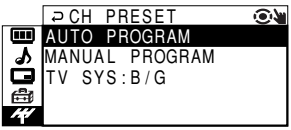

3 Press ↑ or ↓ to select the desired item (e.g., "AUTO PROGRAM"), then press ENTER.

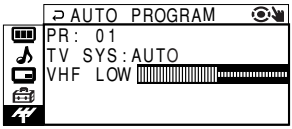

Select	To
"AUTO PROGRAM"	preset channels automatically.
"MANUAL PROGRAM"	manually preset desired channels and channels that cannot be preset automatically (see **Presetting channels manually** on page 29).
"TV SYS"	select the TV system. Press ↑ or ↓ to select either "B/G", "I", "D/K" or "M", then press ENTER.

Presetting channels manually

1 After selecting "MANUAL PROGRAM", select the program number to which you want to preset a channel.

(1) Make sure "PR" is selected, then press ENTER.

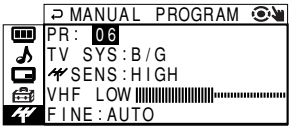

(2) Press ↑ or ↓ until the program number you want to preset (e.g., program number "10") appears on the menu, then press ENTER.

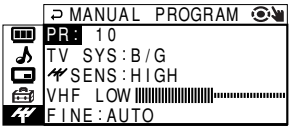

Tip

- You can also select the program number with the PROGR +/– or number buttons.

2 Select the desired channel.

(1) Press ↑ or ↓ to select either "VHF LOW", "VHF HIGH", or "UHF", then press ENTER.

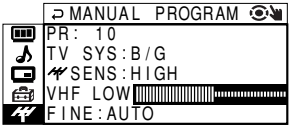

(2) Press ↑ or ↓ until the desired channel's broadcast appears on the TV screen, then press ENTER.

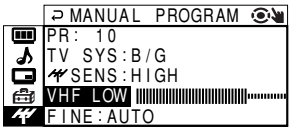

3 If the sound of the desired channel is abnormal, select the appropriate TV system.

(1) Press ↑ or ↓ to select "TV SYS", then press ENTER.

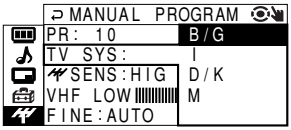

(2) Press ↑ or ↓ until the sound becomes normal, then press ENTER.

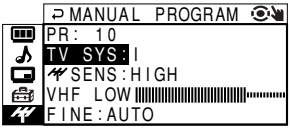

continue

continued

4 If you are not satisfied with the picture and sound quality, you may be able to improve them by using the "FINE" tuning feature.

(1) Press ↑ or ↓ to select "FINE", then press ENTER.

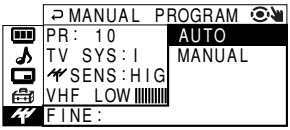

(2) Press ↑ or ↓ to select "MANUAL", then press ENTER.

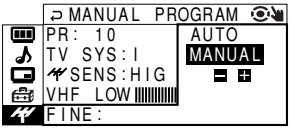

(3) Press ↑, ↓, ← or → until the picture and sound quality are optimal, then press ENTER.
The + or – icon on the menu flashes while tuning.

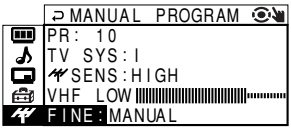

5 If the TV signal is too strong and the picture is distorted, you can adjust the TV reception sensitivity.

(1) Press ↑ or ↓ to select "SENS", then press ENTER.

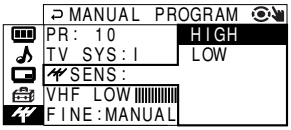

(2) Press ↑ or ↓ to select "LOW", then press ENTER.

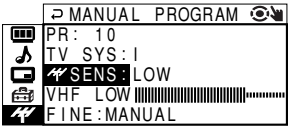

Note

- If you connect a VCR to ⅂ (antenna input), preset the signal output from the VCR to the program number 0 on the TV.

■ Connecting optional components

Connecting to the video input terminal (⇦)

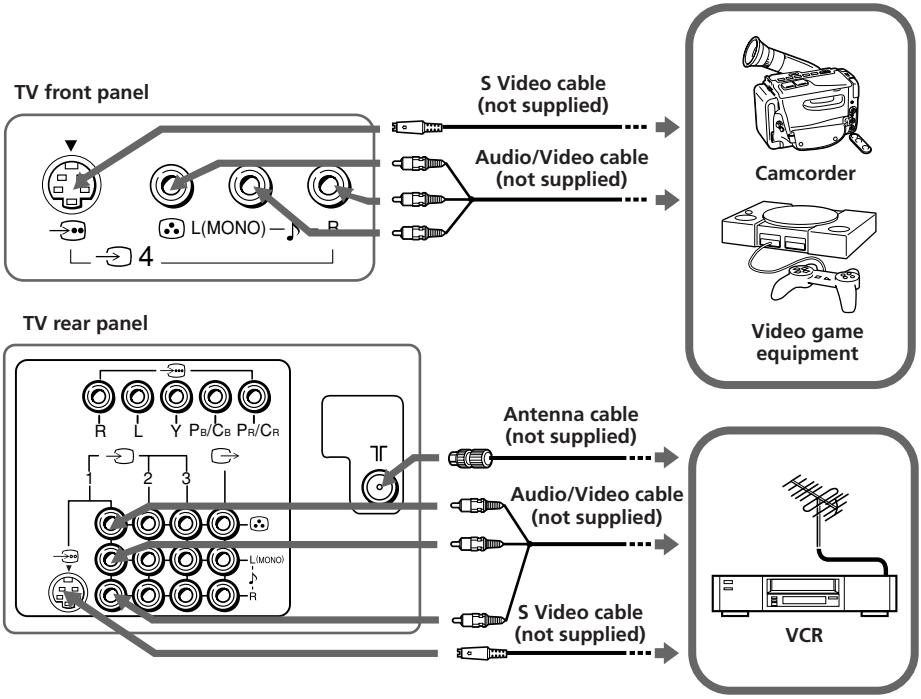

Connecting to the monitor output terminal (⇨)

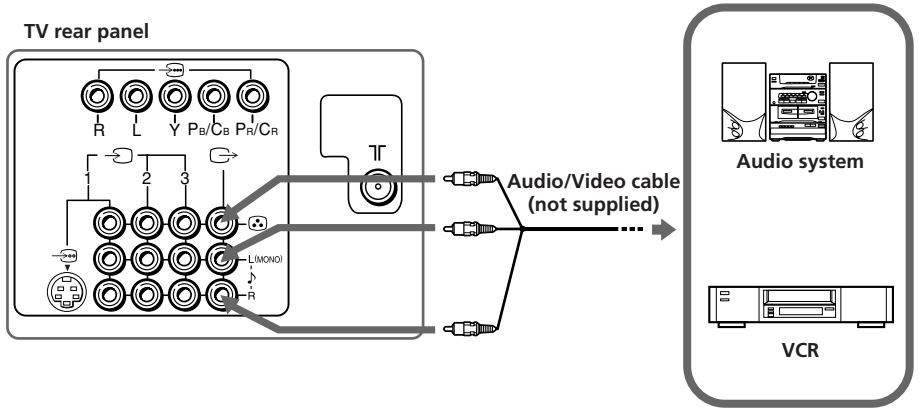

continue

continued

Connecting a DVD player to the component video input terminal ( )

1 Using an audio cable, connect R and L under (component video input) on your TV to the LINE OUT, AUDIO R and L output connectors on your DVD player.

2 Using a component video cable, connect Y, P_B/C_B, and P_R/C_R under (component video input) on your TV to the COMPONENT VIDEO OUT Y, C_B, and C_R output connectors on your DVD player.

3 Press DVD on the remote to watch the (component video input) and "DVD" will appear on your screen.

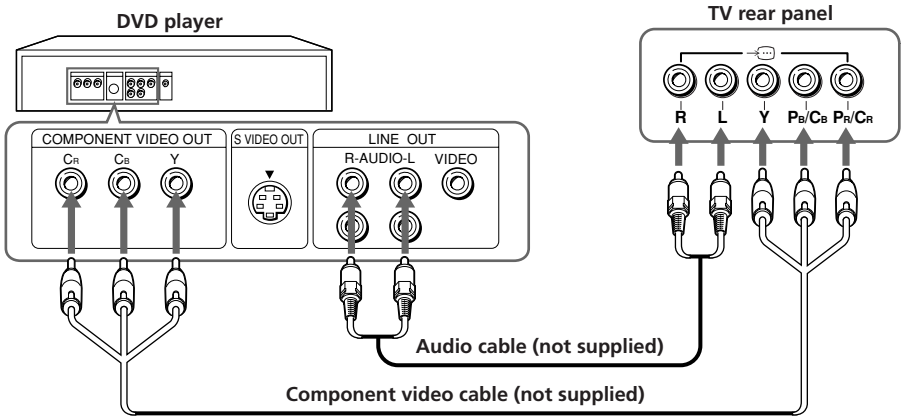

Notes

- Some DVD player terminals may be labeled differently:

Connect	To (on the DVD player)
Y (green)	Y
P_B/C_B (blue)	C_B, P_B, C_b or B-Y
P_R/C_R (red)	C_R, P_R, C_r or R-Y

- When both (S video) and (video) for 1 or 4 are connected at the same time, (S video) is automatically selected. To view (video), disconnect the S video cable.
- If you select "DVD" on your TV screen, the signal from the (monitor output) will not be output properly. This does not indicate a malfuncion.
- When receiving a progressive signal through the (component video input), "PIP" is not available, and "DRC-MF" and "GAME MODE" are not selectable.

■ Troubleshooting

If you have any problem while viewing your TV, you can either use the Reset function or check the Troubleshooting guide below. If the problem persists, contact your Sony dealer.

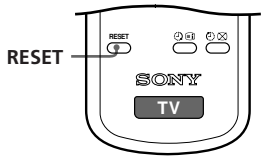

Reset function

Press the RESET button on your remote control. Your TV will go blank for about half a second then the picture will reappear with "RESET" displayed on your TV screen for about 10 seconds.

Pressing RESET will set your TV to the factory setting, but certain problems may be solved.

Troubleshooting guide

Symptom	Possible cause	Solutions	Page
Snowy picture  **Noisy sound**	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and at the wall.	31
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Channel presetting is inappropriate or incomplete.	• Display the "CH PRESET" menu and select "MANUAL PROGRAM" to preset the channel again.	29
	• Signal transmission is low.	• Try using a booster.	–
Distorted picture **Noisy sound**	• Broadcast signals are too strong.	• Display the "CH PRESET" menu and select "MANUAL PROGRAM". Then, select "SENS: LOW".	30
		• Turn off or disconnect the booster if it is in use.	–
Good picture **Noisy sound**	• The TV system setting is inappropriate.	• Display the "CH PRESET" menu and select the appropriate TV system ("TV SYS").	29
	• PIP sound is selected when PIP is displayed.	• Press SOUND or .	13

continue

continued

Symptom	Possible cause	Solutions	Page
No picture 	• The power cord, antenna or VCR is not connected.	• Check the power cord, antenna and VCR connections.	31
	• The TV is not turned on.	• Press I/⏻ (power).	9
No sound 		• Press ⏻ (main power) on the TV to turn off the TV for about five seconds, then turn it on again.	8
Good picture 	• The volume level is too low.	• Press + to increase the volume level.	9
	• The sound is muted.	• Press 🔇 to cancel the muting.	9
No sound 	• PIP sound is selected when PIP is displayed.	• Press SOUND or ◔.	13
Dotted lines or stripes 	• There is local interference from cars, neon signs, hair dryers, power generators, etc.	• Do not use a hair dryer or other equipment near the TV.	–
		• Check the antenna setup. Contact a Sony dealer for advice.	–
Double images or "ghosts" 	• Broadcast signals are reflected by nearby mountains or buildings.	• Use a highly directional antenna.	–
		• Use the fine tuning ("FINE") function.	30
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
	• Use of a booster is inappropriate.	• Turn off or disconnect the booster if it is in use.	–
No color 	• The color level setting is too low.	• Display the "PICTURE" menu and select "ADJUST" of "PICTURE MODE", then adjust the "COLOR" level.	22
	• The color system setting is inappropriate.	• Display the "SETUP" menu and check the color system ("COLOR SYS") setting (usually set this to "AUTO").	26
	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–

Symptom	Possible cause	Solutions	Page
Picture slant 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other electrical equipment away from the TV. • Display the "SETUP" menu and adjust "PIC ROTATION" so that the picture position is optimal.	– 26
Abnormal color patches 	• The magnetic disturbance from external speakers or other equipment, or the direction of the earth's magnetic field may affect the TV.	• Keep external speakers or other equipment away from the TV. Do not move the TV while the TV is turned on. Press ⏻ (main power) on the TV to turn off the TV for about 15 minutes, then turn it on again to demagnetize the TV.	–
TV cannot receive stereo broadcast sound.	• The stereo reception setting is inappropriate.	• Press A/B until "AUTO" appears on the screen.	16
or	• The connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR and on the wall.	31
Stereo broadcast sound switches on and off or is distorted. (KV-DR29M39 only)	• The antenna setup is inappropriate.	• Check the antenna setup. Contact a Sony dealer for advice.	–
"100" appears at the top of the screen and there is no Teletext display.	• The channel carries no Teletext broadcast.	—	17
Teletext display is incomplete (snowy picture or double images).	• Connection is loose or the cable is damaged.	• Check the antenna cable and connection on the TV, VCR, and at the wall.	31
	• The antenna direction is inappropriate.	• Adjust the antenna direction. Contact a Sony dealer for advice.	–
	• Signal transmission is too low.	• Try using a booster. • Use the fine tuning ("FINE") function.	– 30

continue

continued

Symptom	Possible cause	Solutions	Page
The ⏻ (standby) indicator on your TV flashes red several times after every three seconds.	• Your TV's self-diagnosis function indicates the possible problems.	• Count the number of times the ⏻ (standby) indicator flashes. Press ⏻ (main power) to turn off your TV. Contact your nearest Sony service center.	–
Cannot play shooting games.	• Some shooting games which involve pointing a light beam at the TV screen with an electronic gun or rifle cannot be used with your TV. For details, see the instruction manual supplied with the video game software.	—	–
TV cabinet creaks.	• Changes in room temperature sometimes make the TV cabinet expand or contract, causing a noise. This does not indicate a malfunction.	—	–
A small "boom" sound is heard when the TV is turned on.	• The TV's demagnetizing function is working. This does not indicate a malfunction.	—	–

■ Specifications

	KV-DR34M89	KV-DR29M89 KV-DR29M39	Note
Power requirements	110-240 V AC, 50/60 Hz		
	220-240 V AC, 50/60 Hz		New Zealand only
Power consumption (W)	Indicated on the rear of the TV		
Television system	B/G, I, D/K, M		
Color system	PAL, PAL 60, SECAM, NTSC3.58, NTSC4.43		
Stereo/Bilingual system	NICAM Stereo/Bilingual B/G, I; A2 Stereo/Bilingual B/G		KV-DR29M39 only
Teletext language	English, Arabic, French		
Channel coverage **B/G**	VHF : E2 to E12 UHF : E21 to E69 CATV : S01 to S03, S1 to S41		
	VHF : 1 to 11 UHF : 21 to 69 CATV : S01 to S03, S1 to S41		New Zealand only
I	UHF : B21 to B68 CATV : S01 to S03, S1 to S41		
D/K	VHF : C1 to C12, R1 to R12 UHF : C13 to C57, R21 to R60 CATV : S01 to S03, S1 to S41, Z1 to Z39		
M	VHF : A2 to A13 UHF : A14 to A79 CATV : A-8 to A-2, A to W+4, W+6 to W+84		
⅂ (Antenna)	75-ohm external terminal		
Audio output (Speaker)	6W + 6W		
3D WOOFER	15W		
Number of terminal			
(Video)	Input: 4 Output: 1	Phono jacks; 1 Vp-p, 75 ohms	
♪ (Audio)	Input: 4 Output: 1	Phono jacks; 500 mVrms	
(S Video)	Input: 2	Y: 1 Vp-p, 75 ohms, unbalanced, sync negative C: 0.286 Vp-p, 75 ohms	
(Component Video)	Input: 1	Phono jacks; Y: 1 Vp-p, 75 ohms, sync negative P_B/C_B: 0.7 Vp-p, 75 ohms P_R/C_R 0.7 Vp-p, 75 ohms Audio: 500 mVrms	
(Headphone)	Output: 1	Stereo minijack	
Picture tube	34 in.	29 in.	
Tube size (cm)	86	72	Measured diagonally
Screen size (cm)	80	68	Measured diagonally
Dimensions (w/h/d, mm)	894 × 690 × 569	786 × 596 × 514	
Mass (kg)	85	57	

Design and specifications are subject to change without notice.

http://www.sony.net/
Sony Corporation